

Jake  
HAS A COPY

Here is an updated list of errors shown on keypad display of the Senior Swing control:

- Er04 - Voltage Monitor was high during Opening hardware check.
- Er05 - Master or slave CPU has oscillator running at a harmonic.
- Er06 - Testing hardware just before opening door, voltage monitor is low when should be high.
- Er07 - Testing hardware just before opening door, series enable is low when should be high.
- Er08 - Informed slave we opening door, didn't see series enable go low.
- Er09 - Voltage monitor low when should be high.
- Er10 - Voltage monitor high when should be low.
- Er11 - Master CPU fails to communicate with slave CPU on a regular basis.
- Er12 - Companion CPU sees triac come on but master didn't indicate it was turning on a triac.
- Er13 - Master CPU informs slave CPU that triac is going to turn on but slave never sees it turn on.
- Er14 - Someone added a slave door to a setup that was already sized.
- Er15 - Invalid interrupt in firmware isr.
- Er16 - Master CPU tried to communicate multiple times with slave and failed.
- Er17 - System unable to size a second time.