
 
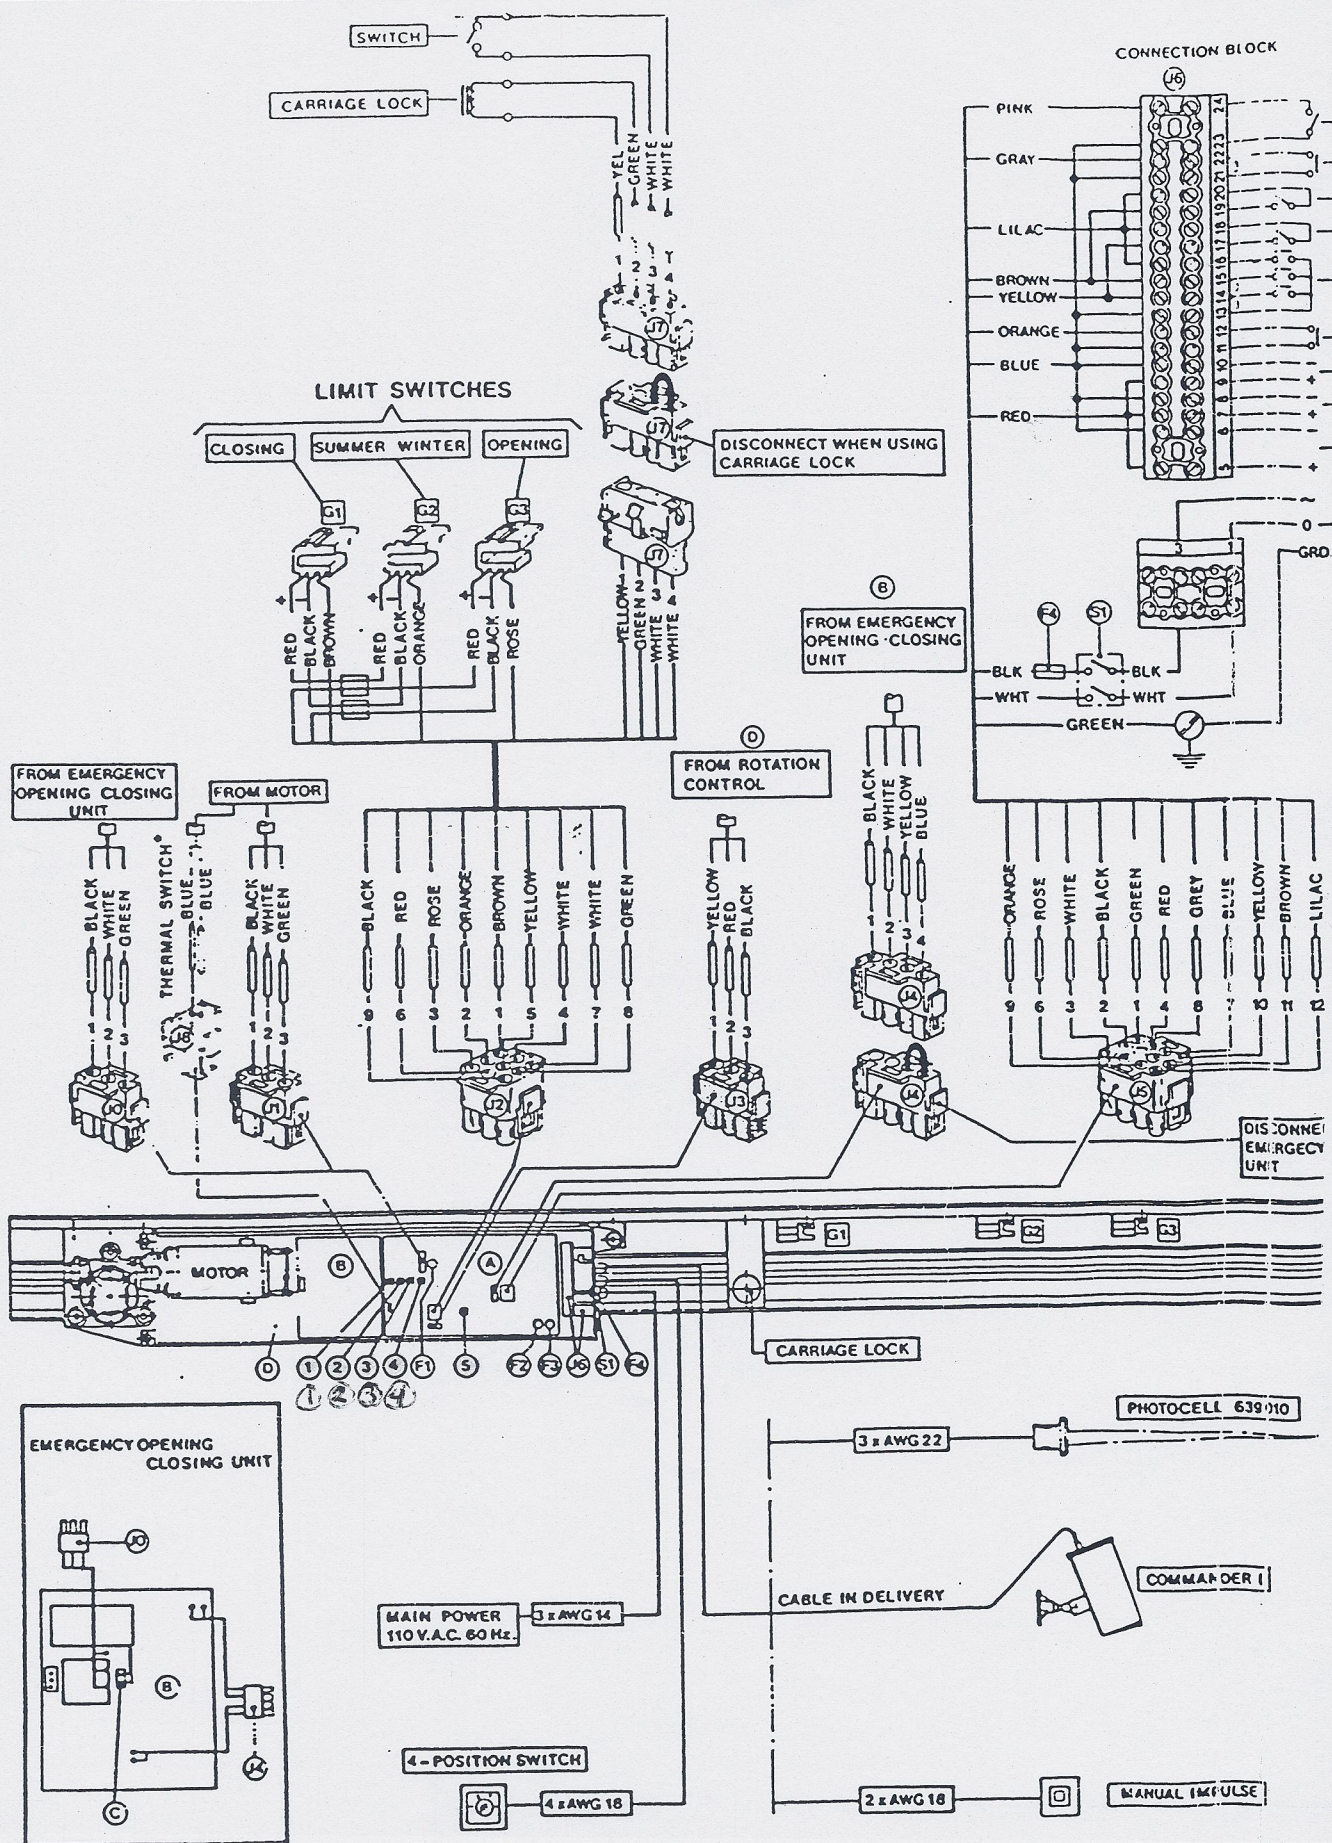



# BESAM 3000

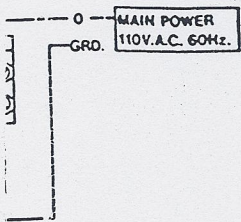

1. BESAM 3000  
 2. BESAM 3000  
 3. BESAM 3000  
 4. BESAM 3000  
 5. BESAM 3000  
 6. BESAM 3000  
 7. BESAM 3000  
 8. BESAM 3000  
 9. BESAM 3000  
 10. BESAM 3000  
 11. BESAM 3000  
 12. BESAM 3000  
 13. BESAM 3000  
 14. BESAM 3000  
 15. BESAM 3000  
 16. BESAM 3000  
 17. BESAM 3000  
 18. BESAM 3000  
 19. BESAM 3000  
 20. BESAM 3000  
 21. BESAM 3000  
 22. BESAM 3000  
 23. BESAM 3000  
 24. BESAM 3000

DOCK

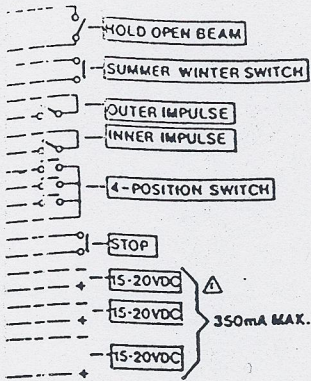

DISCONNECT WHEN USING EMERGENCY OPENING/CLOSING UNIT








639-010

DER I

ULSE



CONNECTOR 707 205 JUMPS YELLOW/BLUE ELIMINATES LOW BATTERY VOLTAGE "FAIL OPEN" FUNCTION.

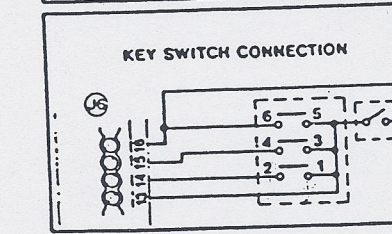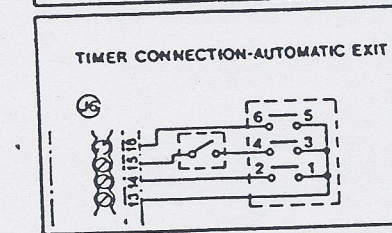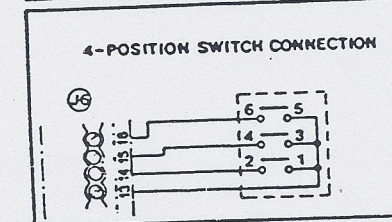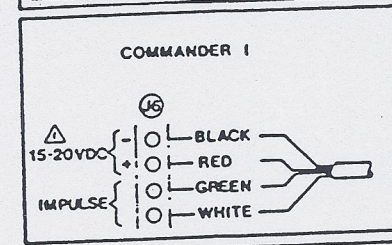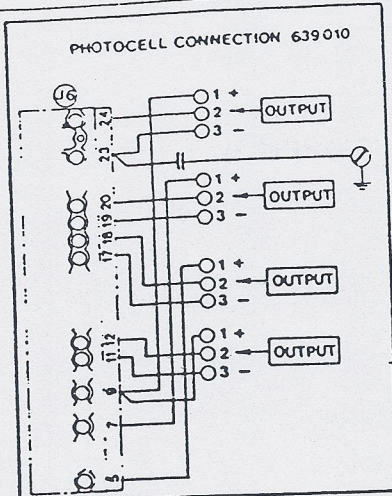

REVISIONS CHANGE		DATE	CHG BY	CHK BY
1	4	6/8/82	N.E.R.	D.C.
2	4	11/10/82	N.E.R.	D.C.

- (S) MAIN SWITCH
- (F) MOTOR FUSE 1 4A 1
- (F2) CONTROL FUSE 11.5A 1
- (F) MAIN FUSE 1 5A 1
- (1) HIGH SPEED - OPENING
- (2) LOW SPEED - OPENING
- (3) LOW SPEED - CLOSING
- (4) HIGH SPEED - CLOSING
- (5) TIME DELAY - CLOSING 10 - 30 SEC 1

- #### 4-POSITION SWITCH
- "OFF" IMPULSE DEVICE DISCONNECTED. LOCKING DEVICE ACTIVATED. EMERGENCY OPENING UNIT DISCONNECTED.
  - "EXIT" INTERIOR IMPULSE DEVICE CONNECTED. LOCKING DEVICE ACTIVATED. EMERGENCY OPENING UNIT CONNECTED.
  - "AUT" INTERIOR/EXTERIOR IMPULSE DEVICE CONNECTED. LOCKING DEVICE DEACTIVATED. EMERGENCY OPENING UNIT CONNECTED
  - "OPEN" DOOR/DOORS REMAIN IN OPEN POSITION.

#### MOUNTING OF EMERGENCY OPENING UNIT

DISCONNECT MAIN POWER. MOUNT THE UNIT IN THE OPERATOR WITH HARDWARE SUPPLIED. CONNECT PLUGS (A), (B), (C) AND (D) AS INDICATED. TURN ON MAIN POWER. THE DOOR/DOORS WILL OPEN AND REMAIN OPEN UNTIL THE BATTERY IS CHARGED (1-2 HRS., 6-HRS. MAX.). WHEN INDICATOR ON THE P.C. BOARD (E) IS LIT THE BATTERY IS CHARGED.

(H) IN SOME APPLICATIONS, THE BLACK AND WHITE WIRES MAY HAVE TO BE REVERSED.

THE LOCKING DEVICE IS ALWAYS LOCKED WITHOUT CURRENT.

NOTE:  
1. THERMAL SWITCH MUST BE CONNECTED PRIOR TO POWER BEING TURNED ON OR THE MAIN 1F41 FUSE WILL FAIL.

		INSTALLATION DRAWING <b>EZ Fit 3050</b> <b>Belt Drive</b>		REF. 3.1 651 870 N.E.R. 12	0-2804
--	--	---	--	-------------------------------------	--------

# BESAM 3000/3050

## CONNECTION BLOCK

