Stanley Access Technologies **Quick-Reference Guide**



7400-Series ICU Door System Installation Instructions Quick-Reference Guide 204068

Rev. B, 2/26/11

Prohibition on Copying

Any unauthorized reproduction, disclosure or distribution of copies by any person of any portion of this work may be a violation of copyright law of the United States of America and other countries, could result in the awarding of statutory damages of up to \$250,000 (17 USC 504) for infringement, and may result in further civil and criminal penalties. All rights reserved.

Stanley Access Technologies

Quick-Reference Guide

TABLE OF CONTENTS

1.	PURPOSE	2			
1.1	Discussion				
1.2	Applicability	2			
1.3	Features and Functions	2			
2.	PREREQUISITES	2			
3.	INSTALLATION INSTRUCTIONS	3			
3.1	Checking the Rough Opening	3			
3.2	Attaching the Jambs to the Header (1 ³ / ₄ " Header Option)				
3.3	Attaching the Jambs to the Header (4 ¹ / ₂ " Header Option)				
3.4	Installing the Header and Jamb Assembly	5			
3.5	Installing the Door Panels				
3.6	Installing the Door Handle and Paddle Assembly	6			
3.7	Installing the Latch Post Assembly				
3.8	Attaching the Door Closer Assembly	6			
3.9	Installing the Optional Smoke Seals	6			
3.10					
3.1	Replacement Parts.	. 10			
Atta	chments				
Atta	chment 1, Documents, Definitions, Tools, Equipment, Materials, and Consumables	.11			
Atta	Attachment 2, Latch Assembly Installation				
Atta	Attachment 3, Header and Smoke Seal Options				

1. PURPOSE

1.1 Discussion

This manual provides installation instructions for the Stanley 7400-Series ICU door system. The 7400-Series ICU door is a fully manual door system that features either two swinging panels or one swing door (single). The most common application for the door system is a hospital intensive care unit.

1.2 Applicability

This manual is applicable to the Stanley 7400-Series ICU door system.

1.3 Features and Functions

The 7400-Series ICU door system includes the following features:

- For active panels, a swing-door closer assembly embedded in the panel and header. (Inactive panels use a flush bolt and do not have a closer.) The closer assembly includes two setscrews. One screw adjusts the door closing speed as it closes from 105° to 15°. The other screw adjusts the latch closing speed throughout the last 15°.
- A 105° hold-open feature. When the swing door is opened to greater than 105° the door closer holds it open.
- Flush bolt on the inactive panel
- Lever handle and push handle on the active panels
- Smoke and draft option
- Continuous hinges

2. PREREQUISITES

- 2.1 Protective barrier (caution/warning tape) has been set up to prevent unauthorized access to work area.
- 2.2 Attachment 1 has been reviewed for the following:
 - Definitions of the terms used in this procedure
 - A listing of the additional documents required during this procedure
 - A listing of the tools, equipment, materials, and consumables used in this procedure.

3. INSTALLATION INSTRUCTIONS

3.1 Checking the Rough Opening

3.1.1 ENSURE floor is level across the entire opening.


NOTE

The door shall be installed within the rough opening such that an average clearance between the door and rough opening is $^{1}/_{4}$ " along the pivot and top edge; $^{1}/_{8}$ " along the lead edge for a single panel; $^{1}/_{4}$ " along the bottom; and $^{1}/_{16}$ " along the meeting edge for a pair.

- 3.1.2 CHECK opening width.
- 3.1.3 CHECK opening height from *finished* floor.
- 3.1.4 SWEEP floor.

3.2 Attaching the Jambs to the Header $(1^3/4^n)$ Header Option)

- 3.2.1 Refer to Figure 1, and, using one $\frac{1}{4}$ -20 X $\frac{1}{2}$ " screw and one $\frac{1}{4}$ -20 X $\frac{1}{4}$ " screw with spring lockwashers, ATTACH header bracket to rivnuts in jamb.
- 3.2.2 POSITION end of header extrusion over the header bracket.
- 3.2.3 Using four ½ -20 X 3/4" CS screws, ATTACH header to header bracket.
- 3.2.4 REPEAT Section 3.2 for opposite end of header.

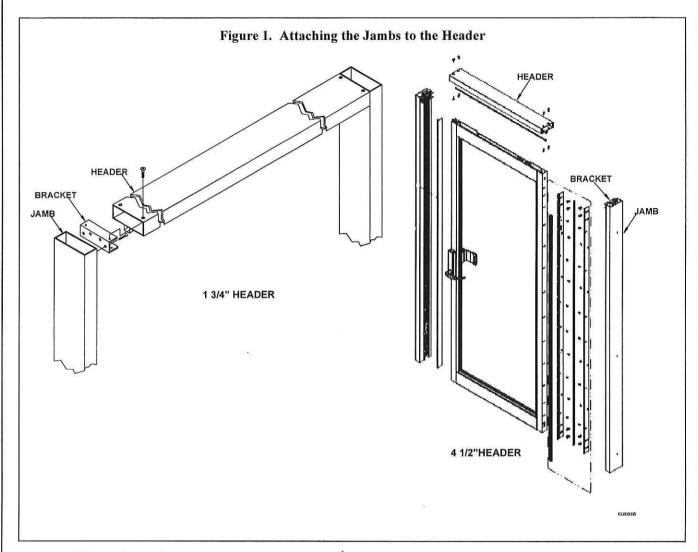


3.3 Attaching the Jambs to the Header (4¹/₂" Header Option)

- 3.3.1 Refer to Figure 1, and, using three ½ -20 X 1³/₄" screws and spring lockwashers, ATTACH header bracket to rivnuts in jamb.
- 3.3.2 POSITION end of header extrusion over the header bracket.
- 3.3.3 Using four ¹/₄ -20 X ³/₄" CS screws, ATTACH header to header bracket.
- 3.3.4 REPEAT Section 3.3 for opposite end of header.

3.4 Installing the Header and Jamb Assembly

- 3.4.1 LIFT header and jamb assembly and POSITION into opening.
- 3.4.2 Temporarily SECURE frame in place as necessary to prevent header and jamb assembly from falling.
- 3.4.3 SHIM beneath jamb(s) as necessary to level header and maintain required height from highest point of finished floor.
- 3.4.4 INSPECT one jamb for plumb in vertical and horizontal planes. <u>IF</u> required, SHIM back of jamb.
- 3.4.5 Refer to Figure 2, and, using the previously drilled jamb holes as a guide, DRILL holes in rough opening for the following fasteners as required:
 - <u>IF</u> rough opening is concrete, DRILL ¼" dia. hole for concrete screw, and ENSURE screw will be embedded 1½" minimum.
 - IF rough opening is steel, DRILL #14 SMS (Note 18 GA steel minimum).
 - IF rough opening is wood, DRILL for #14 wood screw, and ENSURE screw will be embedded 1½" minimum.

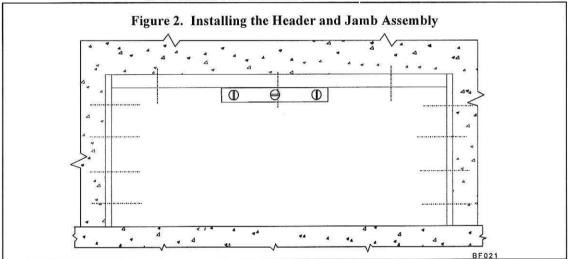

- 3.4.6 INSTALL, but do *not* tighten, fasteners securing one jamb to opening, and ENSURE jamb remains plumb.
- 3.4.7 INSPECT opposite jamb for plumb in vertical and horizontal planes. <u>IF</u> required, SHIM back of jamb.
- 3.4.8 Using the previously drilled jamb holes as a guide, DRILL holes in rough opening.
- 3.4.9 INSTALL, but do *not* tighten, fasteners securing jamb to opening, and ENSURE jamb remains plumb.
- 3.4.10 Starting at the top of jamb and moving downward, SHIM jambs as necessary to ensure jambs remain level and plumb, and TIGHTEN fasteners securing jambs to opening.
- 3.4.11 INSTALL and TIGHTEN fasteners securing header to opening, and ENSURE header remains level.

3.5 Installing the Door Panels

- 3.5.1 Using No. 12 X ¾" self-threading Tek screws, ATTACH continuous hinge to door jamb (supplied with continuous hinge).
- 3.5.2 Using No. 12 X 3/4" self-threading Tek screws, ATTACH continuous hinge to door panel.
- 3.5.3 Repeat steps 3.5.1 and 3.5.2 for additional door panel if applicable.

3.6 Installing the Door Handle and Paddle Assembly

3.6.1 Refer to manufacturer's instructions and Attachment 2, and INSTALL door handle and paddle assembly.

3.7 Installing the Latch Post Assembly

NOTE

The latch post hole in the header is pre-drilled at the factory.

- 3.7.1 Refer to manufacturer's instructions, and, with the Allen screw head facing downward, POSITION latch post into pre-drilled hole in header.
- 3.7.2 Using a $\frac{5}{32}$ Allen wrench, SECURE the latch post into the header.

3.8 Attaching the Door Closer Assembly

NOTE

The door arm is factory installed onto the door panel. The door closer slide block assembly is factory installed in the header.

- 3.8.1 POSITION the door arm onto the door closer slide block.
- 3.8.2 Using a No. 5 Allen wrench, TIGHTEN *counterclockwise* the screw securing the door arm to the door closer slide block.
- 3.8.3 Refer to Attachment 3, and INSTALL door closer assembly.

3.9 Installing the Optional Smoke Seals

- 3.9.1 Refer to Attachment 3 (sheet 1), and INSTALL leading edge weatherstripping through top of channel on door panel leading edge.
- 3.9.2 INSTALL self-adhering foam tape along centerline of hinge attached to door jamb.
- 3.9.3 Refer to Attachment 3 (sheets 2 and 3), and INSTALL self-adhering foam tape along exterior side of door stop.

3.10 Performing the Closeout Procedure

- 3.10.1 CYCLE door several times and ENSURE the following:
 - · Door is aligned properly.
 - · Door opens and closes freely.
 - Door latches properly.
 - Door leakage rates are within the limits shown in Tables 1 and 2.
- 3.10.2 If door latch adjustment is required, refer to Attachment 3, and ADJUST door latch.
- 3.10.3 If installed, ENSURE door sweep is properly adjusted.
- 3.10.4 If door closing speed or close check speed requires adjustment, refer to Manufacturer's instructions for No. CO-154 Door Closer Assembly, and ADJUST door closer as necessary.
- 3.10.5 ENSURE glass is not cracked or broken.
- 3.10.6 ENSURE glass and metal surfaces are clean.
- 3.10.7 ENSURE door installation area is clean and free of debris.
- 3.10.8 COMPLETE Work Order and REPORT your actions to Building Superintendent.

Table 1. Leakage Rates--Single Swing Doors

Pressure (in, of WC)	Air Temp, °F	Leakage (cfm/sq ft)	Closing Force, lb	Artificial Bottom Seal
0.05	Ambient	2.1	4	No
0.10	Ambient	2.6	4	No
0.20	Ambient	4.46	4	No
0.30	Ambient	5.63	4	No
0.05	400	0.55	4	No
0.10	400	0.89	4	No
0.20	400	1.21	4	No
0.30	400	1.79	4	No
Pressure (in. of WC)	Air Temp, °F	Leakage (cfm/sq ft)	Closing Force, lb	Bottom Seal
0.05	Ambient	0.57	4	Yes
0.10	Ambient	0.80	4	Yes
0.20	Ambient	1.27	4	Yes
0.30	Ambient	2.29	4	Yes
0.05	400	0.00	4	Yes
0.10	400	0.21	4	Yes
0.20	400	0.31	4	Yes
0.30	400	0.42	4	Yes

Table 2. Leakage Rates--Standard and Uneven Pair

Pressure (in. of WC)	Air Temp, °F	Leakage (cfm/sq ft)	Closing Force, lb	Artificial Bottom Seal
0.05	Ambient	1.2	4	No
0.10	Ambient	1.6	4	No
0.20	Ambient	2.65	4	No
0.30	Ambient	3.56	4	No
0.05	400	0.24	4	No
0.10	400	0.76	4	No
0.20	400	1,01	4	No
0.30	400	1.33	4	No
Pressure (in. of WC)	Air Temp, °F	Leakage (cfm/sq ft)	Closing Force, lb	Bottom Seal
0.05	Ambient	0.40	4	Yes
0.10	Ambient	0.76	4	Yes
0.20	Ambient	1.21	4	Yes
0.30	Ambient	2.02	4	Yes
0.05	400	0.05	4	Yes
0,10	400	0.30	4	Yes
0.20	400	0.39	4	Yes
0.30	400	0.50	4	Yes

3.1 Replacement Parts

3.1.1 Refer to Table 3 for replacement parts.

Table 3. Replacement Parts

Item No.	Part Number	Description
1	Closer Assembly	714436
2	Bolt - Flush, Clear Finish	515488
	Bolt - Flush, Drk Bronze Finish	535488
3	Seal - Overlap, tear shape (hinge extension), 4' length	414091
4	Seal, flat shape (door perimeter), 25' length	713941
5	Latch - Cover, header cover	712076
6	Weather-strip "T" shape, 8' length	415077-1
7	Paddle Assembly, 1 point latch (left hand reverse)	714434-1
	Paddle Assembly, 1 point latch (right hand reverse)	714434-2
8	Lever Handle – Curved, non handed	714435
9	Hinge - Continuous, Clear finish, < 83"	714437-1
	Hinge - Continuous, Drk Bronze finish, < 83"	714437-2
	Hinge - Continuous, Clear finish, 83" to <95"	714437-3
	Hinge - Continuous, Drk Bronze finish, 83" to <95"	714437-4
	Hinge - Continuous, Clear finish, ≥ 95"	714437-5
	Hinge - Continuous, Drk Bronze finish, ≥ 95"	714437-6
10	Brush, Bottom Sweep, short pile,120" length	710739-12000
	Brush, Bottom Sweep, long pile,132" length	713241-13200
11	Holder - Sweep, 180" length	413769-18000

Attachment 1 Documents, Definitions, Tools, Equipment, Materials, and Consumables

(Sheet 1 of 1)

Documents

- Manufacturer's instructions for Door Closer Assembly
- Manufacturer's instructions for Door Handles

Definitions

None

Tools and Equipment (including, but not limited to)

- Electric drill, metal drill bit set, concrete drill bit set
- 5/32" Allen wrench

- No. 5 Allen wrench
- Screwdriver kit

Materials (including, but not limited to)

Glass panels


Consumables (including, but not limited to)

Clean rags

Curved handle assembly located on exterior (swing side) of door panel. engagement with latch cam. Turn rod <u>clockwise</u> to decrease engagement Turn rod counterclockwise to increase Orientation of handle can be changed before installation. Latch cam engages keeper in header Latch assembly inside the rail Latch Assembly Installation Attachment 2 (Sheet 1 of 1) Interior Push Paddle assembly


204068
Rev. B, 2/26/11
Page 12 of 15
© 2011, THE STANLEY WORKS. ALL RIGHTS RESERVED.

Header and Smoke Seal Options Attachment 3 (Sheet 1 of 3)

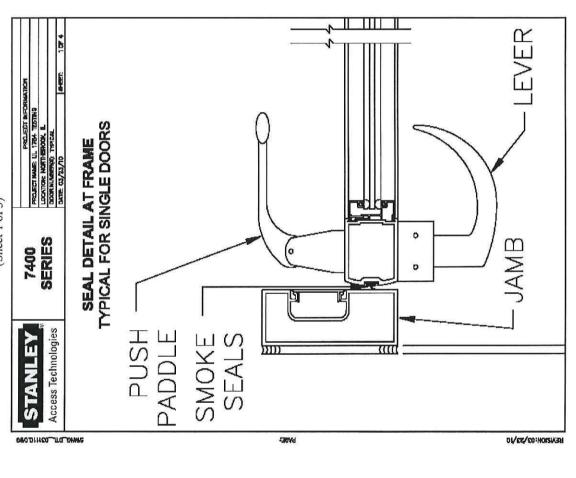


204068
Rev. B, 2/26/11
Page 13 of 15
© 2011, THE STANLEY WORKS. ALL RIGHTS RESERVED.

Header and Smoke Seal Options Attachment 3 (Sheet 2 of 3)

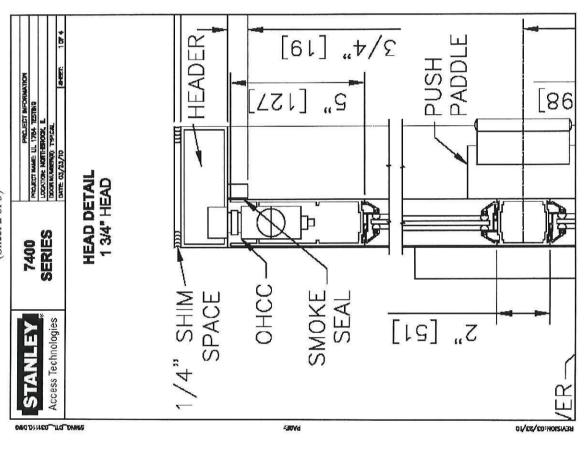

204068
Rev. B, 2/26/11
Page 14 of 15
© 2011, THE STANLEY WORKS. ALL RIGHTS RESERVED.

Header and Smoke Seal Options Attachment 3 (Sheet 3 of 3)

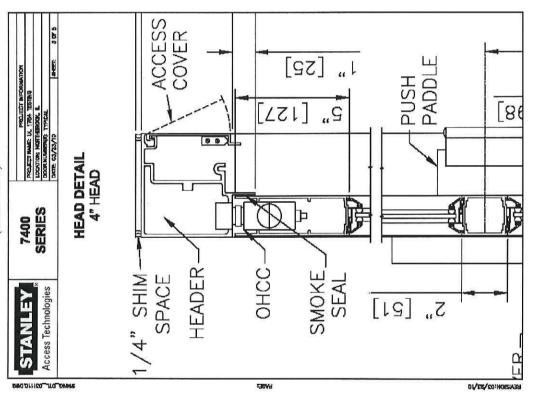

204068
Rev. B, 2/26/11
Page 15 of 15
© 2011, THE STANLEY WORKS. ALL RIGHTS RESERVED.