


# C2150 Control

with Version 3 Software and Encoders

for 2001 Light-Duty Industrial  
Door Operators

## SETUP INSTRUCTIONS & TROUBLESHOOTING

To be used with either G2001 or G206 Installation Instructions

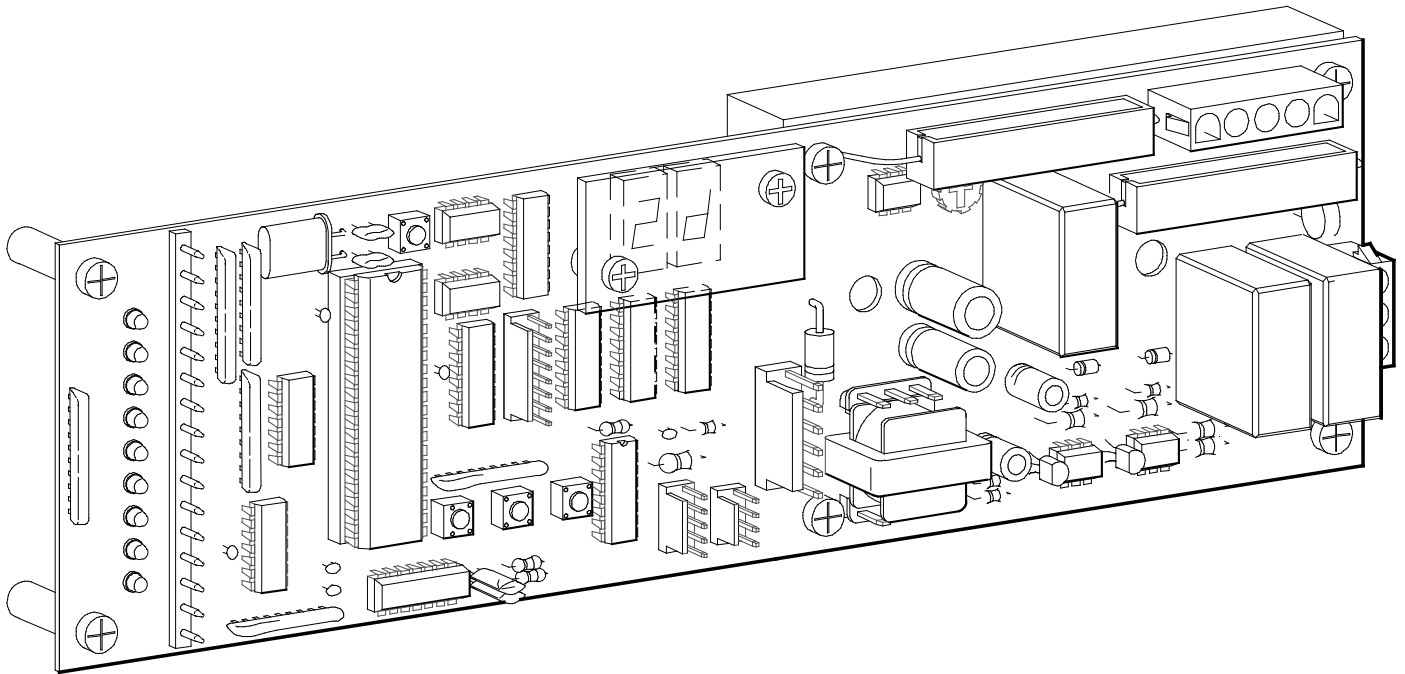

# SERIES 2001 SLIDE DOOR OPERATOR

with C2150 Control and Version 3 Software  
(for light-duty industrial door operators)

## SECTION 1: QUICK-START INSTRUCTIONS

To get this operator up and running, do the following:

1. Physically inspect the package you received.
  - a. The small red connector from the motor encoder should be plugged into connector CN1 on the control.
  - b. The motor should be plugged into connector CN8.
  - c. The close monitor switch assembly should be connected to terminal #10 and #11 of connector CN2, and should trip when the door is fully closed.
  - d. A five-conductor cable should run between connector CN7 and the power supply. The power supply should be a C3925 (with large rectangular transformer) for 120VAC operation. For 240VAC, it should be a C3926 (with round "donut" transformer).
2. Check the incoming power for proper connections. Pin 1 of the power supply is to be wired to the HOT side of the AC line (normally black-US or brown-international). Pin 2 of the power supply is for the NEUTRAL side of the AC line (normally white-US or blue-international). Pin 3 of the power supply is frame ground (green-US or green/yellow-international).
3. If you do not plan to use a 3-button station or an emergency stop switch, a jumper **must** be present between pins 15 and 16 of CN2, the main input connector. Also, a toggle switch or jumper wire **must** be present between pins 8 and 9 of connector CN2. This wiring is normally done for you at the factory.
4. Set reversing sensitivity pot R10 fully counterclockwise. Do not wire any motion detectors or other accessory devices at this time (the factory pre-wired safety beams, if present, may be left in place).
5. Caution, door will move! Move the door manually to a position in mid-stroke. Insure that the toggle switch is turned on, and apply AC power to the door package.
  - a. The display should wink the version number in two parts (as in 3. then 03).
  - b. The display should indicate FC (for first run - Finding Close stop), and the door should fully close at slow speed. [If the door moves a short distance closed, then stops and the display indicates Pd, it means that the pre-wired safety beams are hanging the door up and preventing the "learn" cycle; the yellow SAF BEAM indicator will be lit in this case.]
  - c. When the door has fully closed, the yellow CLM (close monitor) indicator should come on. The display should show tS (total Stroke), followed by the stroke found (in inches). **Important note:** The stroke displayed should match the door stroke as installed, since each control is "taught" the stroke for the operator it ships in at the factory. If you need to change the stroke for any reason, refer to question 1-1 in Section 3, COMMON QUESTIONS & ANSWERS.
  - d. After the stroke displays, the display will switch to Id (Idle). [If the display switches to OS instead and the door refuses to do anything else, look at the green TOG SW indicator on the left side of the control. It should be on. If it's off, check to insure that the toggle switch is turned on, and that the SO magnets, if present, are closing the breakout magnetic reed switches (these switches are in series with the toggle switch circuit).]
6. Depressing the DOWN button on the C2150 control will now actuate the door to open at the factory selected default settings for open speed, open check, braking, and time delay. Inspect for smooth operation, free of any binds, excessive noise, etc.
7. If any speeds or other settings need to be changed, follow this procedure:
  - a. Turn the toggle switch **OFF**. The display will show OS (for Open Speed), the first parameter that can be adjusted.
  - b. Refer to the chart on page 3 and scroll through the parameter list using the UP and DOWN buttons until you find the parameter you wish to change. When you've found it, press **and hold** the SET button. The display will now change to show the current value or setting of the parameter. While holding the SET button down, press or hold UP or DOWN to modify the setting. When the SET button is released, the display once again shows the parameter you just changed. You may then change another parameter, or turn the toggle switch back on to check the change(s) you just made. The chart on page 3 also shows the factory default settings for each parameter.
8. If you changed any adjustments, after you are satisfied with all control settings, insure that the toggle switch is ON. Press **and hold** the SET button on the control until dS (data Saved) displays. All of your settings are now stored in the control's memory. You **must** perform this step if you changed any settings, otherwise the control will go back to the factory default settings after a power failure!
9. Set the reversing sensitivity as desired using adjustment R10. Do NOT leave this adjustment at minimum!!
10. Install accessory devices and wire them to CN2. Check all detectors for proper operation.

This concludes the electrical installation and set-up.

The following chart shows all of the adjustable parameters. Refer to steps 7 and 8 on page H603.1 to make any necessary changes

CODE	PARAMETER	FACTORY PRESET VALUE	ADJUSTS
OS	Open Speed	10	0-15
CS	Close Speed	12	0-15
OC	Open Check	4	0-15
CC	Close Check	4	0-15
OU	Open cUshion	3	0-15
CU	Close cUshion	3	0-15
d1	delay time 1 (full)	1 sec	1-199
d2	delay time 2 (partial)	1 sec	1-199
d3	delay time 3 (reverser)	3 sec	1-199
CP	open Check Point	75% of stroke	50-90% tS
PO	Partial Open position	8"	8"-tS
tS	total Stroke	(as determined by learn cycle)	12-199"
ct	cycle test	oF (no)	oF/on
RS	AutoSeal	oF (no)	oF/on
St	Stop OK on first run	on (yes)	oF/on
Hd	Heavy-duty door/motor	oF (no)	oF/on
PF	Power Fail	OP (power fail OPen)	OP/CL
Sn	Safety nosings	oF (no)	oF/on
cb	Close braking	oF (no) (Version 3.01 & up only)	oF/on
br	brake on recycles	oF (no) (Version 3.01 & up only)	oF/on
SL	use SLOW speeds	oF (use standard speeds)	oF/on
tc	use turbocharge speeds	oF (use standard speeds)	oF/on
rA	reduced Accelaration	oF (use standard accelaration)	oF/on
3t	3-button station present	oF (standard switches in use)	oF/on
LL	Lock present	oF (on if Horton lock is present)	oF/on
SA	Fail-SAFE lock	oF (fail-secure/on if fail-safe lock found)	oF/on
UL	Unmonitored Lock	oF (monitored lock)	oF/on
bl	bi-stable Lock	oF (standard lock)	oF/on
HL	Horton C9910 Lock	oF (Do not turn on - see Q3-4)	
LO	Lock Open also	oF (Lock only when closed)	oF/on
rP	reverse on encoder Pulses	oF (Version 3.02 & up only)	oF/on
JS	Jam Sensing	oF (Version 3.03 & up only)	oF/on

Note: a double dash (--) is a reversed parameter that is not implemented

## SECTION 2: OTHER DISPLAY CODES (Version 3 software)

The following initialization, error, and diagnostic codes may also be displayed at various times by Bersion 3 software:

≡ Control is braking door.

dS Setup data stored.

ld Door is closed and idle (waiting for actuate signal).

LR Door is latched in full open position.

PC Partial open check (when partial opening is activated).

nL No automatic lock found.

lL Interlocking active - contact on CN2, pin 13 inhibiting door open.

nL No lock found (or lock does not have monitor switch).

SE Fail secure automatic lock (with monitor switch) found.

SA Fail safe automatic lock (with monitor sitch) found.

FC First run - finding fully closed position.

FO First run - finding fully open position.

Jl Jam sensed - door not moving at beginning of open or close cycle.

Pd Pedestrian (actuating or safety device) stopping "learn" cycle.

nS No close monitor microswitch found when expected.

UF Unlock failure of (monitored) automatic lock.

LF Lock failure of (monitored) automatic lock.

EF Encoder failure.

LP Loss of pulses from encoder.

EP Encoder phasing wrong.

Et Encoder test starting.

ra Rotating lines during encoder test.

SF Stroke determination failure (measured stroke outside limits).

df Data storage failure.

bF Battery failure (when optional battery pack is installed).

# SECTION 3: COMMON QUESTIONS & ANSWERS

(Version 3 software)

## \*\*\* QUESTIONS ABOUT CONTROL SET-UP \*\*\*

Q1-1 How do I reset the stroke stored in the control?

A1-1 instruct the control to do a full 'learn' cycle by pressing and holding the SET button down while momentarily pressing RESET, or hold the SET button down while powering up the control. The control will restore all the factory default settings, learn the new stroke, and store all the information.

Q1-2 How do I verify the stroke that a particular control is set to?

A1-2 Locate the tS parameter in the parameter list, and press SET to view it. The stroke will be displayed in inches. The total stroke can also be modified via the UP and DOWN buttons, but it's not recommended - we suggest letting the control determine the stroke automatically with a full learn cycle instead.

Q1-3 Can the control re-learn the stroke without changing any of my other settings?

A1-3 Yes. In Version 3.01 & later, holding both the SET and UP buttons while momentarily pressing RESET or powering up will retain all of your present settings except for the stroke.

Q1-4 What are the default settings in the parameter list when I force the control to do a full learn cycle?

A1-4 Refer to the chart on page H603.2, which shows all the defaults.

Q1-5 I changed some settings, but everytime I reset the control or there's a power loss, the control goes back to its original settings! What's going on?

A1-5 You must remember to save the settings you decided on before you leave the job site! To save your new settings into permanent memory, the toggle circuit must be on (door must be in normal operation). Push and hold the SET button until the display shows dS. Your new settings are now stored. Data is only stored when the door arrives at the fully closed or open positions; also, note that normal door operation is disabled until the SET button is released.

Q1-6 I would like to move the point where the door goes into open check.

A1-6 Locate the CP (Check Point) parameter and modify it. This parameter is in inches of stroke and can be set from 50% to 90% of the total stroke learned on startup.

Q1-7 I changed the total stroke manually, and the control also moved my check point. Why?

A1-7 This is normal, and is done to properly relocate the open check point. You should have set the total stroke first, or allowed the control to automatically learn it, then reset the open check point to your desired value.

Q1-8 I changed some parameters and really messed things up. How do I get back where I started?

A1-8 Assuming that you haven't saved the new "messed up" parameters, simply pressing RESET will restore all of the settings you had before you started tinkering. If you did a data save, your original parameters are lost, and you will have to do a complete learn cycle to get back to a parameter set that at least works in your door.

Q1-9 The door goes through its full learn cycle, then the control starts flashing SF until reset. Why?

A1-9 This code indicates a 'Stroke Failure' - some encoder pulses were found, but not enough. Check the encoder and associated wiring carefully, and verify that the encoder wheel and other mechanical parts are not slipping. The minimum stroke is 12" if Horton's standard S2001 gear drive and 3.183" drive pulleys are in use. (Note: Version 3.02 & earlier have a 20" stroke minimum.)

Q1-10 When I power up the control, the door closes slowly on its first run, then the display starts flashing nS. What gives?

A1-10 This stands for 'no Switch' -the close monitor switch is not supplying a "door fully closed" indication to the control. Check your switch, its mechanical adjustments, and its wiring.

Q1-11 My door seemed to setup properly, but then it refused to close and the display is showing St. What's wrong?

A1-11 This is the Stop code -the pushbutton "stop" input (marked KEYSW, pin 16 of CN2) is active. This is a normally closed input - pin 16 must be jumpered to common (pin 15) for the door to work if a stop button isn't installed.

Q1-12 There's a red LED marked +100 next to the display that comes on when some parameters are accessed.

A1-12 This LED shows that you must add 100 inches (or seconds) to the display value. Think of it as a third '1' digit in front of the other two.

Q1-13 I installed a very heavy door (over 400 pounds), and/or amusing a 1/2 hp heavy-duty motor, and the braking seems very abrupt. Why?

A1-13 The standard braking on the C2150 control is optimized for light to medium weight doors, and will suffice for the vast majority of applications. When installing a very heavy door, you should set the Hd (Heavy duty) bit to the ON position. This will change the braking to a more gentle curve and minimize wear and tear on the door and operator. Note that with the different braking, you may have to move the check point back and/or slow the door down a little to achieve smooth operation.

Q1-14 I installed a switch for partial opening operation and set the PO parameter for 24", but I'm getting 48" of partial opening on my bi-part operator. Why?

A1-14 All measurements in the C2150 control are based on inches of stroke, not inches of door opening. The 24" setting will yield a 24" door opening on single-slide operators - but for bi-part doors, you would set PO to 12".

01-15 I installed a stop button and wired it to pin 16 as shown on the drawing. When I push it and St displays, how do I get the door to run again?

A1-15 To recover from a stop signal, you may actuate the door with any of the standard inputs -partial open with delay, full open with delay, or latch - and the door will continue opening as if nothing had happened. You may also momentarily depress the DOWN button (service aid) to continue opening. Finally, actuating the "close" input (SW-C, pin 14 of CN2) or turning the toggle switch circuit off and back on again will continue the close cycle.

01-16 I want to add an emergency stop switch. How can I do this?

A1-16 It depends on the switch type. All stop switches should have norm closed (NC) contacts. If you have a momentary switch, wire it between pins 15 and 16 of CN2. This is the input marked KEYSW as described above. If you have a "mushroom" palm switch or other switch that has maintained contacts, Horton recommends wiring it into the toggle circuit at pins 8 and 9 of CN2. The door will stop when the switch contact is broken, and will remain disabled until the contact is restored.

01-17 My customer wants a three-button (open/close/stop) garage door type control box. Is this possible?

A1-17 This feature is built in as well. Find the 3t (3-button) station option and turn it ON. Wire the pushbuttons as follows: open to pin 2 of CN2; close to pin 14; and stop to pin 16. The other side of all switches goes to common. Note: The 'stop' button must be normally closed - this is standard in three-button stations.

01-18 I installed a door with a three-button station, but all I get is a time delay following opening, then the door starts closing again.

A1-18 You forgot to turn on the 3t option.

01-19 How do the actuate inputs work on the C2150 with Version 3 software?

A1-19 The actuator system is very versatile and will meet the requirements for the vast majority of field installations. Basically, three actuate lines are available: latch, momentary full open with time delay d1, and momentary partial open with time delay d2. A full open input takes priority over a partial open input, and a latch input takes top priority. If the door has been opened to the partial open position and a full open input comes along, the door moves immediately to the full open position, executes delay d1, and closes. If the door is in the partial open position and a latch input arrives, the door moves immediately to the full open position and latches open - code LA will display. There are also optional input lines for close and stop which are discussed more fully above.

01-20 I need two delay times, one for full open and one for partial. Is this possible without extra equipment?

A1-20 No problem. Time delay d1 is used for full open, and d2 for partial open. Either may be set independently from 1-199 seconds.

01-21 When does the delay start?

A1-21 When the door reaches the partial- or full-open position and all the actuators have dropped out.

01-22 How is a safety beam trip (or reverser signal) handled in Version 3 software?

A1-22 The safety beam (or reverser) moves the door back to the last position used, either partial or full open, then executes time delay d3 and attempts to re-close the door.

01-23 I have a door with a very long stroke, and would like a little more speed during opening. I already have the OS parameter maxed out at 15.

A1-23 Find the tC (turboCharge) option and turn it on. This selects an even higher speed bank for these installations.

01-24 I have a very small door, and even an open speed of '0' seems too fast. Can I do anything about this?

A1-24 Yes, find the SL (SLOW speed) parameter and turn it on. This shifts the open speed range down to "low gear" for these installations. Note that you'll probably have to go back and increase the open speed setting after enabling SL - these speeds are quite slow. Also note that SL takes priority over tC.

01-25 I'm satisfied with the speeds I've selected, but the door seems to "takeoff" too abruptly (bumps anti-rise and/or jumps belt cogs).

A1-25 After insuring that belt tension is properly set, try locating the rA (reduced Acceleration) parameter and turning it on. This cuts the start-up acceleration in half and is better suited to some installations.

01-26 Is there anything else I can do to insure maximum operator and door life?

A1-26 To minimize wear and tear on both control and operator, Horton suggests turning on the br (brake on recycles) option in Version 3 industrial software. Although it defaults to OFF, turning it ON means that when a recycle is requested, the control actually brakes the door before recycling open. For installations where a slight extra delay can be tolerated before the door recycles open, turning on br prolongs belt and door life and is the preferred setting.

01-27 I have safety nosings on this installation, and every time the nosings compress together as the door closes, they generate a false obstruction signal.

A1-27 Find the Sn (Safety nosings) parameter and turn it on. This will disable the safety beam/nosing input when the control switches to close cushion and will prevent this.

## "" QUESTIONS ABOUT THE BUILT-IN DIAGNOSTICS ""

02-1 How do I run the encoder test?

A2-1 To run the test, press and hold the DOWN button while momentarily pressing RESET or powering up the control. The display will show Et (Encoder test) briefly, then will switch to a pair of short lines. Release the DOWN button. As you push the

door manually, these lines must rotate smoothly and evenly. The boxes they form will rotate counterclockwise when the door is opening (just like the drive pulley, as viewed from the gear drive side), and clockwise when the door is closing. To exit the encoder test, press RESET. Note that the door will not respond to any actuate inputs when in the encoder test mode.

Q2-2 Is there a way to manually cycle the door without using a jumper wire?

A2-2 Yes. Any time that the toggle switch input is active and the door is ready to run, the DOWN button is configured to simulate a detector input. You may also set the ct option to cycle test the door repetitively if desired. Furthermore, if the door was latched open by the pull chain input (LA is showing on the display), the DOWN button will switch from latched open to delay mode and allow normal closing after delay d1.

### \*\*\* QUESTIONS ABOUT LOCKS AND DOOR LOCKING \*\*\*

Q3-1 I want to add a lock. What should I do?

A3-1 Locks are supported in a variety of ways in the C2150. You may use Horton's standard locks for S2001 operators, magnetic locks, a bi-stable (two coil) lock, or even a screw-bolt type lock. If a standard Horton S2001 lock is to be used, put it into connector CN4 on the control and force a complete learn cycle by holding down the SET button while momentarily pressing RESET (or powering up). The control will automatically determine the lock type, and the display will momentarily flash SE if the lock is fail-secure, or SA if it's fail-safe. The control will then do its full "learn" cycle and save the updated configuration.

Q3-2 Is there an advantage to using Horton's lock?

A3-2 Our standard locks for belt-drive operators have extra circuitry to reduce lock coil heating and energy consumption. This extends lock life. The extra circuitry located on the lock assembly reduces lock energy consumption by about 90%.

Q3-3 If I add a magnetic or other non-Horton lock, how do I do it?

A3-3 You will need two parts - a Horton C3881 relay module, which supplies dry contacts for the lock, and a C3981 interconnecting lace. Horton recommends using an external transformer to power your lock. Wire the lock and its power supply in series with the appropriate relay contact (typically, you will use the "normally closed" or NC contact for magnetic locks, and the "normally open" or NO contact for bolt locks). You must set the LL option to ON so the control knows that a lock is present, and also set the UL (Unmonitored Lock) option to ON since the lock doesn't have a monitor switch. The control will insert a fixed 3/4-second delay to allow the lock to clear before it attempts to open the door. During this delay, UL will display.

Q3-4 What about Horton's C9910 brake lock?

A3-4 Although the C2150 control with Version 3 software also supports the C9910 brake lock, this style of lock will not retrofit mechanically to Horton's S2001 gear drive and cannot be used.

Q3-5 Is there a way to tell the control that it now has a lock without losing all of my preset speeds, check point, options, etc.?

A3-5 Yes, if you've already set other parameters and don't want to lose this information, look up the lock parameters LL, SA, UL, and dL, and set them manually for the type of lock you're using. For Horton's standard fail-secure autolock in a S2001 header, only parameter LL will be ON. *Don't forget to do a data save after you change the parameters!!! (See Q1-5)*

Q3-6 I added a lock, and the door binds up against it.

A3-6 You forgot to tell the control that it now has a lock to deal with. Refer to question 3-5 above and re-configure the control.

Q3-7 My door binds against its lock, and I get a OF on the display.

A3-7 This means "Unlock Failure." The control knows that a lock is present, but cannot release it for some reason. Check for mechanical binding in the lock mechanism, or for a disconnected cable to the lock. If the lock is in fact releasing, but you still get a OF error, check the lock monitor switch to be sure that it's tripping when the lock releases. Also be sure that the UL option is set to ON if your lock doesn't have a monitor switch.

Q3-8 My customer wants a bi-stable (two-coil) lock. Is this possible?

A3-8 Yes - although Horton does not recommend bi-stable locks, the control will support them. Consult Horton to order the proper kit for this type of lock before installation. Set both option parameters LL and bL to ON. Note that bi-stable locks must have a monitor switch for proper operation. Also note that the control nn determine the presence of a bi-stable lock on power-up; you must manually set this option. Finally, fail-safe and fail-secure have no meaning for a bi-stable lock, so the SA parameter does nothing.

Q3-9 My door has both a battery pack and a lock, and I have the PF parameter set for power fail close. Will the door lock after closing?

A3-9 It depends on the lock type. If you have a fail-secure or a bi-stable lock, the door will always lock after closing; a fail-safe type will leave the door unlocked after closing. Magnetic locks obviously are fail-safe and will leave the door unlocked, since there's no power to operate the electromagnet.

Q3-10 I have an inexpensive lock, and it buzzes (or burns out!) If the door is latched open for **extended periods**. What can I do?

A3-10 Find the LO (Lock Open) option and turn it ON. This drops the lock when the door is latched open and prevents this problem. When the door is unlatched to close, it will first re-energize the lock, then start closing.

**\*\*\* QUESTIONS ABOUT THE OPTIONAL BATTERY PACK \*\*\***

- Q4-1 I added a battery pack for power failure protection. Is there anything else I have to do besides plug It Into CN3?
- A4-1 You should set the PF parameter in the configuration to either OP if you want power fail open, or CL if you want power fail close.
- Q4-2 My door is stuck open, and the display is flashing bF.
- A4-2 You have a self-monitoring style battery pack, and the batteries may be defective; or, if the pack was just installed, the batteries may need to be charged. The orange 'FAIL' LED on the battery pack will also be lit when bF shows. Push the FAIL RESET button in the battery pack assembly to attempt to clear the condition. The FAIL indicator may or may not go out. If it goes out, do a manual battery test as explained below to determine whether the failure was due to a remotely possible 'glitch' or is really indicating a battery failure. If necessary, replace the batteries or the complete assembly.
- Q4-3 Do the batteries continue to drain after the door completes its cycle on power failure?
- A4-3 No.
- Q4-4 Can the batteries be tested manually?
- A4-4 Yes. If you have the unmonitored version of the pack circuitry, simply unplug power to the control, or turn off the breaker supplying power to the door. The display should switch to PF within 1 second, and the door should open or close, depending on whether the PF option bit is set to OP or CL. After the door arrives at the proper position, the entire control should go dead until power is restored. When power is restored, the red CHARGE indicator on the pack circuit board will glow for 4-6 minutes, then will dim and go out completely (this assumes that the batteries were fully charged when you performed the test). if you have the self-monitoring version of the pack circuitry, press and hold the TEST button on the pack circuit board until the yellow TEST indicator comes on, then release it. The pack is now self-testing to insure that enough battery power is present to open or close the door for one cycle. If all is well, the TEST indicator will go out after about 15 seconds, and the red CHARGE indicator will come on. It will glow for 5-7 minutes, then will dim and go out completely (this assumes that the batteries were fully charged when you performed the test).
- Q4-5 How often is the battery pack tested?
- A4-5 In the self-monitoring pack, the batteries are tested immediately upon power-up and at least once every hour thereafter.
- Q4-6 Which battery pack, self-monitored or standard, does Horton recommend?
- A4-6 We strongly recommend that you stick with the standard version of battery pack unless there is a compelling reason not to. There are a variety of reasons as follows:
1. U.S. door operators typically use mechanical protection (e.g. breakouts) as the primary means for safety-to-life concerns - the battery pack operation is secondary.
  2. ANSI standards for automatic doors in the U.S. do NOT require periodic testing of battery packs.
  3. The battery manufacturers have stated that regular periodic testing is not only unnecessary, but it actually shortens the life expectancy of the batteries.
  4. Eliminating the self-test circuitry reduces complexity (and hence, price). Finally, reliability is also enhanced, since there are fewer components.
- Q4-7 What happens if the pack test falls?
- A4-7 A battery failure will move the door to the full open position. The door will stay open and the display will flash bF until the failure is corrected.

**\*\*\* MISCELLANEOUS QUESTIONS \*\*\***

- Q5-1 I arrived at the jobsite for troubleshooting, and the C2150 is flashing nS. The switch seems OK, and the yellow close monitor LED lights when the switch is tripped. What else could be wrong?
- A5-1 Anytime that nS flashes, the door is not arriving at the fully closed position. Check for a mechanical jam at some point In door closing. Also, this will normally never happen if the reversing sensitivity is adjusted properly - the door will recycle Instead when the obstruction is encountered. Find and correct the cause of the obstruction, then check the reversing sensitivity.
- Q5-2 When the door starts opening, it slows down almost immediately, then slowly Increases speed and eventually shuts off. The display flashes EF momentarily. Why?
- A5-2 This display means 'Encoder Failure.' The position encoder is not connected, or is defective. Check your encoder wiring and run the quick encoder test.
- Q5-3 When I try to store values, my control starts blinking dF and quits working until reset.
- A5-3 The control has failed and must be replaced.
- Q5-4 When I power up the control, the door refuses to move at all, but the display Indicates that something Is trying to happen. What do I check first?
- A5-4 If the door will not move at all, first check fuse F2 on the power supply. This fuse protects the high-voltage (motor) power supply. If F2 is blown, replace it with a slow-blow 3.15A 5x20mm fuse (T3.15A) - Buss type GDC3.15, or equal. Caution, disconnect power and wait 30 seconds before servicing the power supply assembly!! If F2 seems to be OK, check the motor and motor harness for an open motor. Finally, if both the motor and F2 appear to be good, replace the C2150 control.
- NOTE: If fuse F2 continues to blow at totally random intervals, there is a good possibility that the door is being locked manually without turning off the toggle circuitfirst. If Version 3.02 or earlier is installed, upgrading to a later version will normally circumvent this problem with the new jam sensing feature. See question 5-15 for more details.

Q5-5 I replaced fuse F2, and the new fuse immediately blew as well. What next?

A5-5 Unplug the 5-conductor harness connecting the power supply to the control, replace fuse F2 again, and apply AC power to the power supply without the control attached. If the fuse pops again, the power supply should be replaced. If the fuse holds, check the motor and motor harness assembly for a defective motor or a short between motor and frame ground. If the motor seems OK, replace the C2150 control.

**Q5-6 How do I know what software version I have?**

A5-6 Reset the control. The version number will be displayed sequentially in two parts, as in 3. and then 03 (Version 3.03).

Q5-7 Why is an open speed of '0' faster than a close speed of '5'?

A5-7 The control is working properly. In order to get maximum adjustment range and limit maximum closing speed, an open speed of '15' is approximately 140VDC, but a close speed of '15' is only around 80VDC.

Q5-8 I accidentally shorted the +24VDC control output to ground, and the whole control went dead. What do I check?

A5-8 Fuse F3 on the power supply assembly protects the low-voltage wiring. Replace it with a slow-blow 3.15A 5x20mm fuse (T3.15A) - Buss type GDC3.15, or equal. Also, if you have a battery pack, fuse F1 on the battery pack will be blown. Replace it with the same type fuse. Caution, disconnect power and wait 30 seconds before servicing the control fuses!!

**Q5-9 How do I tell which connections on the C2150 control are common?**

A5-9 Any terminal number with a period after it (4. 7. 9. 11. 15.) is a common connection. These are all tied together internally.

Q5-10 How do I tell which connections are for power?

A5-10 The two +24V power terminals (1 & 5) have a small "DC power" symbol (-) next to them for your convenience.

Q5-11 Is the control common tied to ground inside the control?

A5-11 Not directly. To protect against noise, there is an AC path (10Kohm in parallel with 0.1 p F, for those who are technically minded) from control common to frame ground, but if you install a beam set or motec that has its case grounded, or accidentally short from common to the door frame, everything will still work normally.

Q5-12 Is there a battery that saves the door parameters? Do I need the optional battery pack to save the parameters?

A5-12 To both questions, no. Control parameters are saved in a special chip called an E 2PROM, which does not require a battery. When you save your parameters in the EIPROM, they will be retained for the lifetime of the control.

Q5-13 What are the input characteristics?

A5-13 All inputs are well protected against EMI and random triggering, and are +5VDC levels. For an input to operate, the resistance must typically drop below 780ohm. A large amount of hysteresis protects against jittering - for the same input to release once it's triggered, the resistance must rise above 1800ohm or so. Typical current requirement per input is 8mA, and the inputs will not respond for about 2.5mS following activation. These requirements are well suited to the vast majority of applications with dry contact signals (e.g. mechanical switches, motecs, card readers, safety beams).

Q5-14 I need interlocked operation of two or more doors with C2150 controls and industrial door software. Is this supported?

A5-14 Yes. First, you must add a lock relay kit to each door, even if you don't have locks. Use one relay contact on the lock relay to jumper pin 13 (SW-B) of CN2 to common; set both LL and UL to  $\underline{\text{ON}}$  so the lock relay will operate when the door opens. Next, run a two-wire bus cable between each control - pin 13 is one of the wires, and common is the other. (All of the control pin 13s will be connected together, and all of the control commons as well.) When a door is actuated, all the yellow SW-B "busy" indicators in every control will light. If an actuate signal for any other door is presented, its display will indicate IL (InterLocking busy) and it will not open until the door that is currently open finishes closing. At this time, the SW-B "busy" indicators will go out, and any other door may be opened. Note that this is "Level II" interlocking, where additional door requests are not memorized, but are simply ignored when a door is already open. If Level III true memory interlocking is desired, it is also available as an extra-cost option - consult the Horton factory for details.

Q5-15 The door begins opening, then immediately stops and flashes J1, followed by d1. It then cushions back closed after the sensors drop out. Why?


A5-15 Beginning in Version 3.03, the J1 (Jam 1) error appears any time that the door is starting to open or close and encounters a loss of mechanical motion for more than 0.1 second. This feature provides protection against blowing fuse F2 when the door has been locked manually (thumb turn, etc.) without turning off the toggle switch circuit. Other possible causes of the J1 code appearing include a defective or unplugged position encoder, a slipping encoder wheel, open motor, or no power to the motor circuit.

It is possible for this feature to cause problems if the open or close speeds are turned down enough to be extremely slow, although extensive testing at the plant has not revealed any difficulties. If a situation does come up where you are getting false J1 indications, the JS (Jam Sensing) parameter may be turned of to defeat this feature. JS defaults to ON in Version 3.03 software.

The J1 error is normally self-resetting; however, note that if any motion detectors or safety beams are held actuated after the error occurs, the door may have to be pushed open following manual unlocking, to let the first customer (or owner) in. When the detection devices time out, everything will be back to normal.


NOTE: If the C2150 control is retrofitted to an earlier operator that uses a 3ppr "paddle wheel" encoder, the JS parameter will probably need to be turned of. These encoders do not generate pulses quickly enough to prevent timing out the software and generating a false J1 indication. If the customer persists in trying to run the door with it locked, your only recourse is to replace the motor/gear drive with an updated assembly having the 8ppr encoder. You may then leave the JS parameter  $\underline{\text{ON}}$  to protect against the situation.



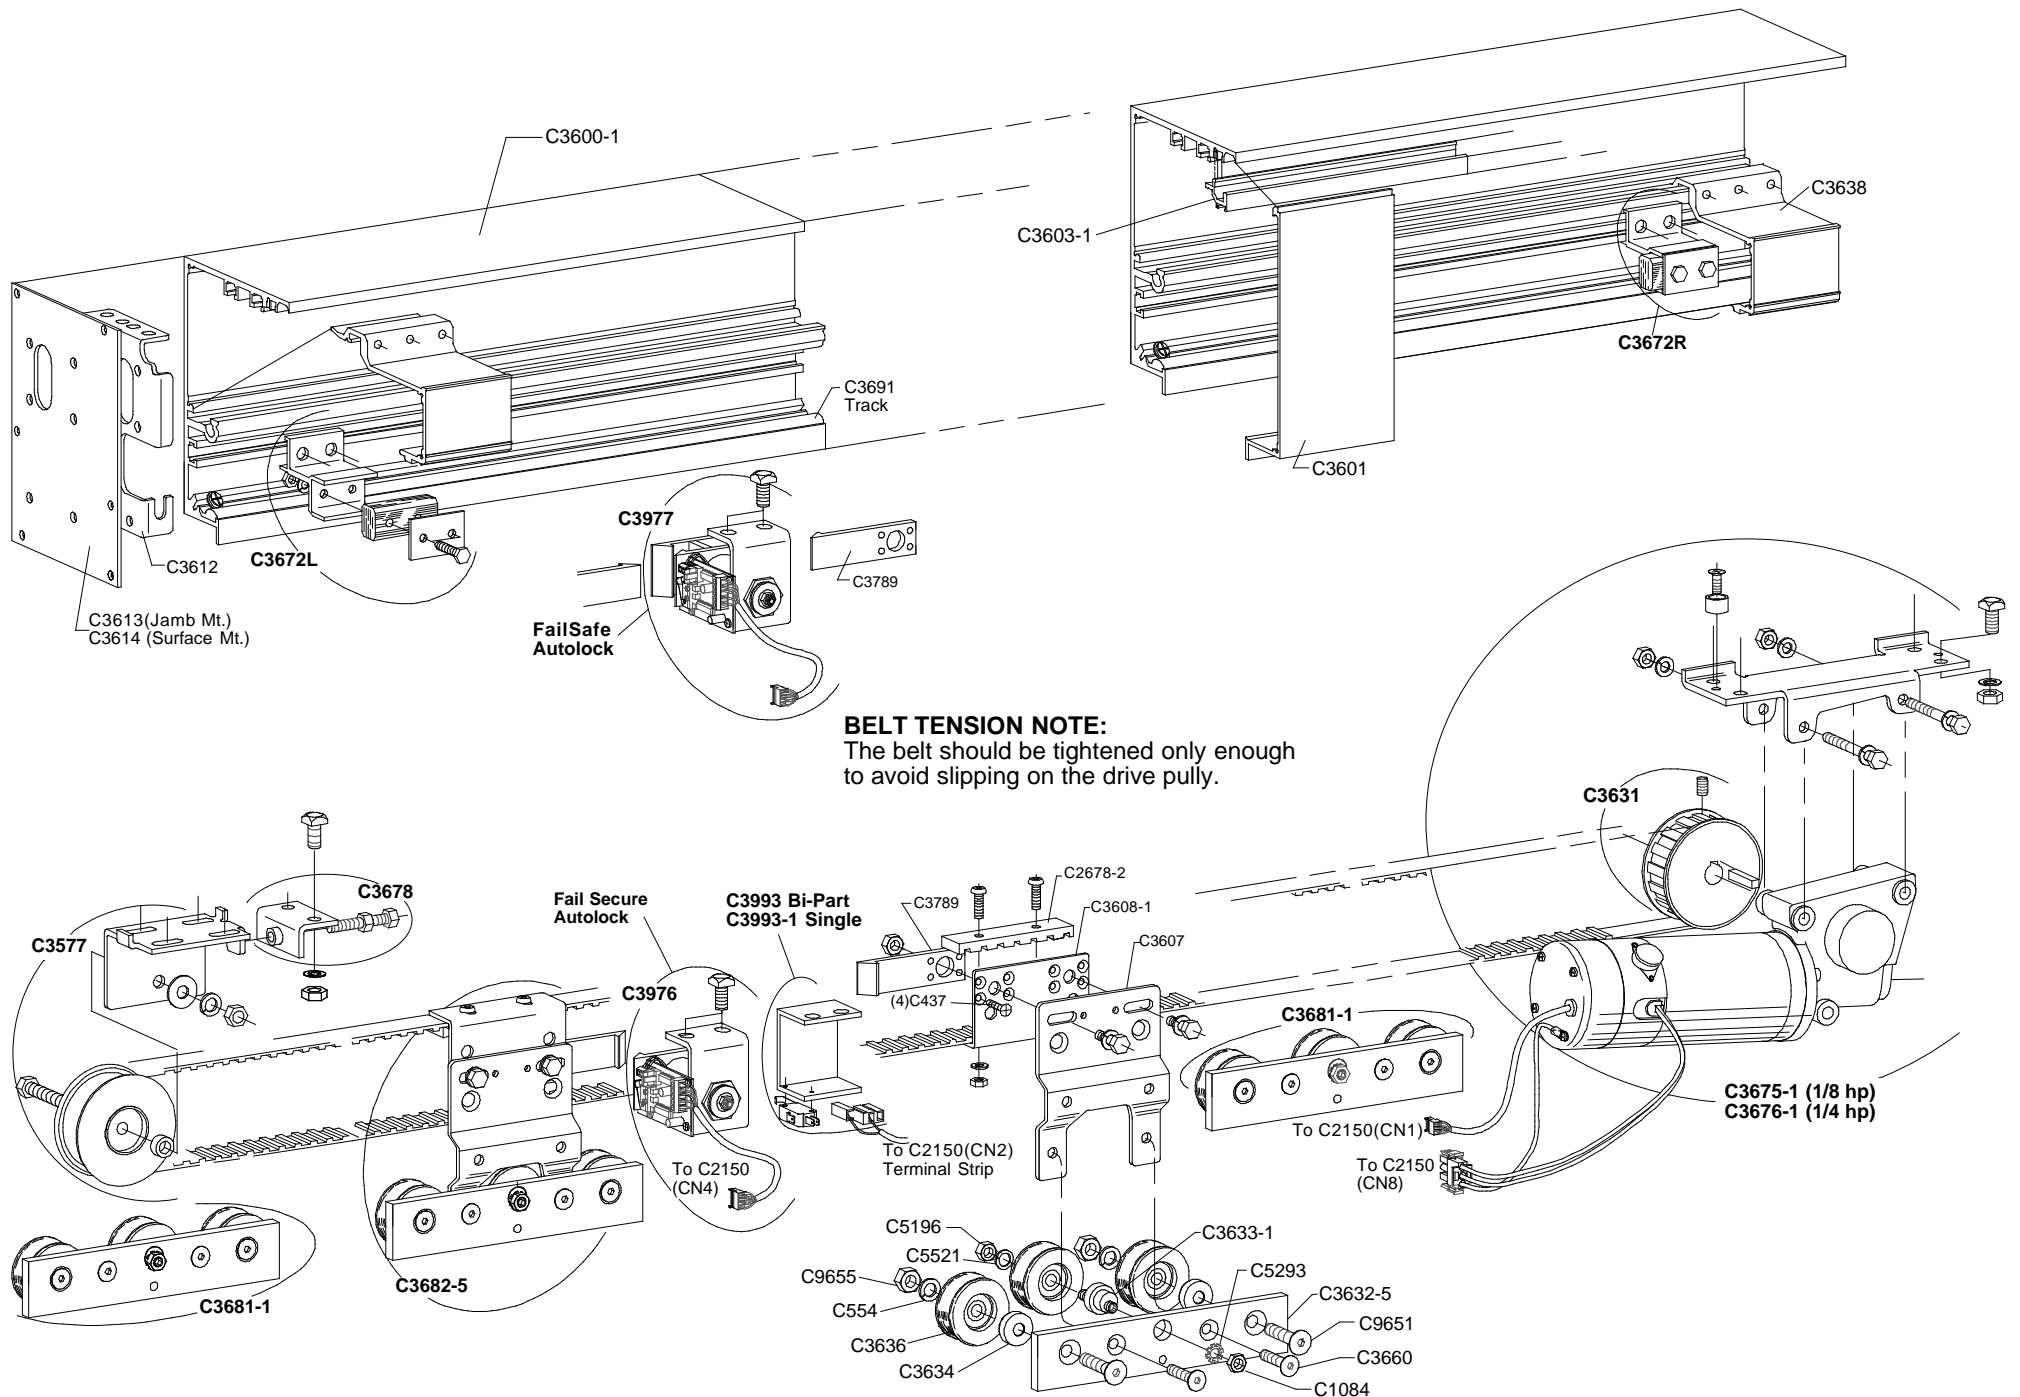


**BELT TENSION NOTE:**  
 The belt should be tightened only enough to avoid slipping on the drive pulley.

H603.9

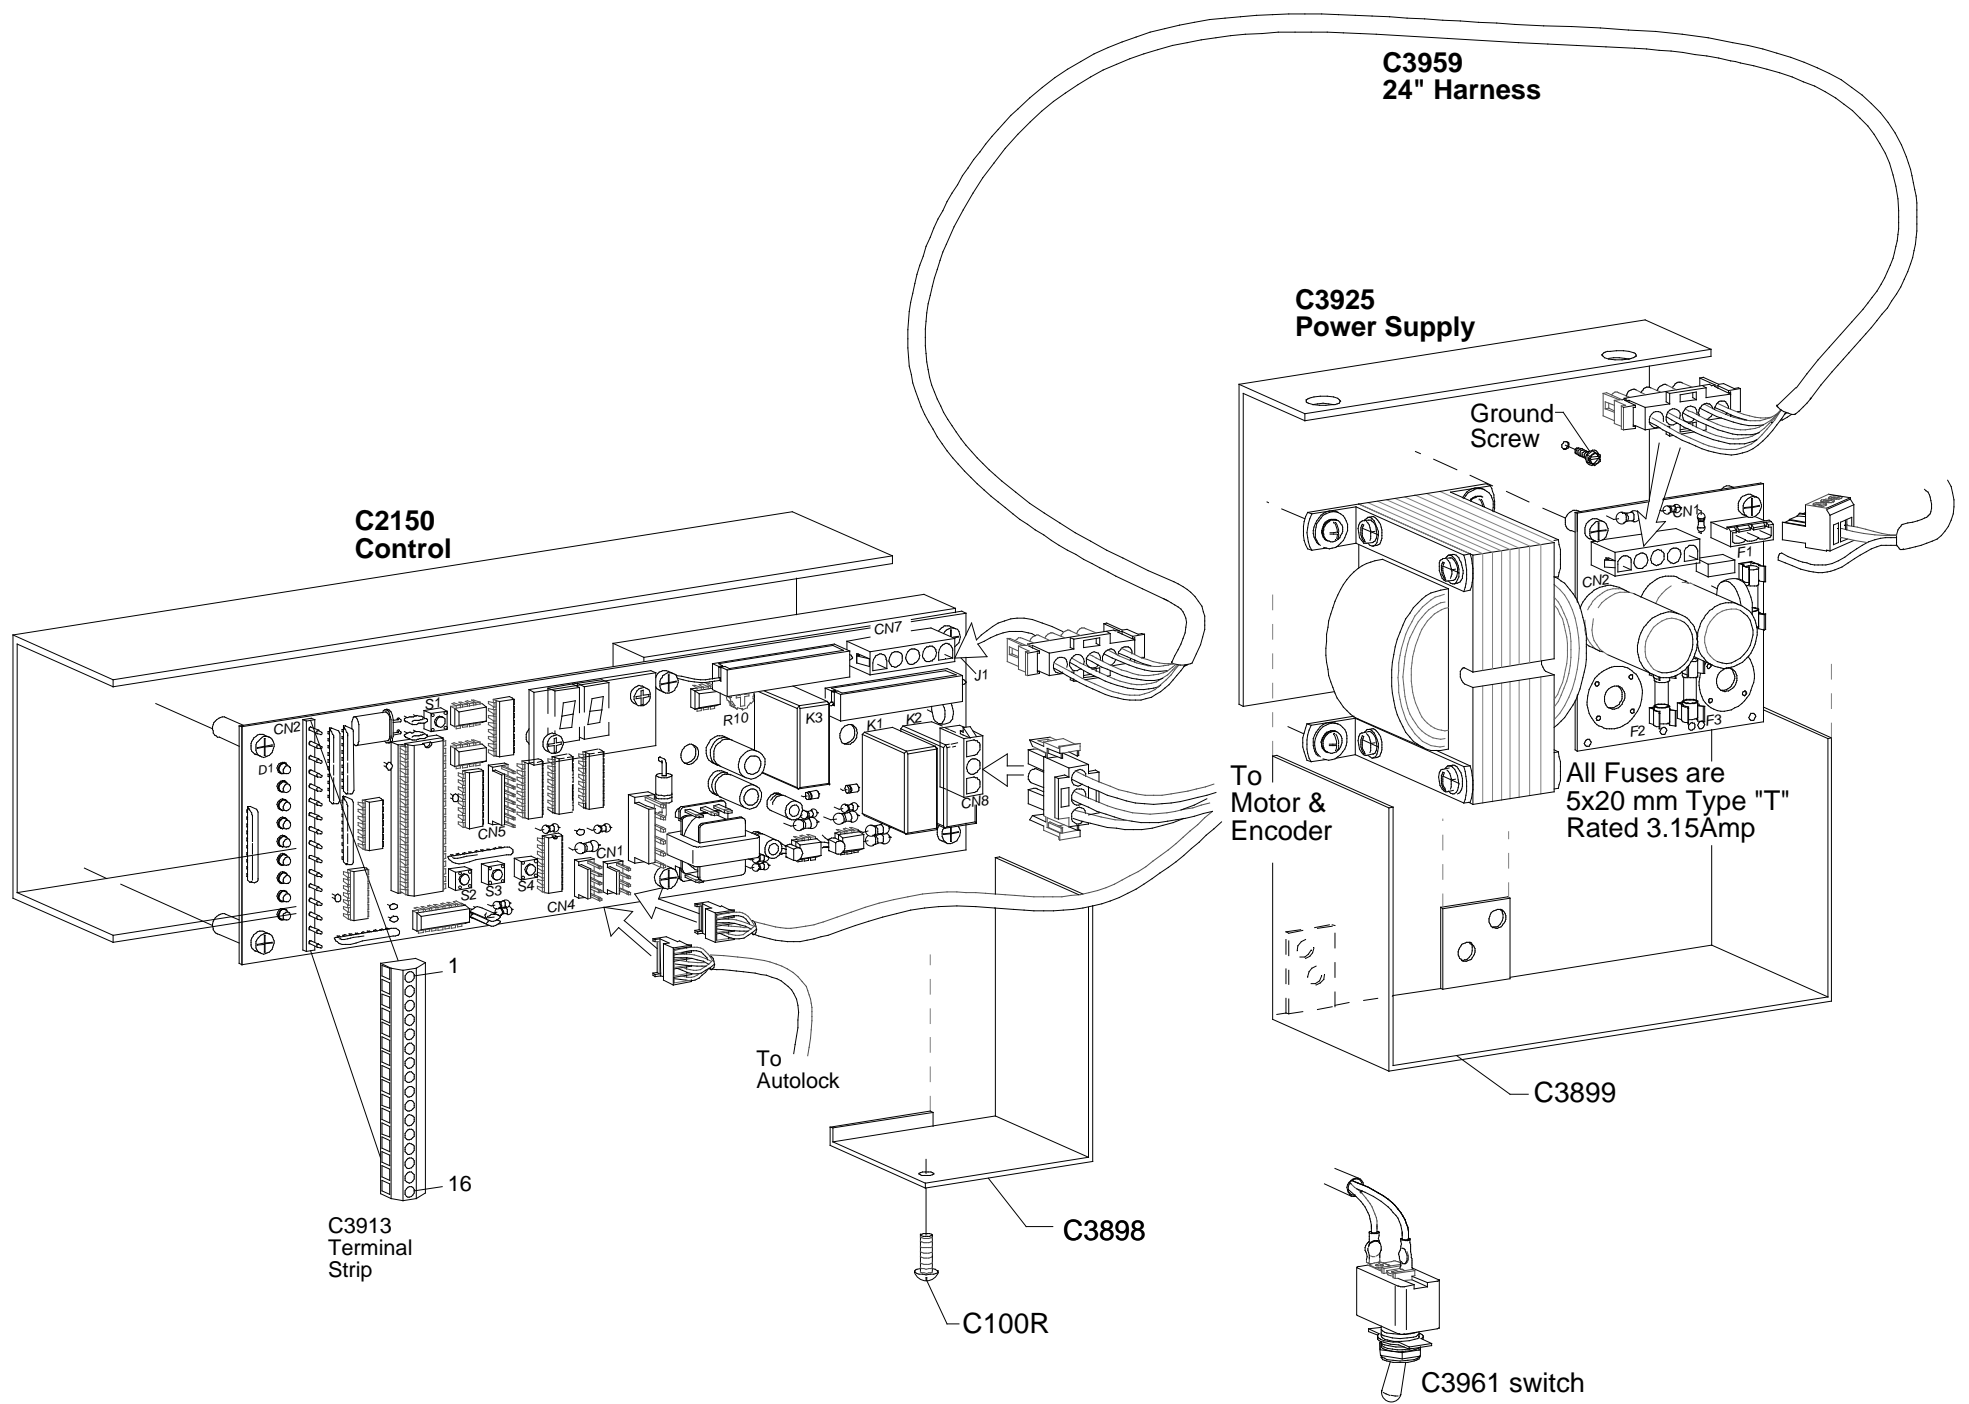

### C2150 MICROPROCESSOR CONTROL

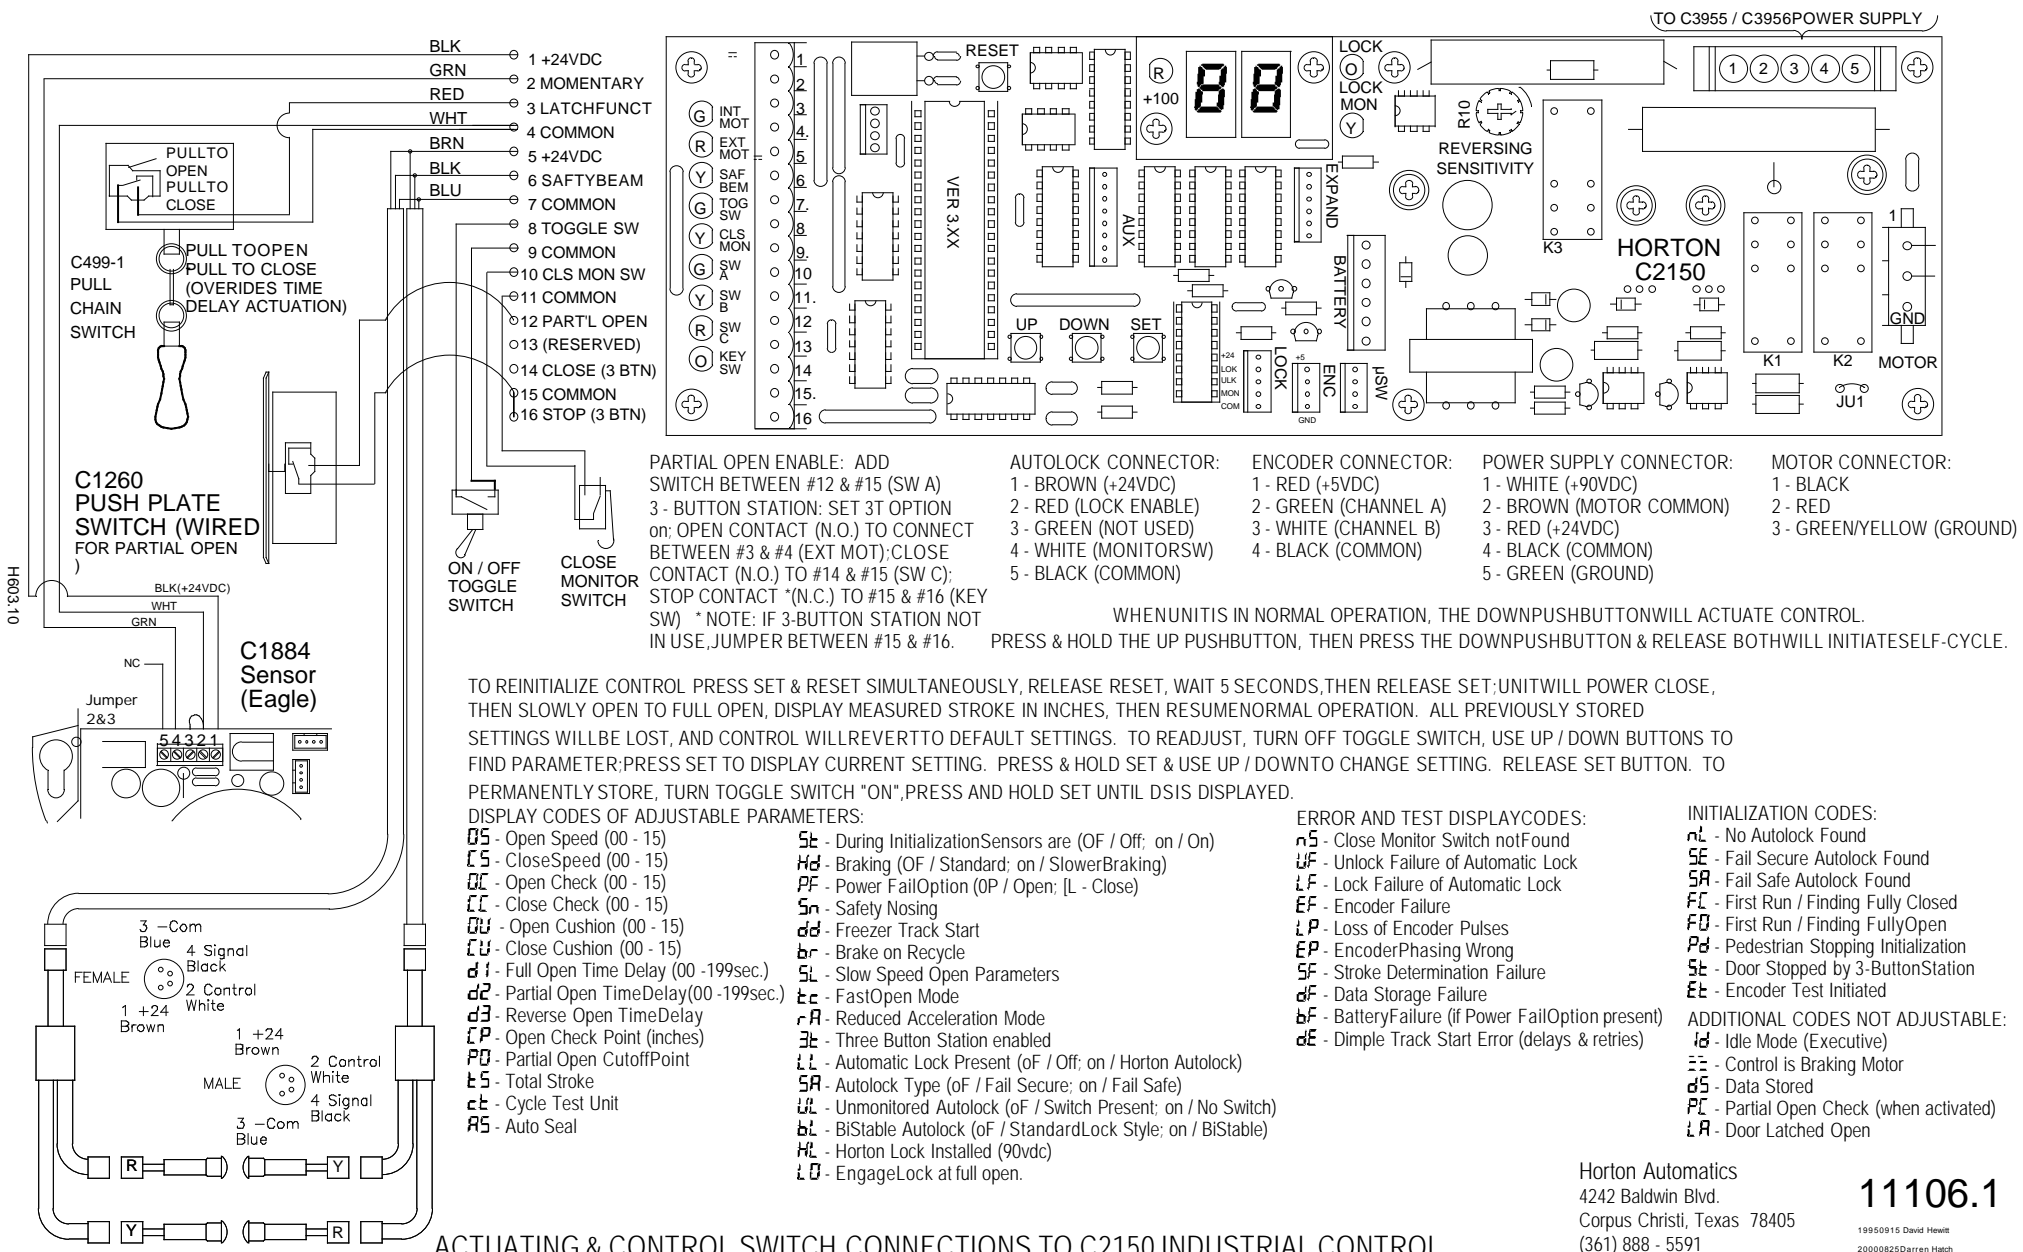

Horton Automatics  
 4242 Baldwin Blvd.  
 Corpus Christi, Texas 78405  
 (361) 888 - 5591

**11106.1**

19950915 David Hewitt  
 20000825 Darren Haach



4242 Baldwin Boulevard  
Corpus Christi,  
Texas, U.S.A. 78405-3399  
Tel: 800-531-3111, 361-888-5591  
Fax: 800-531-3108, 361-888-6510  
Internet: <http://www.hortondoors.com>

**Horton Automatics, Ltd.**  
Unit A, Hortonwood 31  
Telford, Shropshire, England TF1-7YZ  
Tel: 01952 670169, Fax: 0192 670181  
International Tel: ++44-1952-670169  
International Fax: ++44-1952-670181

**A Division of Overhead Door Corporation, A Sanwa Shutter Company**

Form H603, OCT 2002, printed in U.S.A.

Horton Automatics reserves the right to improve the product and change its specifications without notice.