

DORMA

ED 100/250

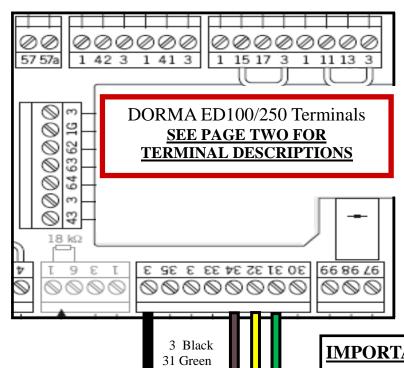

32 Yellow 34 Brown

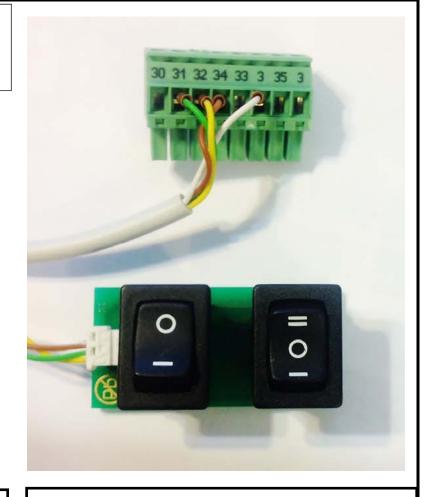

IMPORTANT NOTICE:

Do not change the "PS" setting should remain at the default setting of "0".

Disconnect the existing switches on the end of the operator or make sure they are both set to the "0" position before installing the cover.



Wiring Diagram for: DORMA ED100/250 Single with Professional Cover Switch Assembly

Prepared by: Paul Durgin (770-366-2575) on 05/04/2014

