


Series 2000

Linear Drive Slide Door

INSTALLATION INSTRUCTIONS

To be used with H201 C2150 Ver.1 Control Setup Instructions

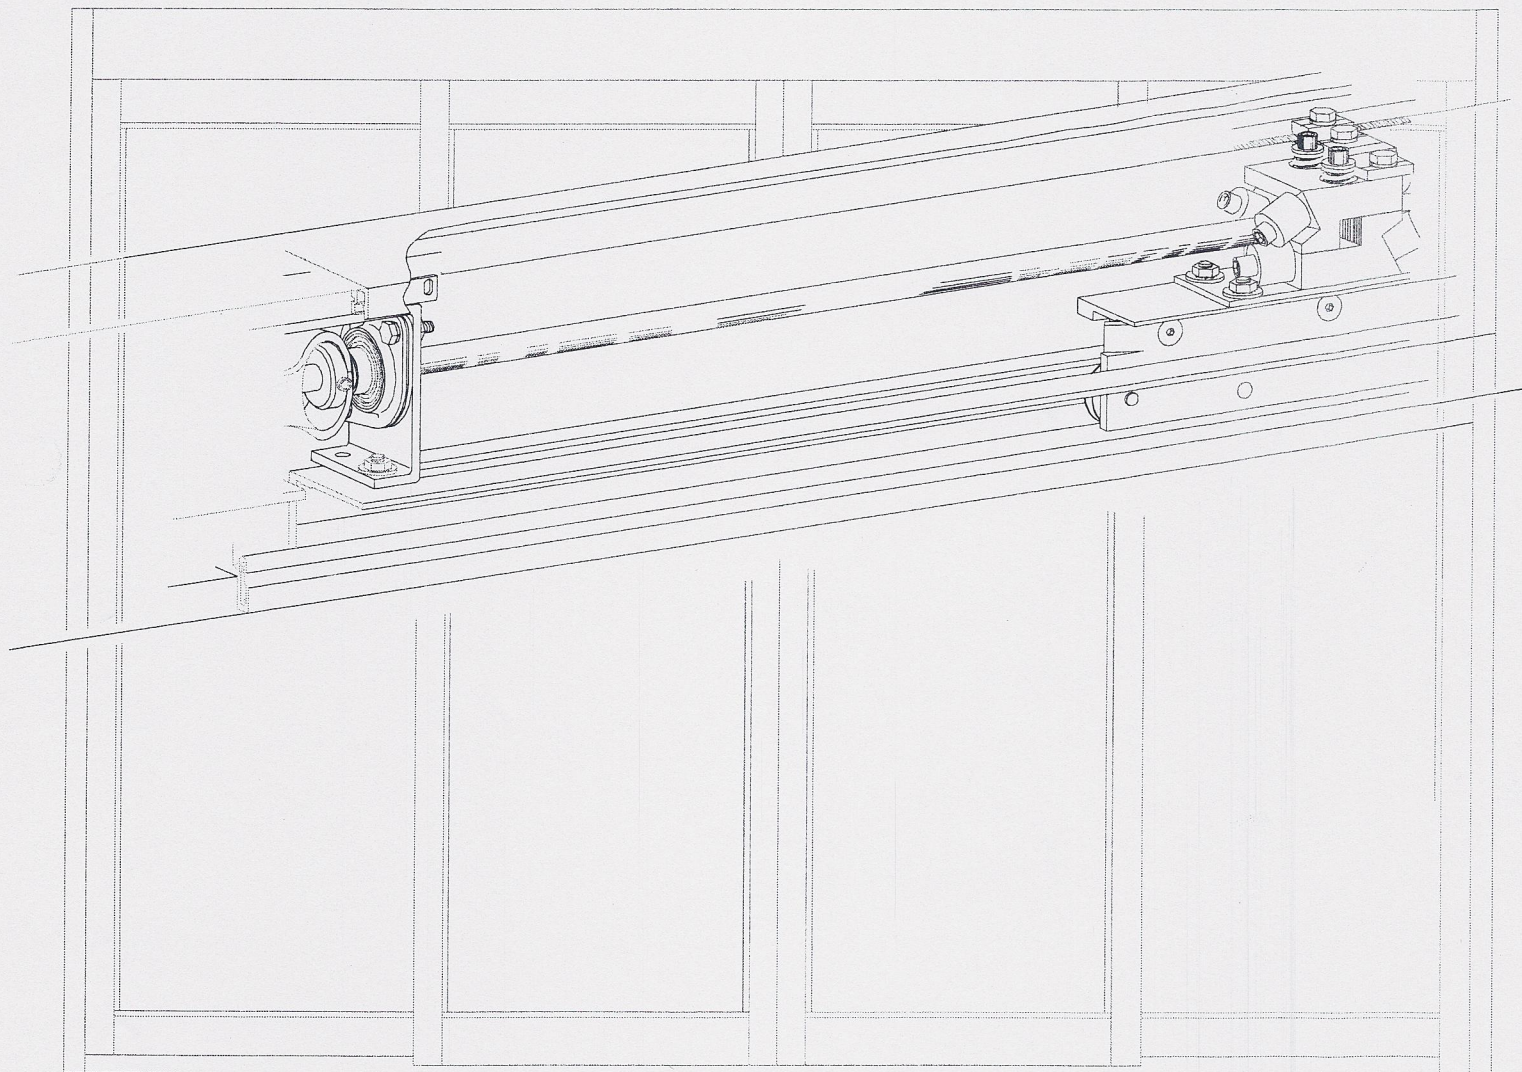

SERIES 2000 ELECTRIC SLIDING DOOR INSTALLATION INSTRUCTIONS

1. INSTRUCTIONS TO INSTALLER


- This door is to be installed by a trained and experienced installer with knowledge of local codes and ANSI A156.10 standards for power operated doors.
- To ensure safe and proper operation, the door must be installed and adjusted to conform to Horton Automatics recommendations, all code requirements and ANSI A156.10.
- If there are any questions about these instructions, call Horton Automatics Technical Assistance.

INFORMATION TO BE PROVIDED BY THE DISTRIBUTOR TO THE OWNER


- After installation instruct the owner on the safe operation of the door.
- Present the Owners Manual M300 and explain how to perform the daily safety check.
- Location of power on / off switch.
- Necessary warnings not covered in these general instructions.
- Date equipment shipped from Horton Automatics.
- Date equipment placed in service.
- Horton Automatics' invoice number for warranty reference.
- Equipment type.
- Accessories included.
- Phone number to call regarding problems or request for service.
- **Give caution** to owner: if a potentially hazardous situation is suspected, the door should be taken out of automatic service until a professional inspection is made and the problem is corrected.

2. GENERAL REQUIREMENTS

- Power: 120 VAC, 60Hz, 15 Amp service (in conduit) to the "J" box inside the header of each unit.
- Non North American voltages can be 240 VAC, if so be sure the operator has a 240VAC power supply.
- Power may be brought in through the top of the jamb on perimeter mount units or in through the back of surface mount units.
- For remote switch locations, routing of low voltage class II wiring (in conduit) to the operator controls will be required.
- Remote switch locations should be predetermined and wired before installation begins.
- Opening size should be 1/4" taller and 1/2" wider than the unit / frame.
- The opening must be plumb and level, including the threshold area.
- Door panels may be glazed before or after installation.

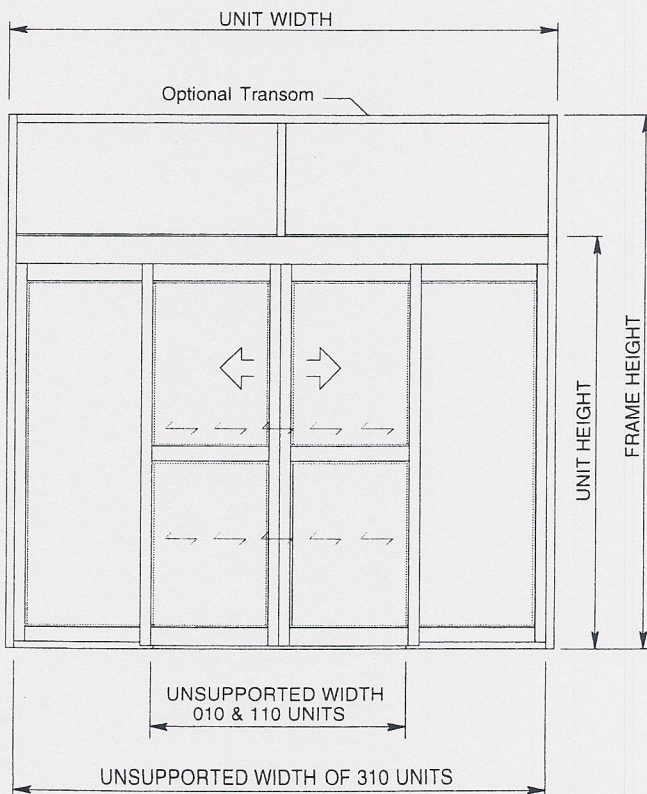

POWER INPUT LOCATIONS

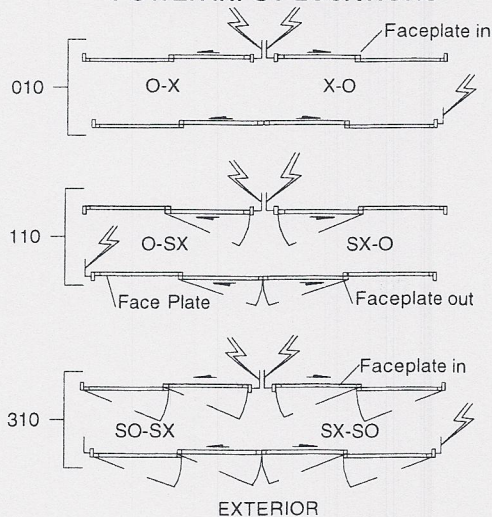

LOAD LIMITS & SIZES OF UNSUPPORTED TRANSOMS


Unsupported Width	Allowable Transom Weight
up to 8'	600 Lb.*
up to 10'	250 Lb.
up to 12'	100 Lb.

Supporting dead weight on headers longer than 12' is not recommended.

*For loads greater than 250 lb. 1/4" screws instead of #10 screws should be used secure the header to the jamb.

3. INSTALLING FRAME

Take care that the frame is not racked. Wood shingles will be needed to shim the unit. All the fasteners shown below are provided with each unit. If these are inappropriate, alternate fasteners are shown in the fastener chart. Route power supply wiring and low voltage wiring.

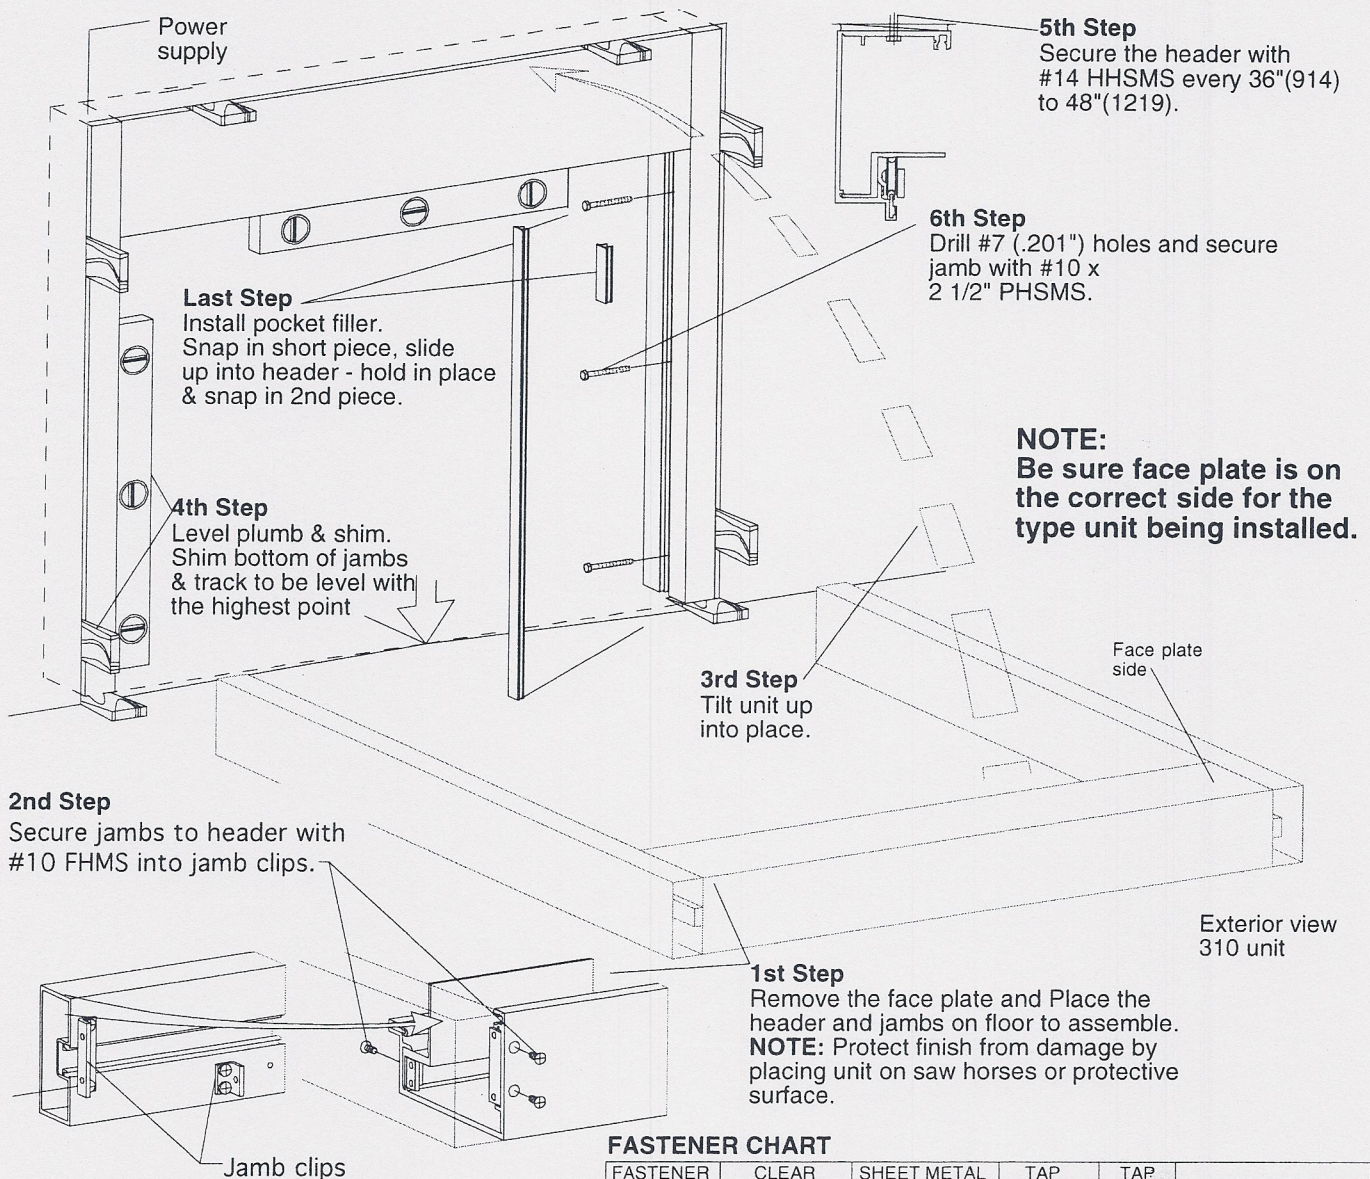


FASTENER CHART

FASTENER SIZE / TYPE	CLEAR DRILL / C'SINK	SHEET METAL DRILL HOLE	TAP DRILL	TAP SIZE	MASONRY
#6 SMS & #6-32 MS	#25(.149) & #6 c'sink	#31(.120)	#36(.106)	#6-32	
#10 SMS & #10-24 MS	#7(.201) & #10 c'sink	#21(.159)	#25(.149)	#10-24	Drill 1/4"(.25) & use C1423 green anchor
#14 SMS & #1/4-20 MS	#F(.257) & #14 c'sink	3/16(.187)	#7(.149)	1/4-20	Drill 5/16"(.312) & use C1424 blue anchor

4. INSTALLING FLOOR GUIDES

Bottom guides will vary with the unit type. The 3 basic types are shown below. The C315 / C386-1 filler is used with threshold only.

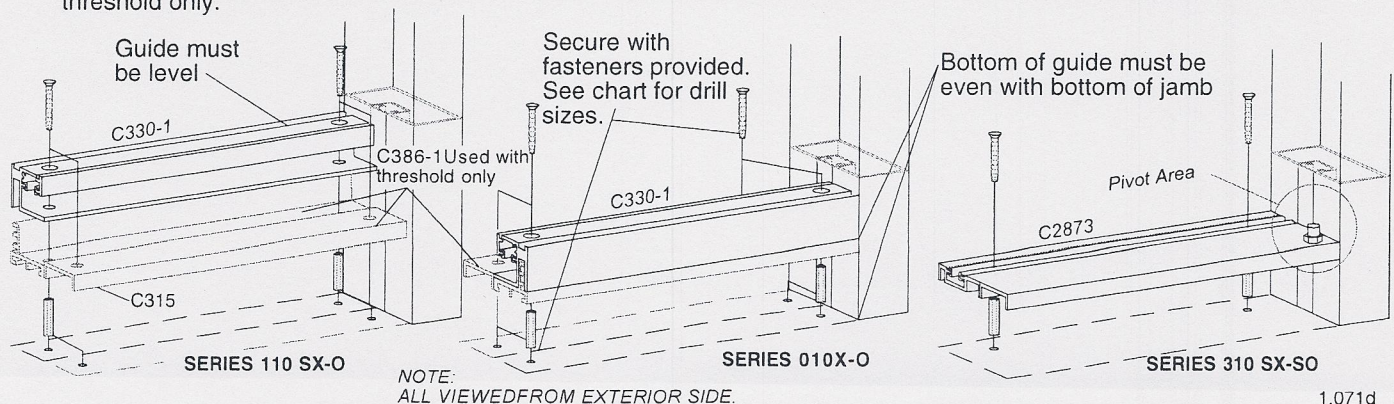

5. INSTALLING SIDE PANELS

2 types of side panels are shown "O" fixed and "SO" swing panel. If panels are to be glazed before installation see section 7.

Panels come assembled and prewired from the factory, unless side panels are extra large.

TYPE 010 OR 110 "O" PANEL

1st Step

Position the "O" panel, as shown, in the C330-1 bottom guide about 1" from the jamb to clear security stud.

2nd Step

Connect safety wiring harness from door panel to harness in header. Make connection inside door panel. Place wire in the notch before tilting panel into position.

Security stud

3rd Step

Slide panel against the jamb & match drill with #21 (.159) bit thru existing holes into top rail. Secure with #10 screws.

NOTE: there will be a small space between top of panel and bottom of header.

110
EXTERIOR

010
INTERIOR

"O" Panel

C330-1

Use C386-1 /C315 only with threshold applications.

Safety beams

Ball catch

1st Step

Install weather strip before mounting panel.

TYPE 310 "SO" PANEL

2nd Step

Place "SO" panel in open position & rotate closer arm under header. Secure "SO" closer with #10 screws.

"SO" Cutoff switch in header

Closer arm

"SO" Cutoff magnet

Ball catch

CAUTION:
Closer arm is spring loaded. Take precautions to avoid injury.

Connect prewired safety beam door harness to harness in the header. Take care not to damage wires as door is put into place.

"SO" Panel

EXTERIOR VIEW

2nd Step

Place "SO" Panel on bottom pivot.

6. INSTALLING SLIDE PANELS

G200.4

3 types of slide panels are shown 010, 110 & 310. If panels are to be glazed before installation see section 7.

Height
adjustment

2nd Step
Connect the hanger to
the wheel carriage.
Adjust height as required

**TYPE 010
"X" PANEL**

1st Step
Remove end cap.
Slide bottom guide into track.
The panel may need to be angled
to start pins into the guide.

"X"
Panel

"O"
Panel

End
cap

2nd Step
Connect the breakout to
the wheel carriage.
Adjust height as required

**TYPE 110
"SX" PANEL**

1st Step
Remove end cap.
Slide bottom guide into track.
The panel may need to be
angled to start pins into the
guide.

"SX"
Panel

"O"
Panel

End
cap

NOTE:

Always loosen height adjustment screw before installing or removing carriage bolts. Height adjustment screws should not be used to raise or lower the door - only to hold it in place.

Install threshold after all panels are in place.

2nd Step
Connect the breakout to
the wheel carriage.
Adjust height as required

Adjust interlocks to
line up vertical rails.

Set flush with
back of rail.

**TYPE 310
"SX" PANEL**

"SX"
Panel


"SO"
Panel

1st Step
Place guide pin in the track.
The door panel may need to
be angled to start.

UNITS ARE VIEWED FROM THE EXTERIOR SIDE

7. TYPICAL GLAZING AND SQUARING (SX-SO single slide shown)

Door panels may be glazed laying down flat or installed in the frame. The latter method is referred to below.

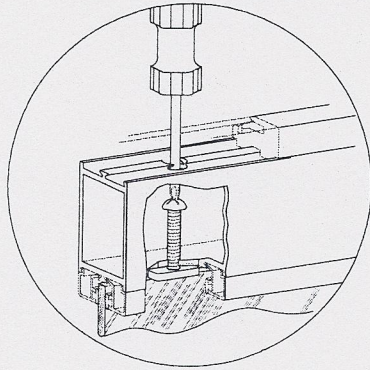

1st Step

Always glaze the "SX" panel with the torsion bar in the broken-out position.


NOTE:

Do not remove glazing blocks from door panels or **glass breakage will occur** when the leveling screw is adjusted.

2nd Step


Use the leveling screw to bring the panels to exact square.

The "SX" & "SO" are spring loaded and will not stay in open position with out being held.

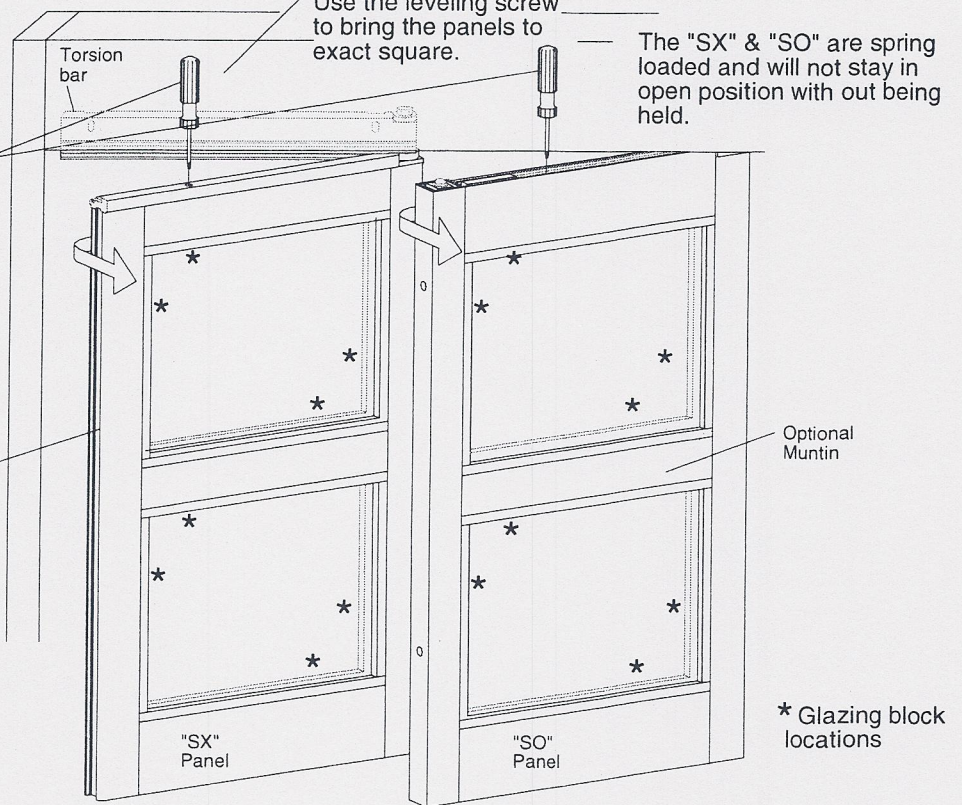

8. STANDARD LOCKING

A lock cylinder is included with door. UL requires that the inside of the lock be equipped with a thumbturn. Local codes may vary.

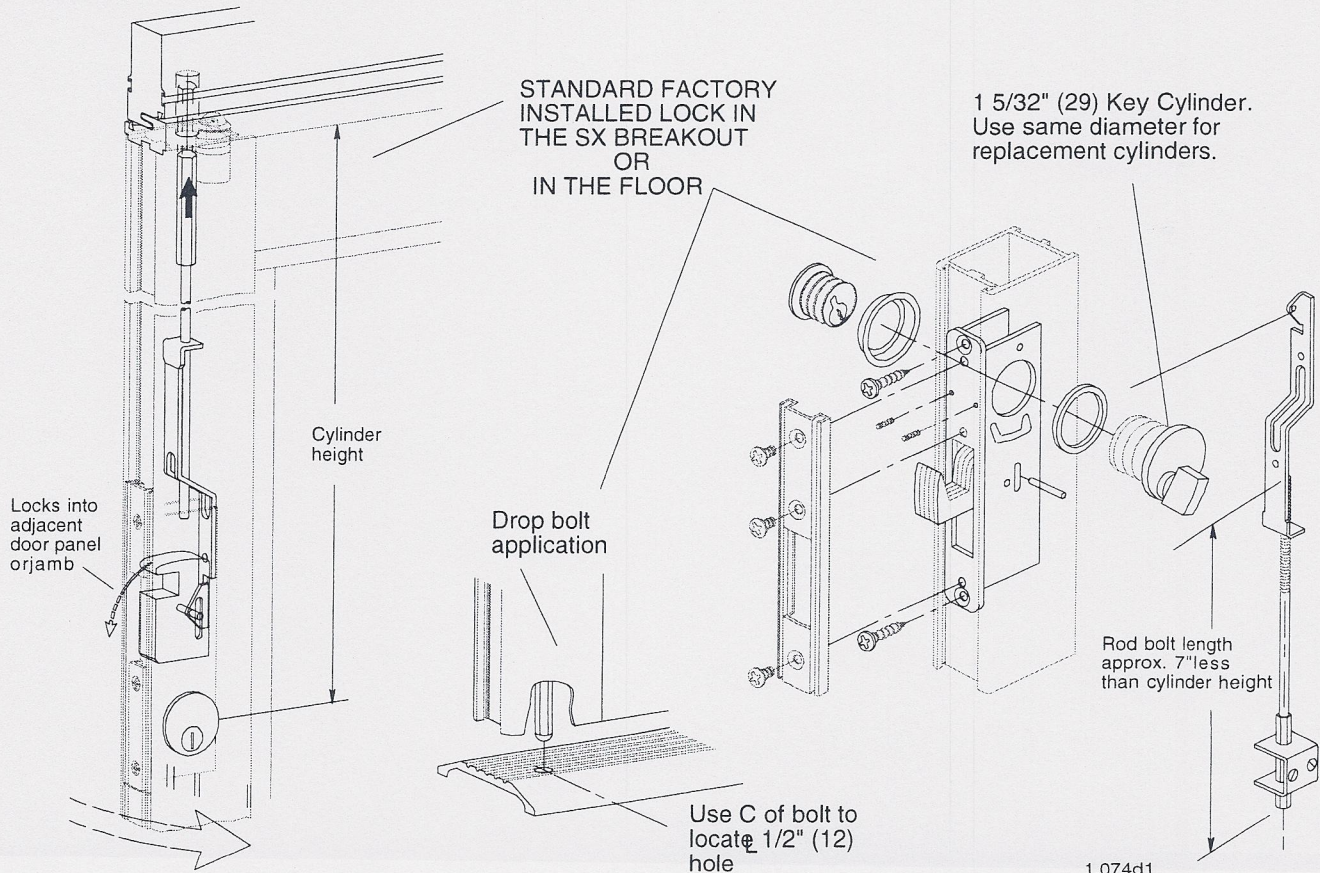

9. AUTOMATIC LOCKING (OPTIONAL)

The Fail Safe and Fail Secure Autolocks will only inhibit the slide action of the door not the "swing" or breakout action. See section 8 for standard locking. Autolocks are installed at the factory. Retrofit units will be supplied with instructions.


GENERAL AUTOLOCK OPERATION

- Open signal is received by control (C2150)
- Unlock signal is sent to Autolock
- Solenoid retracts lockbolt
- Door opens and closes
- Solenoid extends the lockbolt when door is fully closed and the keeper is in locked position
- Door (slide motion only) is locked

LINEAR DRIVE AUTOLOCK

C2176-5 Fail secure (if power fails the door will remain locked)

C2176-5 Fail safe (if power fails the door will unlock)

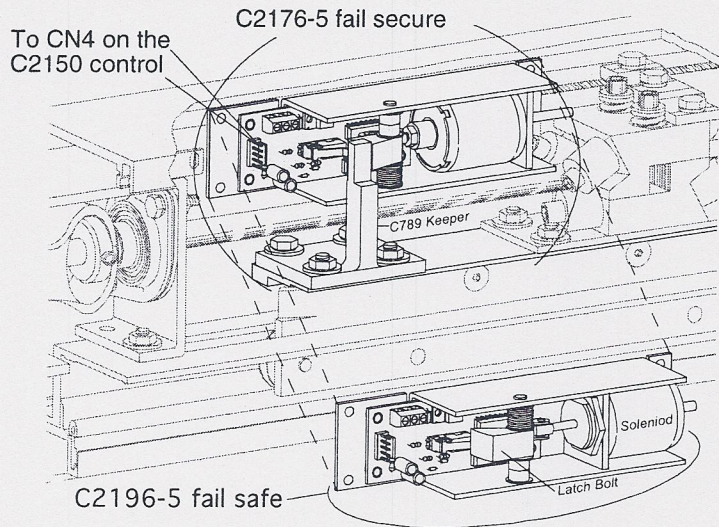

10. ACTIVATING DEVICES

- Activating switches must be located where door operation may be observed by the person actuating it.
- ANSI standard requires a motion detector be placed on each side of the door and be active while the door is open (except the last 6" 150mm of closing). The detector pattern may be reduced to 24" (610) on the control side for one-way traffic.
- Mount sensors on the door header or above at a height of 7ft (2134) to 8ft (2438) from the floor. Sensitivity and detection area may not meet ANSI standards if detector is placed higher.
- Walk test the pattern from various angles and speeds.
- Adjust the sensitivity and pattern of the motion sensor as per ANSI A156.10 See drawing below for pattern and location. See instructions supplied with the sensor.

NOTE: Never decrease the sensitivity or pattern so it will not detect slow moving traffic.

- The motion detector time delay should be set to a minimum of two seconds cumulative with C2150 control before the door begins to close. Three seconds or more is recommended by Horton Automatics.


11. MOTION SENSOR PREP

1st Step

Drill hole in faceplate for wiring and mount motion sensor with sheet metal screws. No more than 7ft to 8ft above the floor. Drilling template is provided with motion detector. Route wiring to avoid moving parts.

2nd Step

Route wiring through faceplate and wire way to C2150 control

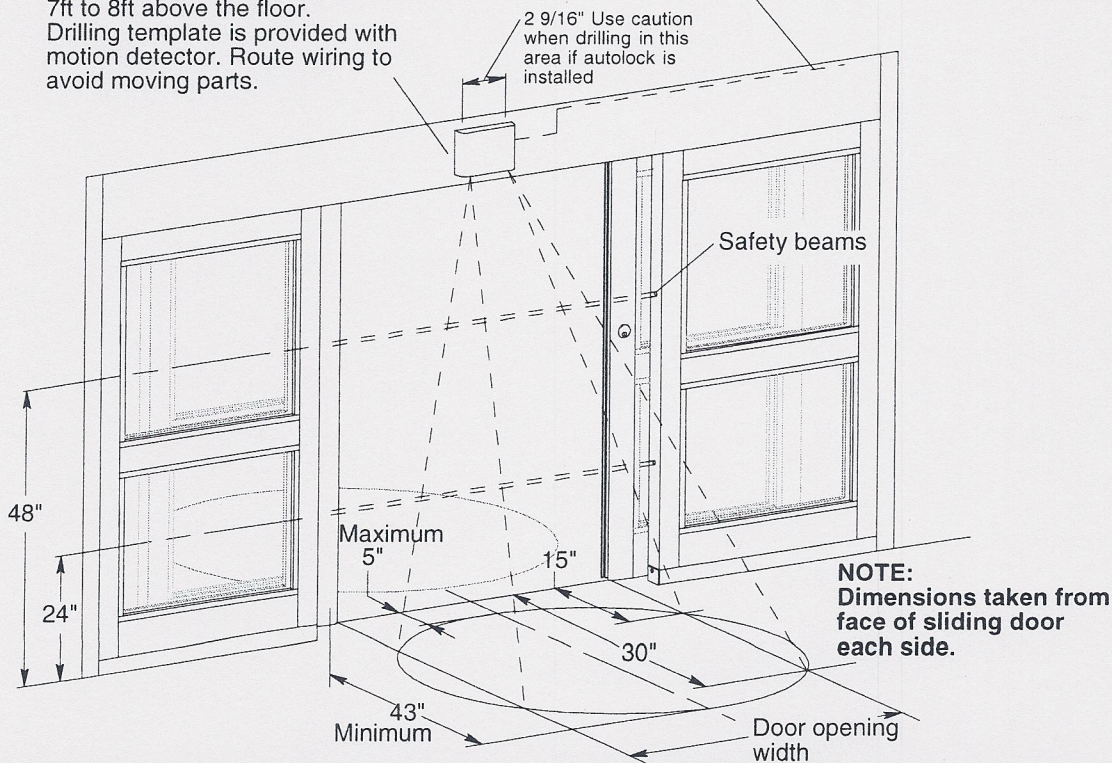

12. SAFETY CONSIDERATIONS

To comply with Underwriters' Laboratories Safety Requirements (UL 325), ANSI A156.10 and pedestrian safety, horizontal sliding doors must be adjusted within the following requirements and guidelines.

CLOSING SPEED

- At no time should the door close faster than 1ft per second or close completely in less than 3 seconds for door panels weighing up to and including 160 lbs 73kg.

CLOSING FORCE

- The force required to stop the door should not exceed 30 foot pounds (133N).

REVERSING

- The reversing circuit of the C2150 must be adjusted to reverse when a maximum force of 28 foot pounds (38N) is exerted to prevent the door from closing.

TIME DELAY

- The time before closing should never be less than 2 seconds. 3 seconds or more (after activating zone is clear) is recommended by Horton Automatics.

For set-up and trouble-shooting

SEE HORTON PUBLICATION H202 FIELD QUICK START INSTRUCTIONS.

NOTE: After adjustments are completed be sure the faceplate is secured with screws into the support brackets.

THRESHOLD PROTECTION

- All sliding doors should be installed with a minimum of two presence detectors in the threshold area. Horton Automatics sliding doors are supplied with dual safety beams.
- Motion detectors must be set up as per section 10 on previous page.

13. DECAL APPLICATION

C7280

Place on entry side of slide panels on doors using pushbutton entry. To meet knowing act ANSI standard.




C1630-2

For 2-way traffic place one on each sliding panel. For 1-way traffic use C1631-3 (sent with unit)



C1631-3

For 1-way traffic place the side shown toward control side of door.

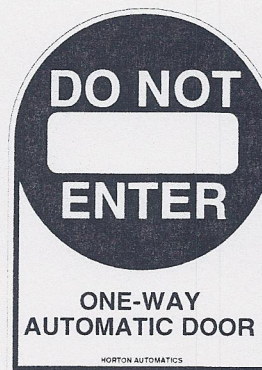

C1690-1

Daily safety check. Place near on / off switch at eye level.


C1634

Place on sidelites. (sent with unit)



Locate decals on the center line of each panel at elevation shown.


58"(1473)
± 5"(127)
48"(1219)

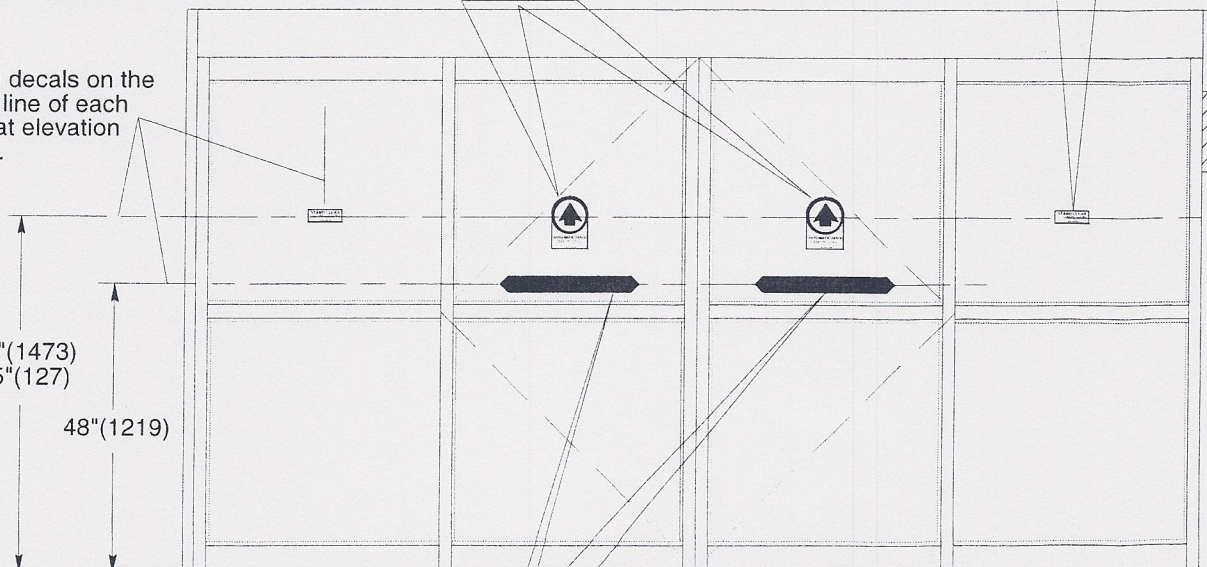

C1682

Place on exit side of breakout panels. (sent with unit)


IN EMERGENCY PUSH TO OPEN

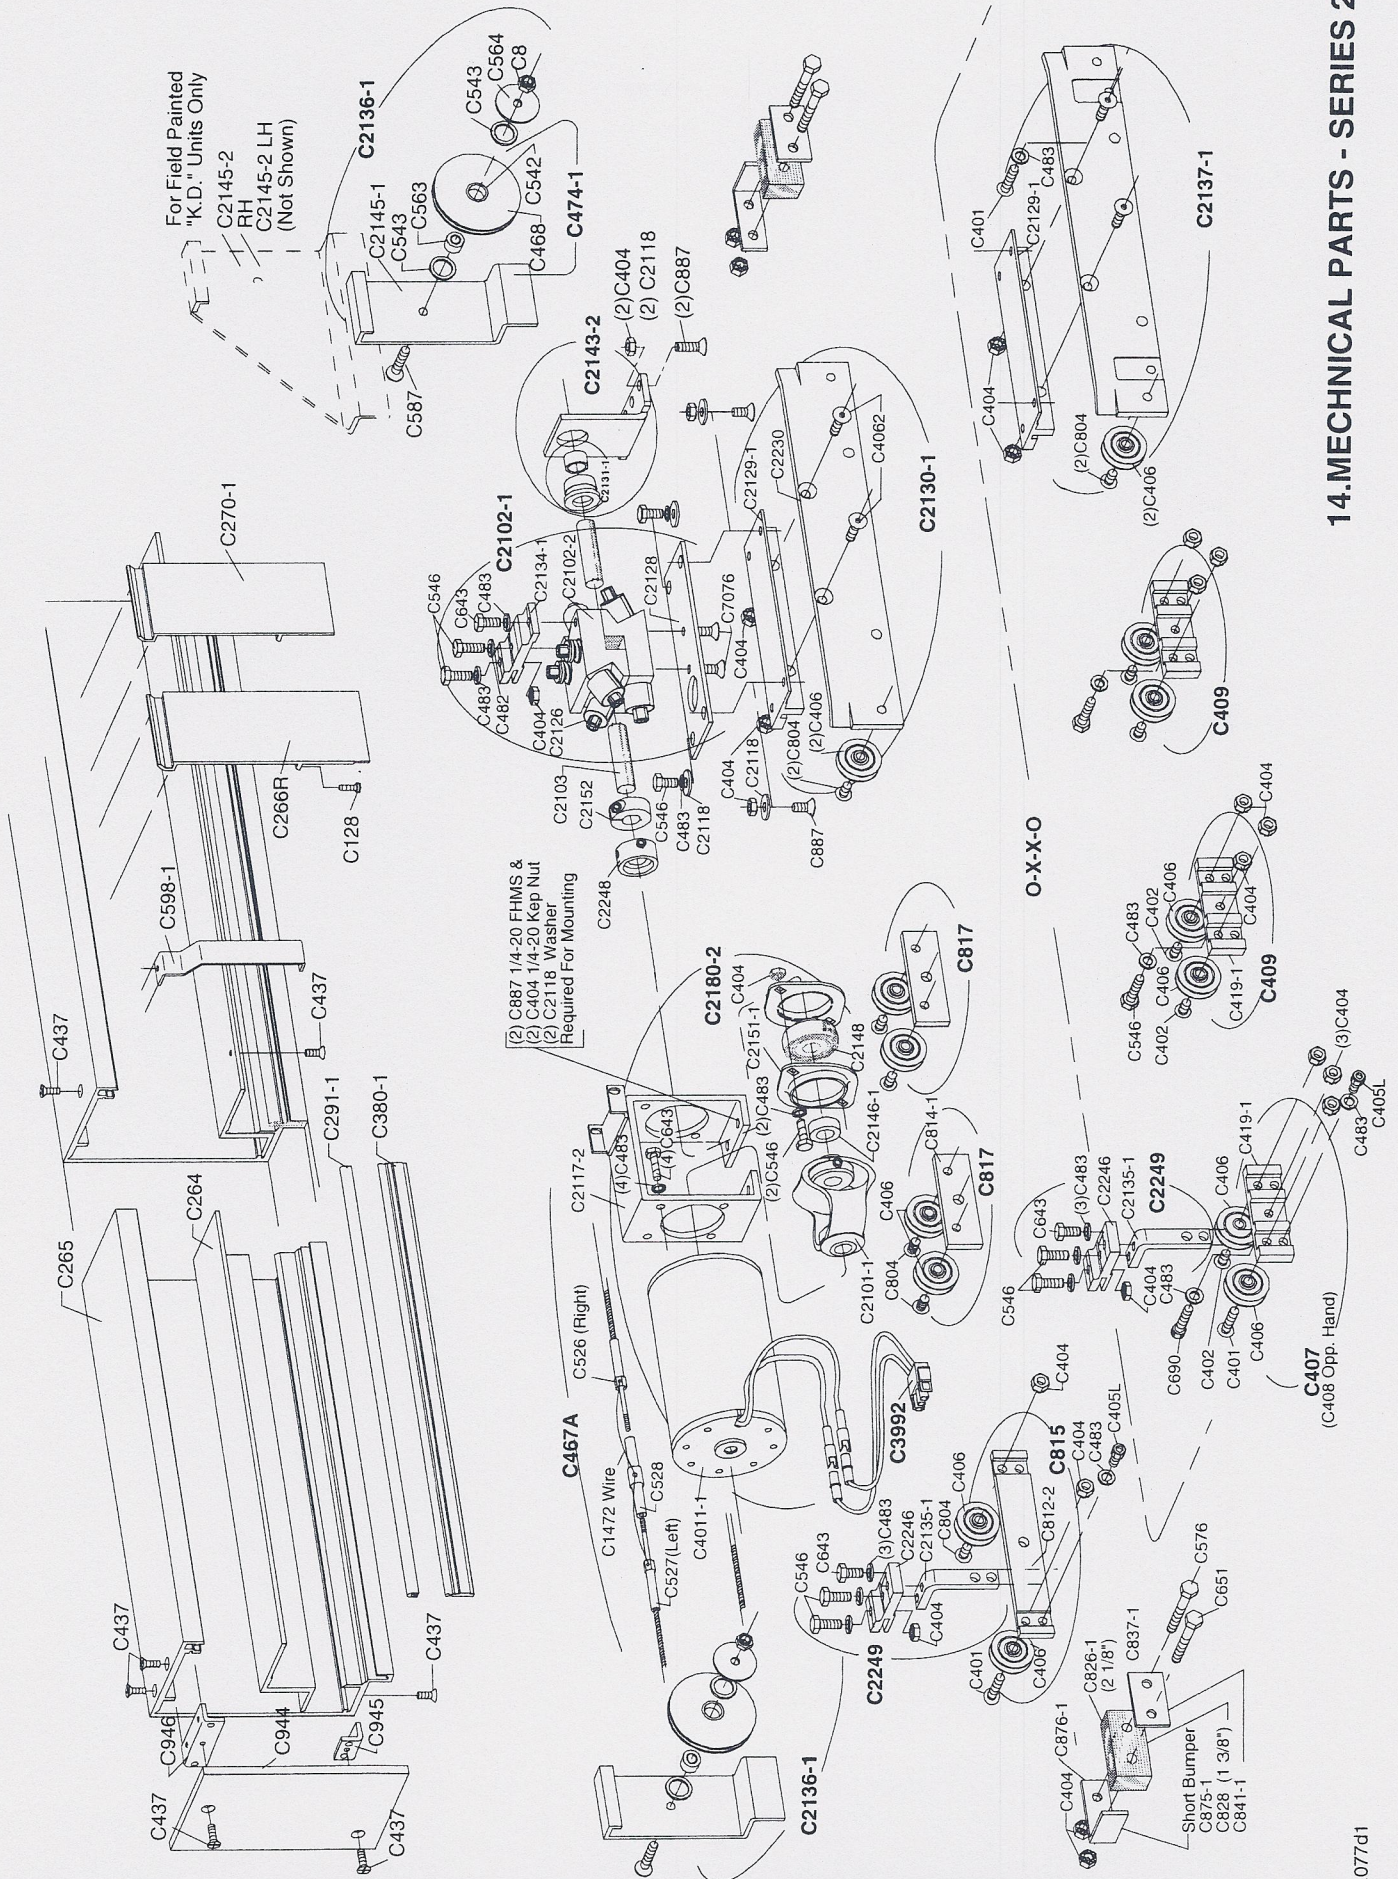


14.MECHANICAL PARTS - SERIES 2000

NOTE:

See H201 C2150 Quick start instructions for complete set up, wiring diagrams and trouble shooting.

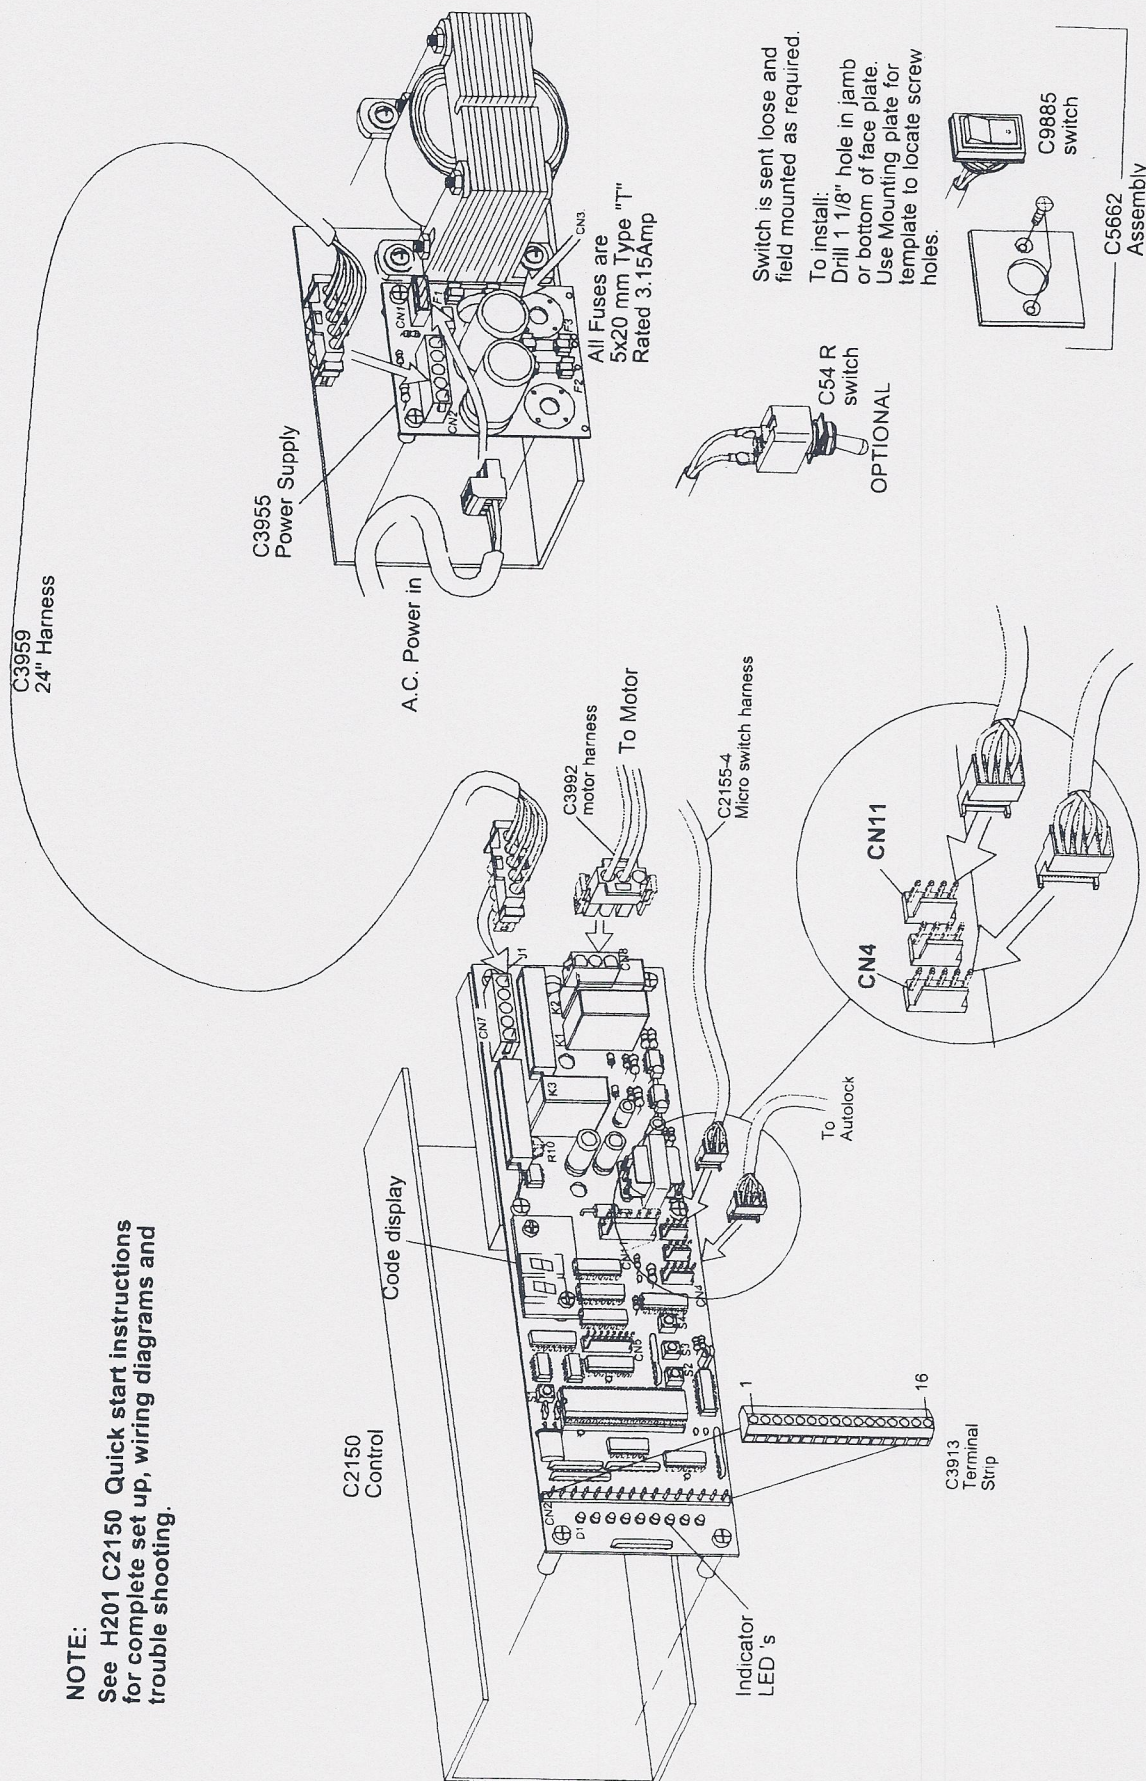**15. C2150 MICROPROCESSOR CONTROL**

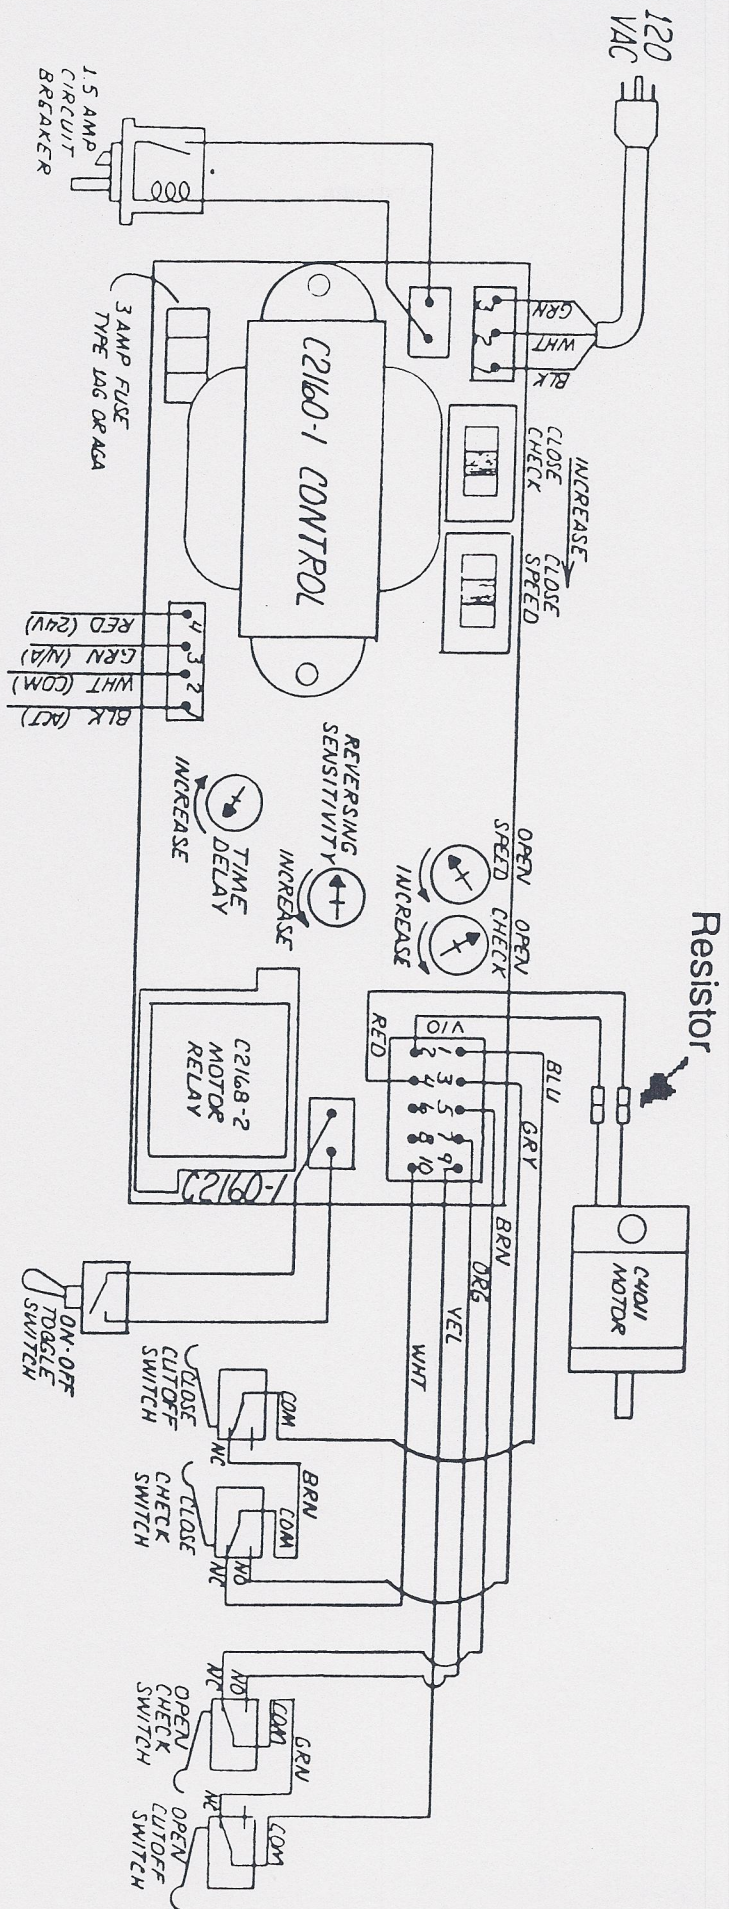





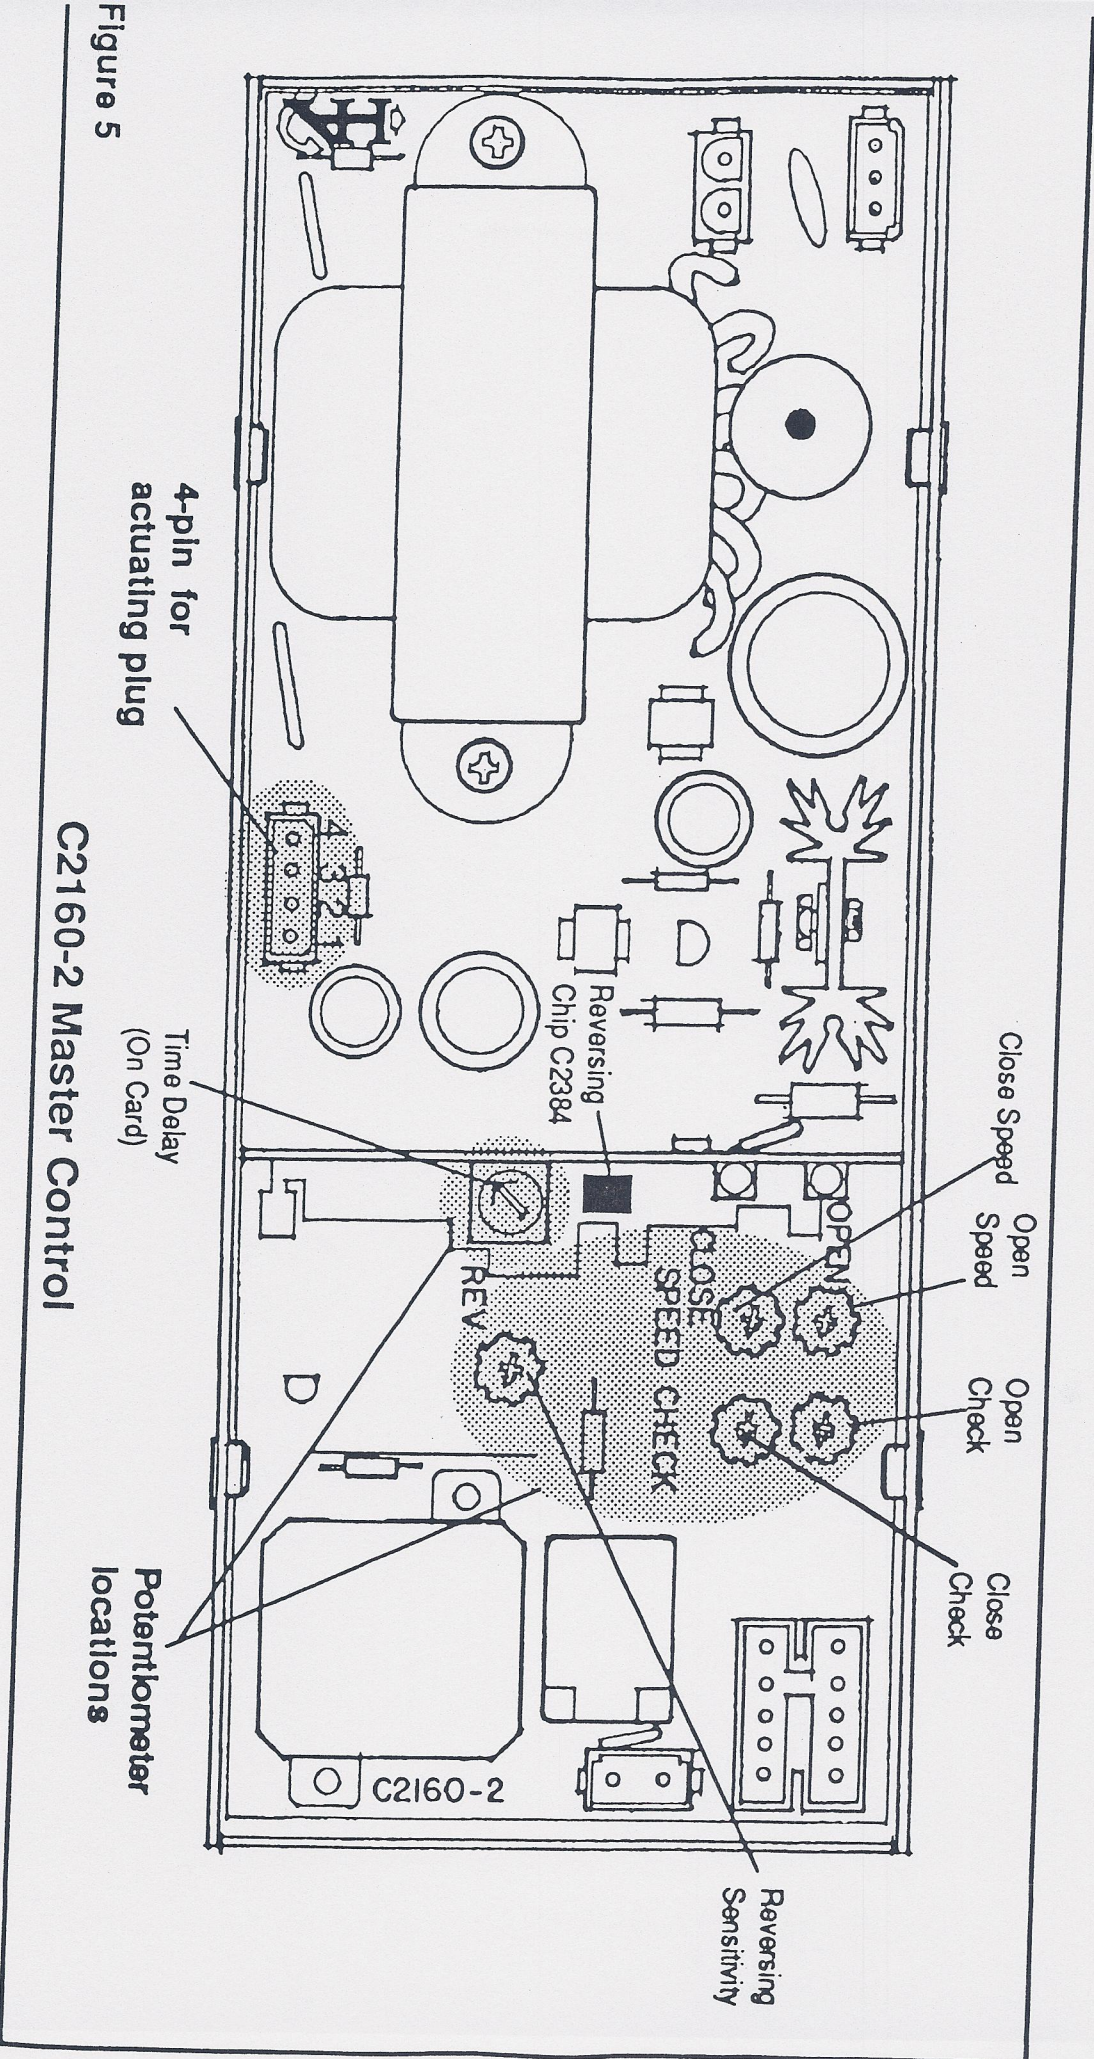


Figure 5

C2160-2 Master Control

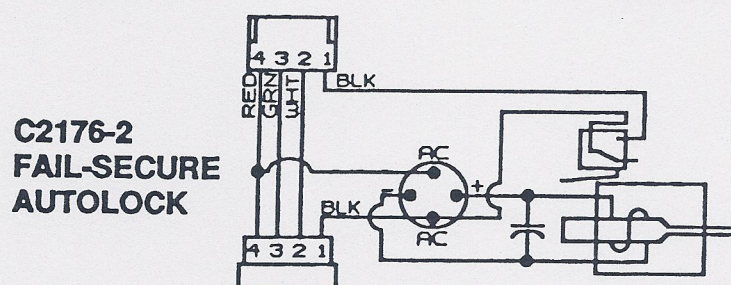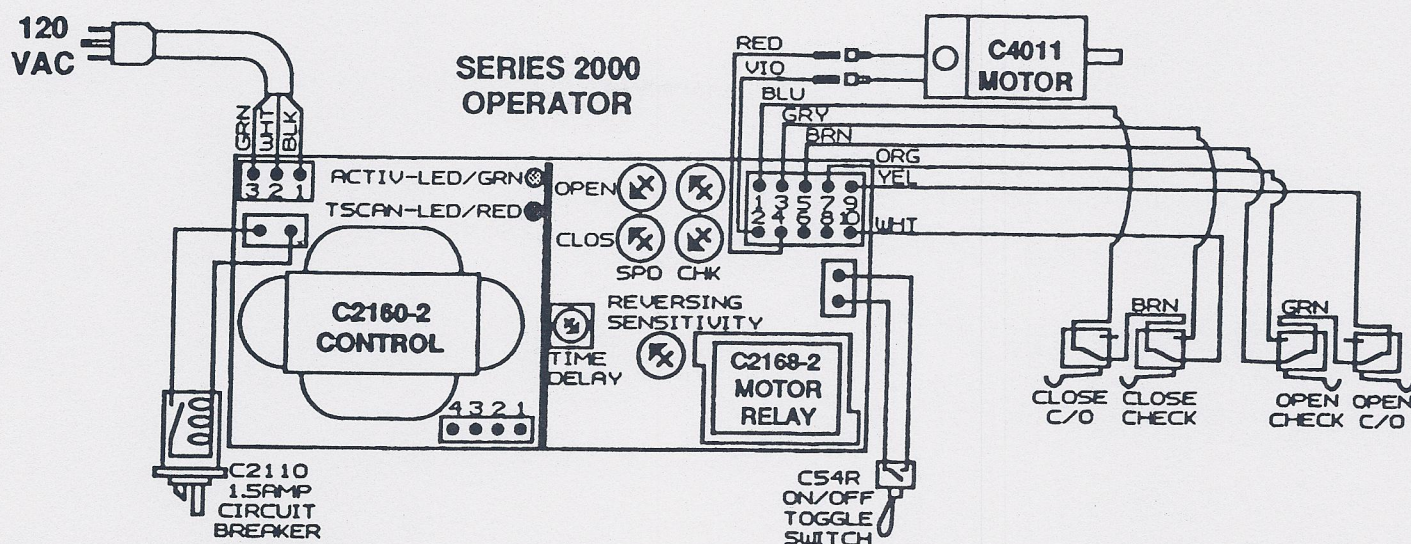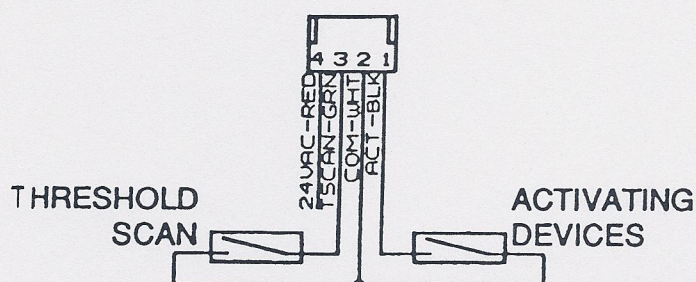

**ALTERNATE
C2196-2
FAIL-SAFE
AUTOLOCK**

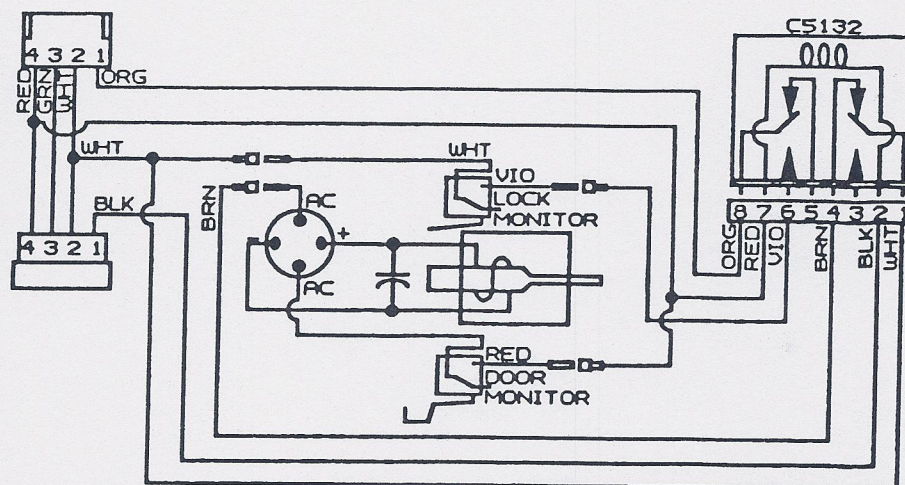



4242 Baldwin Boulevard
Corpus Christi,
Texas, U.S.A. 78405-3399
Tel: 800-531-3111, 361-888-5591
Fax: 800-531-3108, 361-888-6510
Internet: <http://www.hortondoors.com>

A Division of Overhead Door Corporation, A Sanwa Shutter Company

Horton Automatics, Ltd.

Unit A, Hortonwood 31
Telford, Shropshire, England TF1-4GS
Tel: 01952 670169, Fax: 0192 670181
International Tel: ++44-1952-670169
International Fax: ++44-1952-670181

Form G200, FEB 2004, printed in U.S.A.

Horton Automatics reserves the right to improve the product and change its specifications without notice.