



(V - 6.17)

Installation & Service Manual for
TX9300 SERIES WITH 2301 & 2401 SLIDING DOOR DRIVES
CONCEALED MOUNT
FLUSH MOUNT UTILITY
&
POCKET GLAZING

TORMAX TECHNOLOGIES, INC.

12859 Wetmore Road

San Antonio, TX 78247

210-494-3551

210-494-5930 (FAX)

888-685-3707

WWW.TORMAXUSA.COM

INFO@TORMAXUSA.COM

ISSUE DATE: 09/09/10

P/N :US800888

TABLE OF CONTENTS

SECTION	PAGE
SAFETY/WARNINGS	3
<u>INSTALLATION</u>	
1. HEADER AND JAMB ASSEMBLY	4
2. HEADER/JAMB ASSEMBLY PREPARATION	5
3. HEADER/JAMB ASSEMBLY INSTALLATION	6
4. HEADER AND TRANSOM ASSEMBLY	7 - 8
5. THRESHOLD/BTM GUIDE INSTALLATION	9 - 10
6. SO-PANEL INSTALLATION	11 - 12
7. SX-PANEL INSTALLATION/BOTTOM GUIDE ADJUSTMENT	13 - 14
8. SX-PANEL ALIGNMENT	15- 16
9. ACCESS CONTROL	17
10. BUMPER ADJUSTMENT	18
11. FUNCTION CONTROL PANEL INST./OPERATION(FCP)	18
12. POWERING UP THE TX9300	19
<u>PROGRAMMING INSTUCTIONS</u>	
13. FUNCTIONS OF OPERATING MODES ON FCP	20
EXPLANATION OF FCP AND PROGRAMMING EXAMPLES(T - 1248 e)	21- 23
14. INITIAL START UP	24
PROGRAMMING THE CONTROL SYSTEM (T- 1272 e)(T- 1306 e)	25 - 26
PROGRAMMING TABLE(FW V06.xx)	27 - 30
TROUBLE SHOOTING GUIDE	31
TERMINAL DESIGNATION(T- 1263 e)	32
I- ONE SENSOR	33 - 35
FINAL CHECKLIST	36
<u>TECHNICAL SPECIFICATIONS</u>	
TECHNICAL DATA (T- 1258 e)	37
CABLE -PLAN (T- 1277 e)	38
CONTROL UNIT MODULE (T- 1259 e)	39 - 40
MOTOR UNIT MODULE (T-1274 e)	41 - 42
LOCK UNIT MODULE (T- 1265 e)	43 - 44
BATTERY UNIT MODULE (T- 1268 e)	45 - 46
POWER-SUPPLY MODULE (T-1268 e)	47 - 48
BASE MODULE (T - 1261 e)	49 - 50
FUNCTION CONTROL PANEL (T- 1264 e)	51 - 52
INPUT-OUTPUT MODULE (T- 1360 e)	53 - 54

Safety/Warnings



THIS SYMBOL WILL BE USED THROUGHOUT THIS TEXT TO INDICATE A SHOCK HAZARD. SHOCK HAZARDS CAN RESULT IN SERIOUS INJURY OR DEATH.



THIS SYMBOL WILL BE USED THROUGHOUT THIS TEXT TO INDICATE A POINT OF EXTRA IMPORTANCE.



THIS SYMBOL WILL BE USED THROUGHOUT THIS TEXT TO INDICATE A WARNING FOR ELECTRICAL VOLTAGE



WE HAVE MARKED ALL POSITIONS WHICH CONCERN YOUR SAFETY WITH THIS SYMBOL.



OPERATING FUNCTIONS THAT ARE MARKED BY ACCOMPANYING SYMBOL CORRESPOND TO THE DEFAULT SETTINGS HOWEVER , THE TECHNICIAN CAN REPROGRAM, SEE PROGRAMMING TABLE FOR OPTIONS.



THIS SYMBOL MARKS OPTIONAL COMPONENTS , WHICH ARE NOT INSTALLED IN ALL SYSTEMS.

ANY AND ALL TORMAX EQUIPMENT MUST BE INSTALLED AND SERVICED BY AN AAADM CERTIFIED TECHNICIAN, TO MEET THE CURRENT ANSI A156.10 STANDARD AND ANY LOCAL OR STATE BUILDING CODES.

NOTE: TORMAX AUTOMATIC RECOMMENDS THE USE OF A WATER LEVEL AND A PLUMB BOB TO PROPERLY INSTALL ANY DOOR PACKAGE PROVIDED. AN IMPROPER INSTALLATION COULD LEAD TO PREMATURE WEAR OF MOVING PARTS, AN UNPLEASING APPEARANCE, AND/OR SERVICE ISSUES FOR THE CUSTOMER.

NOTE: ALL PRIMARY ELECTRICAL CONNECTIONS SHOULD BE COMPLETED BY A LICENSED ELECTRICIAN!



THE HEADER AND JAMBS SHOULD BE ASSEMBLED ON THE FLOOR AND LIFTED INTO PLACE. IT IS ADVISED TO USE A LIFT ON LARGER ASSEMBLIES. CARE SHOULD BE TAKEN TO PROTECT THE FINISH ON THE UNIT AT ALL TIMES.

INSTALLATION OF A TX9000 SERIES UNIT SHOULD NEVER BE ATTEMPTED BY ONE INDIVIDUAL.



INSTALLATION

1. HEADER AND JAMB ASSEMBLY



Mount the jambs to the header using the supplied hardware as shown
(See illustrations).

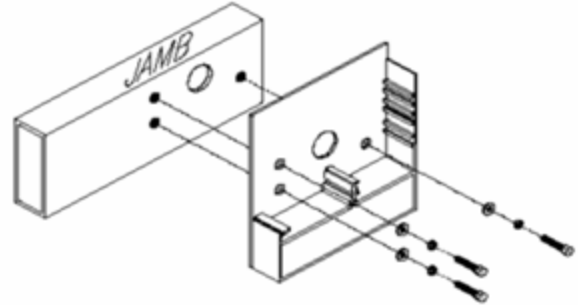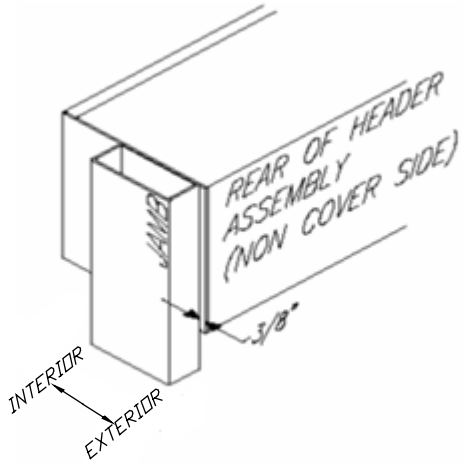

CONCEALED

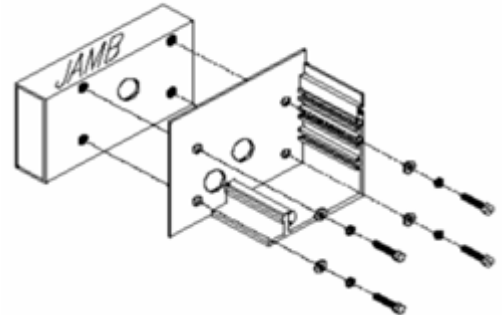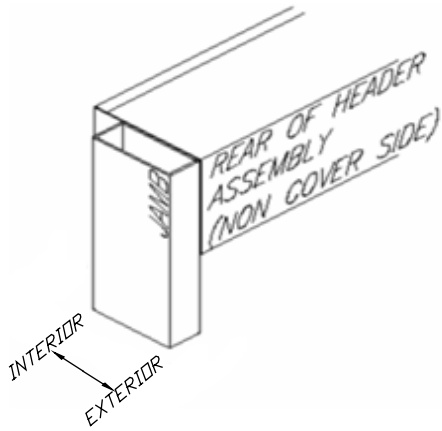

FLUSH MOUNT UTILITY

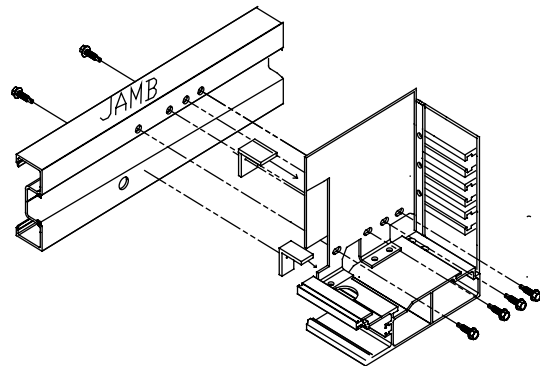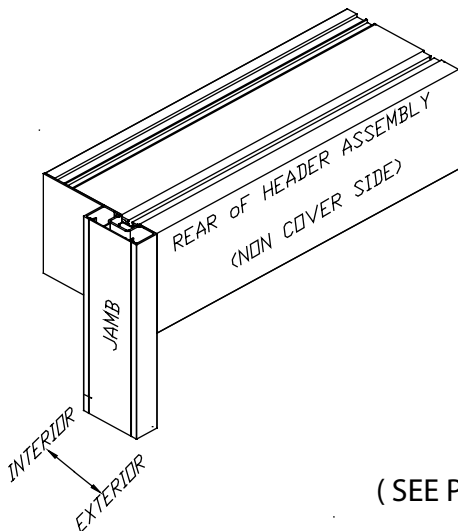


POCKET GLAZING CONCEALED


(SEE PAGES 7 & 8 FOR TRANSOM ASSEMBLY)

2. HEADER/JAMB ASSEMBLY PREPARATION


Pre-drill the header prior to lifting the unit into place. The thru hole locations in the header will depend on whether the unit is a concealed, flush mount or pocket glazing (see illustrations for approx. hole locations.) A minimum of 6 fasteners should be installed thru the header located at both ends and at the center of the unit.

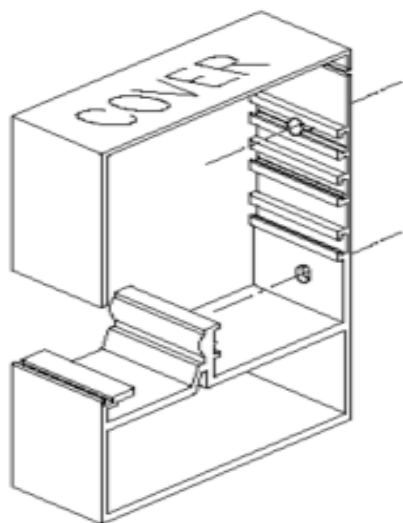

CONCEALED MOUNT

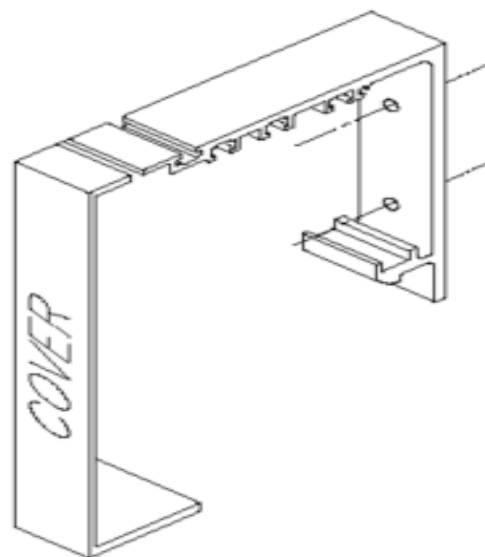

FLUSH MOUNT

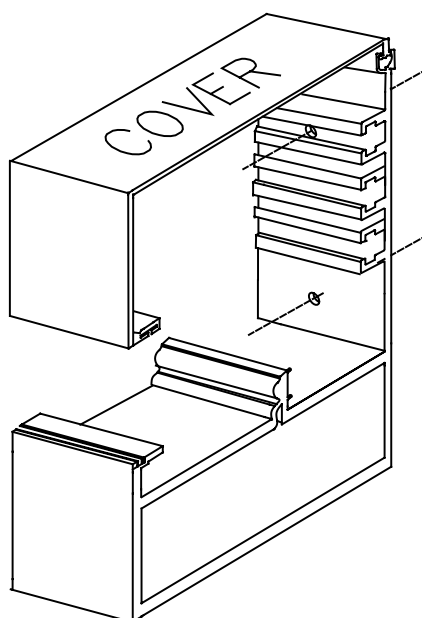

POCKET GLAZING CONCEALED


3. HEADER/JAMB ASSEMBLY INSTALLATION

DETERMINE THE HIGHEST POINT OF YOUR FLOOR BY USING THE WATER LEVEL (SEE EXAMPLE BELOW).


Lift the header/jamb assembly into place, level and secure the unit with the appropriate fasteners. Plumb and secure each jamb tube as shown. Reference illustrations below.

Securing the jambs will depend on the possibilities provided by the work environment. It is suggested that the jambs be secured at both ends and at the center. Also, that fasteners be selected and located to limit visibility on the final assembly.

In the event there is nothing to mount the jamb to vertically, an L-bracket can be installed at the bottom of the jamb. L-brackets should be installed to provide the most support in the least visible location possible.

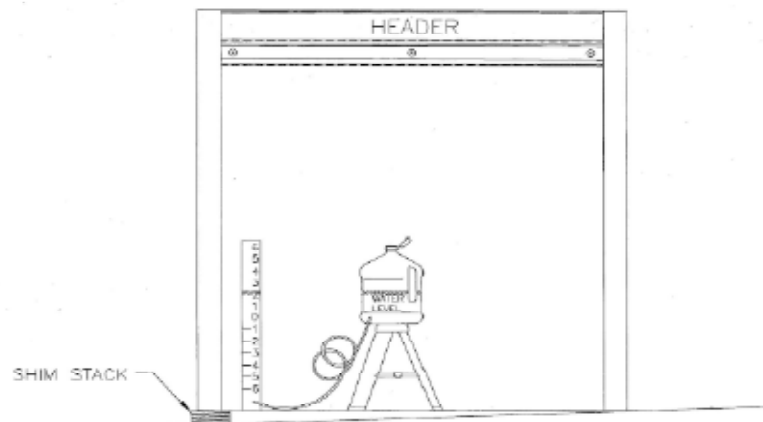


NOTE: WHEN LEVELING THE UNIT, A TRIP HAZARD MAY BE CREATED. THE HAZARD MUST BE ELIMINATED BY EASING THE TRANSITION TO THE THRESHOLD.

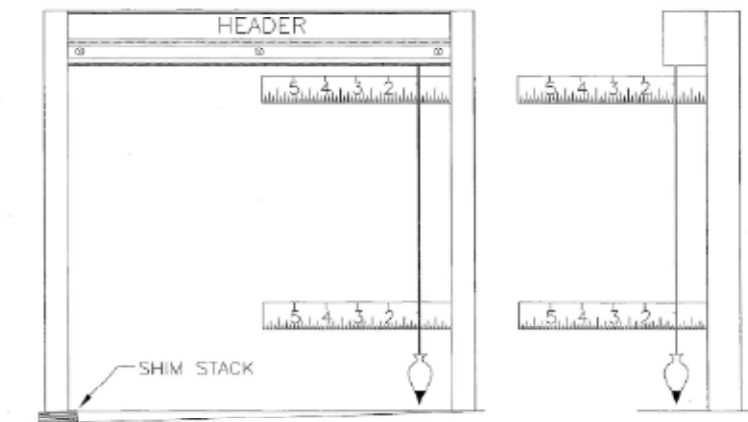

4. Header and Transom Assembly (POCKET GLAZING)

- 1) Attach B to header with hardware provided as shown on illustrations 1 and 2.
Snap A into B only after all fasteners are tight. Make appropriate clearance holes for electrical.
 - 2) If equipment has transom assemble as shown in illustration 3.
D will be factory installed into C, note the suggested installation holes. Do not over tighten your fasteners or distortion may occur.
If your unit has a vertical in the transom E will be factory installed into F. Use C and D to locate the proper distance of vertical on header top, use G to secure bottom of vertical.
Important note: you should never have 2 E (shallow to shallow) extrusions facing each other.
 - 3) After equipment is secure install H and use the appropriate glazing blocks, J or I or both.
Install the glass, install K and finish with appropriate vinyl N or M. It may be helpful to use glass cleaner as lubricant.
-
- A) US800958 Snap in back plate for jamb tube.
 - B) US800956 Jamb tube.
 - C) US800829 Horizontal header pocket.
 - D) US800828 Horizontal header insert.
 - E) US800957 Snap in gutter.
 - F) US800956 Transom vertical, same extrusion as jamb tube.
 - G) US801048 Transom vertical transom bracket.
 - H) US801041 Transom gutter, top of header.
 - I) US801844 Glazing block ½"
 - J) US801043 Glazing block ¼"
 - K) US801042 Transom face, top of header.
 - L) US800813 Header.
 - M) US801051 Transom vinyl, ¼" glass.
 - N) US800822 Transom vinyl, ½" glass.

See page 8 for Illustrations

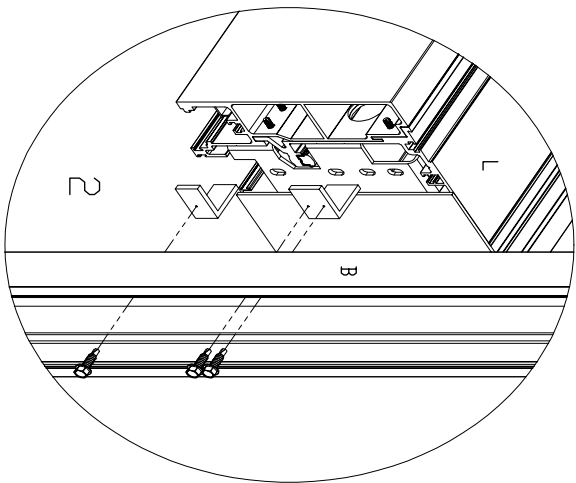


5. THRESHOLD/BOTTOM DOOR GUIDE INSTALLATION






The TX9300 threshold contains the bottom door guide grooves. Orientate the threshold so the grooves are on the cover side of the operator and in line with the jambs. If required use appropriate shim material to level the threshold as shown. Measure from the top of the threshold to the bottom of the header in one foot increments the full width of the unit, to insure both the header and threshold run parallel to each other. The threshold must be fastened securely (using appropriate fasteners for the environment) to the floor. Fasteners should be equally spaced thru the length of the threshold, starting 1 1/2" from each end and not to exceed 18" from center to center.

The threshold must be supported thru its entire length (mortar works best where a large gap is present).



NOTE: In the event a gap is created between the threshold and the finished floor; said gap must be filled accordingly with mortar, in order to properly support the threshold. If not supported the threshold could become deformed and interfere with door operation. Also, the transition to the top of the threshold should be eased to eliminate a tripping hazard.

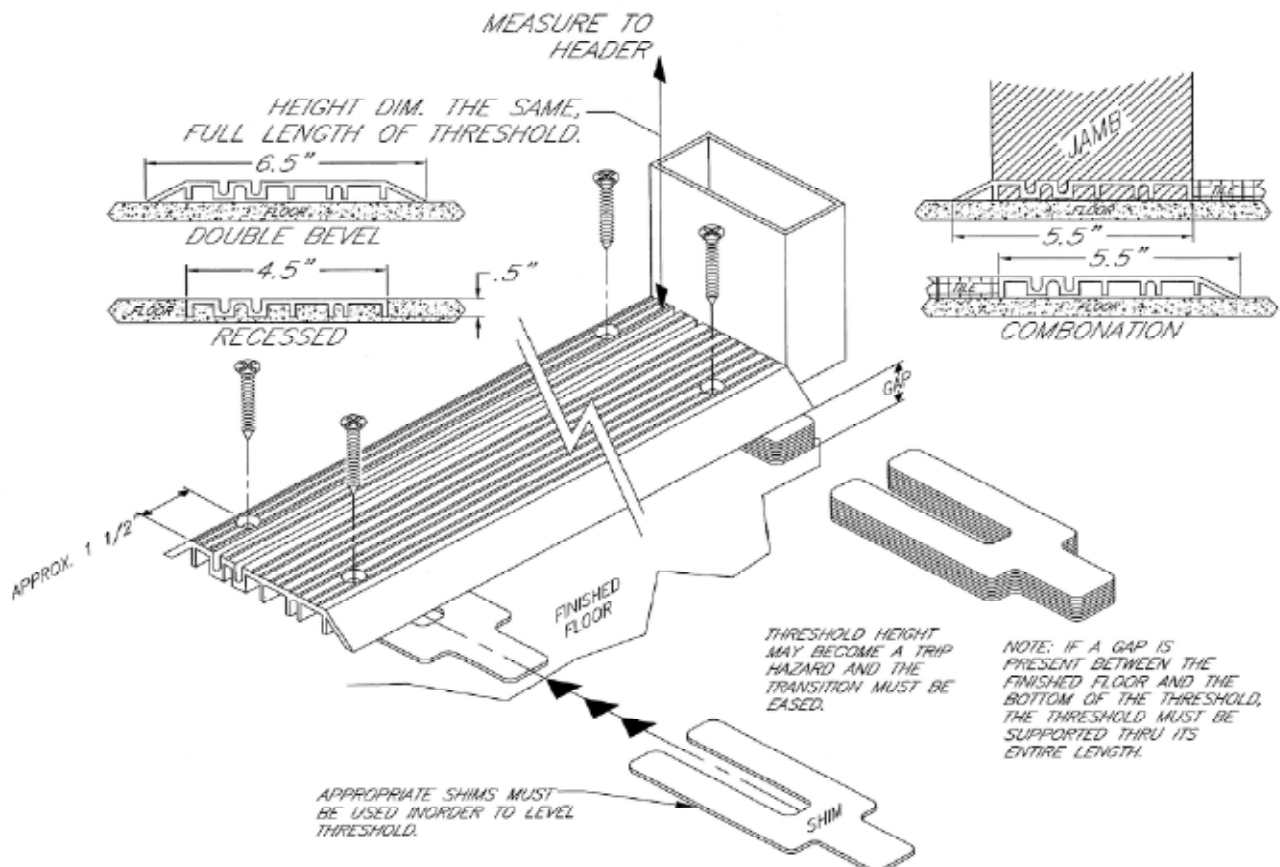

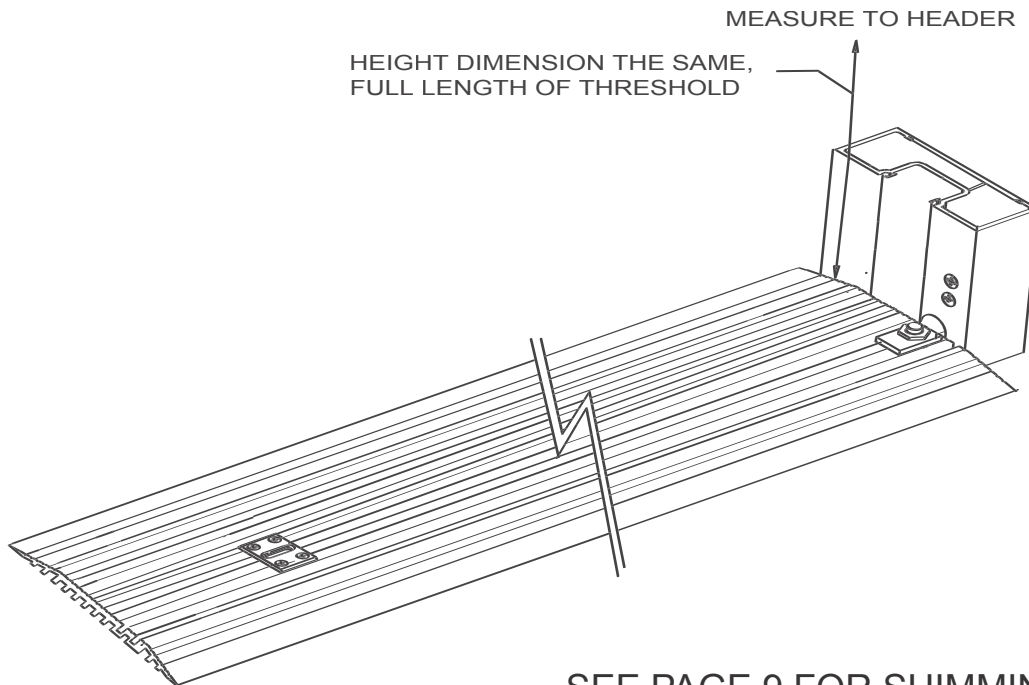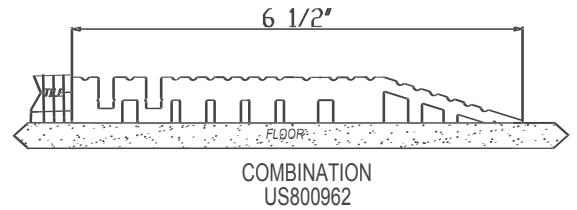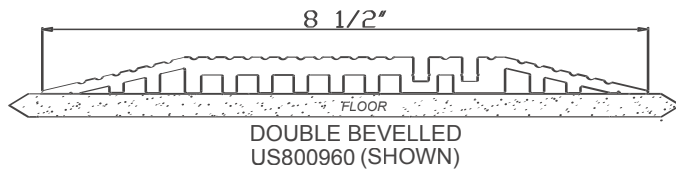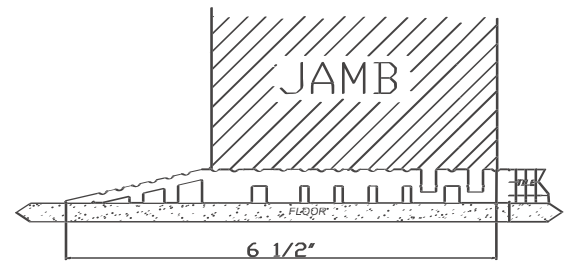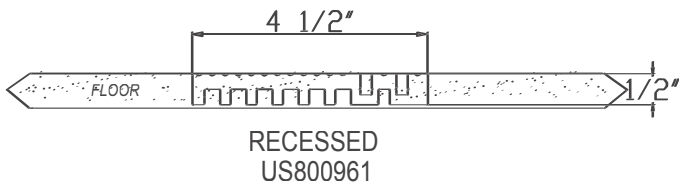


SEE PAGE 9 FOR SHIMMING AND
PREP. EXAMPLE

POCKET GLAZING

6. SO-PANEL INSTALLATION


Install the SO Threshold Pivot using the supplied hardware, in the provided locations. Orient the pivot as shown below. Remove the small comdor cover at the end of the header to reveal the SO Top Pivot. Remove all screws and place the pivot into the exterior hole of the door portion top pivot as shown below. If equipped with door way holding beams, rout the wires as shown below. Position the SO Panel at approximately 90 degrees to the header and lift the SO Panel onto the lower pivot. Pull slack from door way holding beam wires while aligning the top pivot and reinsert the screws, tighten them enough to keep the panel in place while fine tuning the alignment as shown below; SO alignment must be done with the panel in the closed position. Once the SO panel has been aligned, reopen panel and tighten all fasteners. The

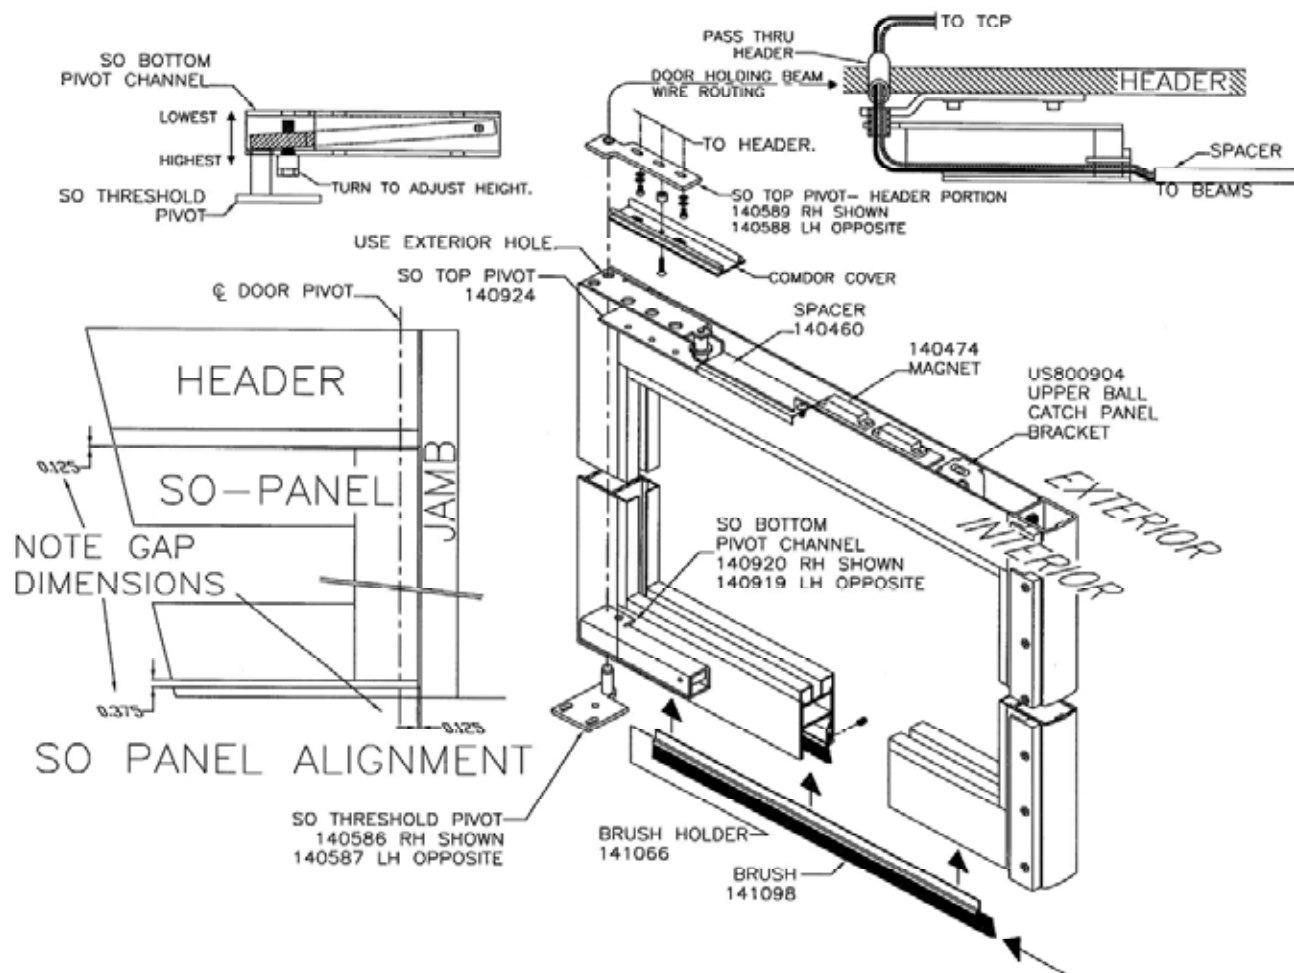

SO - PANEL INSTALLATION (POCKET GLAZING)

Install the SO bottom pivot jamb / threshold portion using the supplied hardware, as shown below in figure A. Orient the pivot as shown below. Remove the comdor cover at the end of the header to reveal the SO top pivot. Place the pivot in locked position as shown below. If equipped with safety beams, route the wires through the pivot and use access hole in header to run the wires to TCP. Unlock the top pivot portion of SO panel, then position it at approximately 90 degree to the header and lift onto the lower pivot. Now align SO - top pivot portion with header top pivot portion and lock into place. SO alignment must be done with the panel in closed position.

Note: Lock pivot into place as shown below or damage to safety beams may occur.

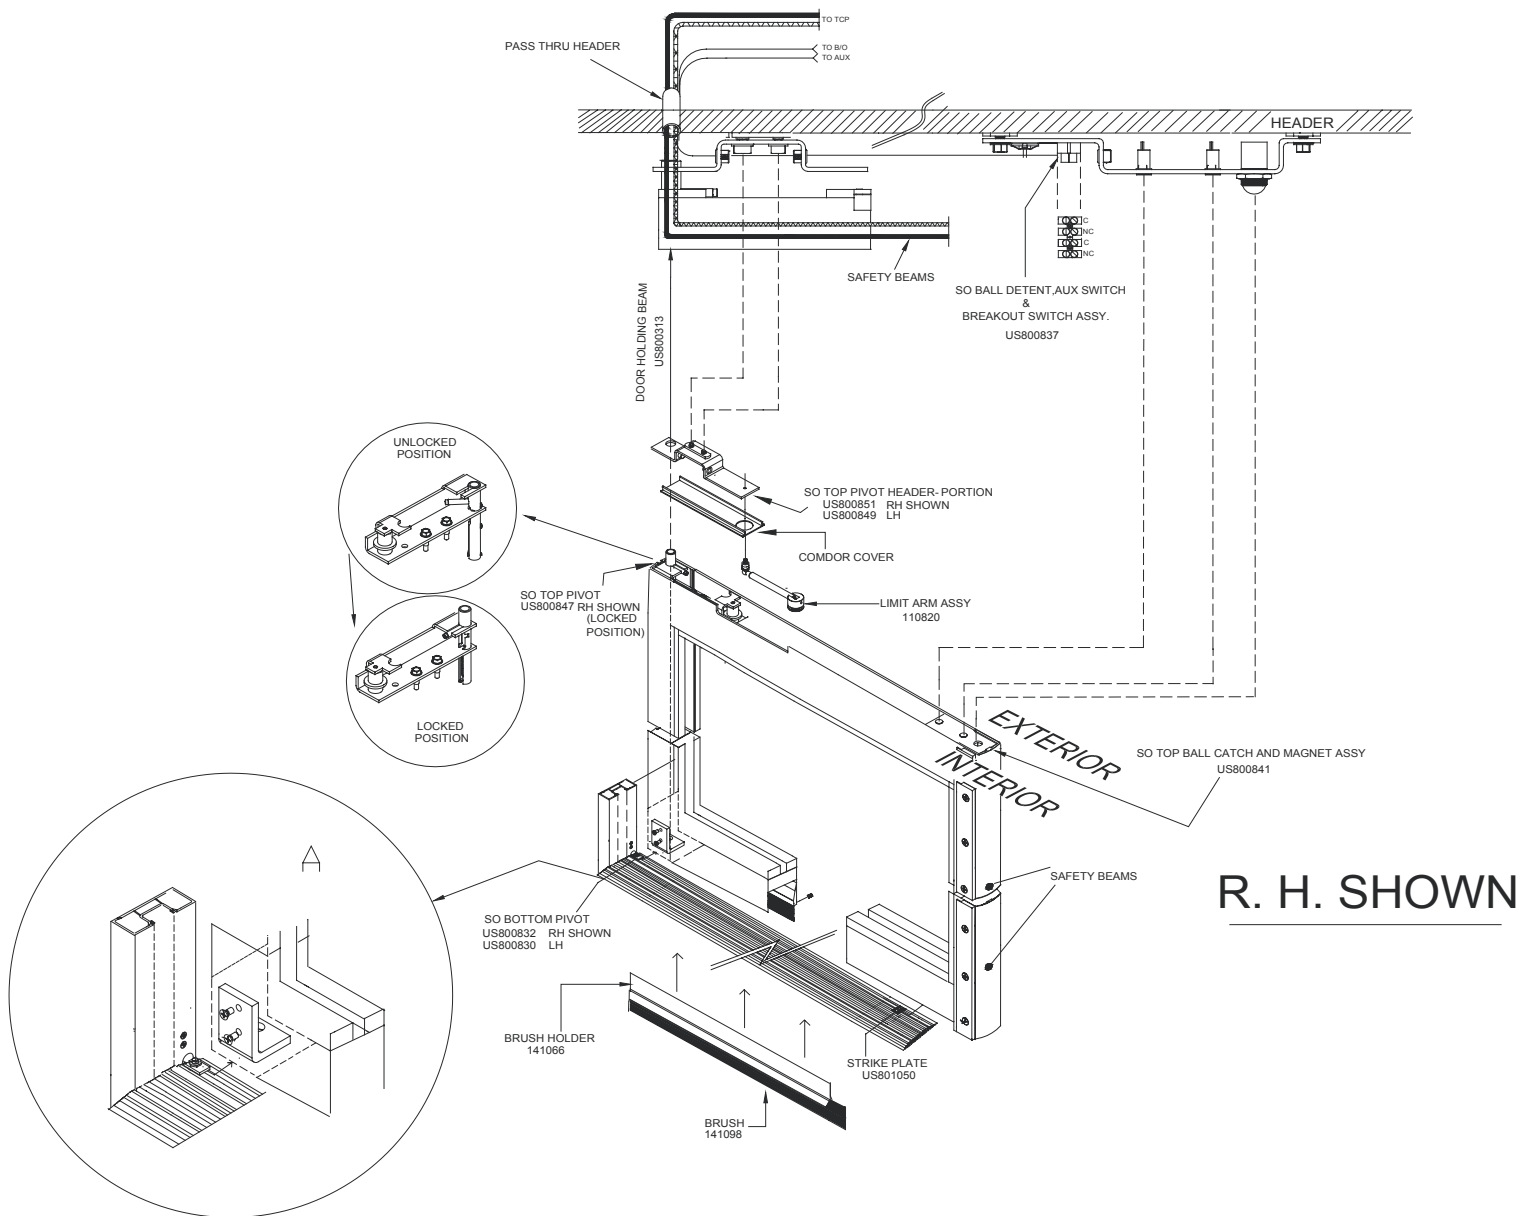


7. SX-PANEL INSTALLATION/BOTTOM GUIDE ADJUSTMENT


NOTE: Install the brush on the bottom of the SX-Panel prior to lifting into place as shown on pg 6 (SO-Panel Installation) of this manual.

Position the trolleys approximately to accept the SX-Panel.

NOTE: The trolleys are shipped with the anti-risers tight against the track to prevent damage in shipment. The anti-risers must be loosened to re-position the trolleys.

Loosen the two panel mounting bolts (on top of the SX-Panel) until two full threads are engaged. Position the SX-Panel so that it will slide behind the drive unit while aligning the bottom door guide/pivot and guide channel. Align the trolleys and bolts and slide the two together. HINT: Adjusting the trolley height lower can be helpful if the panel is too heavy to lift.

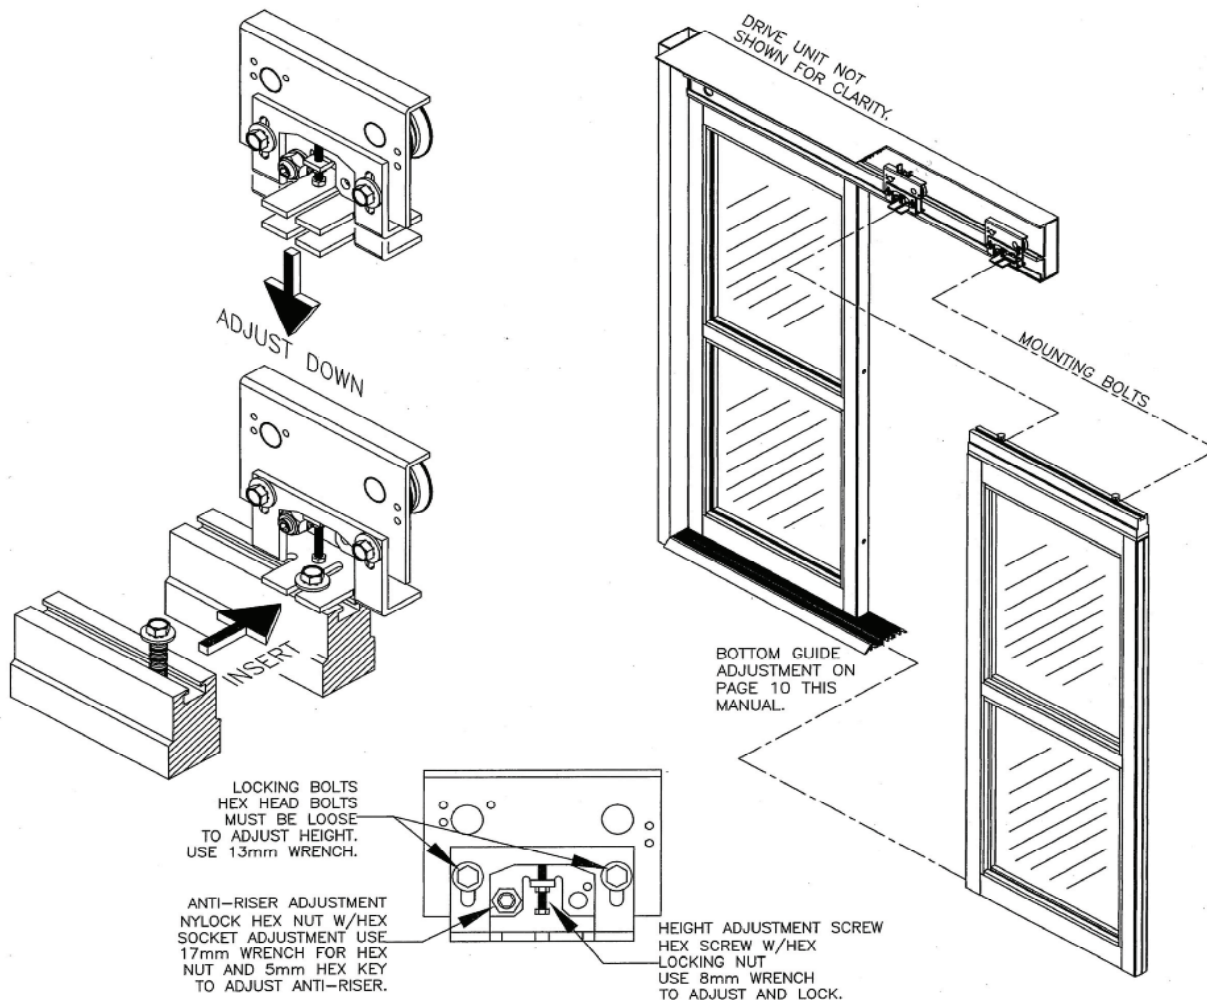

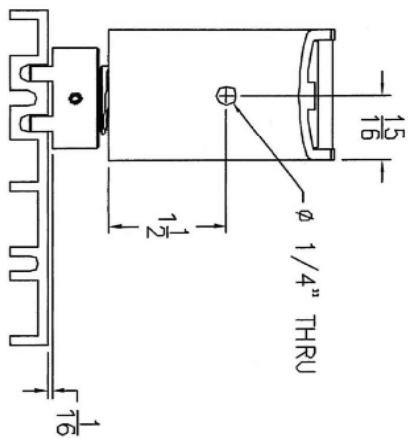

OLDER MODELS SHOULD BE MODIFIED AS SHOWN IN ORDER TO GAIN ACCESS TO THE ADJUSTMENT SET SCREW.


ON MODELS EQUIPPED WITH INTERLOCKS, TEMPORARY REMOVAL MAY BE REQUIRED.

ADJUSTMENT

TO ELIMINATE GUIDE POP OR BINDING, THE BOTTOM GUIDE SHOULD BE ADJUSTED AND SECURED AS FOLLOWS.


1. LOCATE THE HIGHEST POINT OF THE THRESHOLD, AND SLIDE THE PANEL UNTIL THE GUIDE IS DIRECTLY OVER IT. LIFT THE GUIDE APPROX. 1/16" HIGHER TO INSURE CLEARANCE AND SECURE WITH SUPPLIED SET SCREW.

2. SLIDE THE PANEL THRU ITS FULL TRAVEL TO CHECK GUIDE ENGAGEMENT INTO THE THRESHOLD. AT NO POINT SHOULD THE GUIDE COME COMPLETELY OUT OF THE THRESHOLD. A MINIMUM ENGAGEMENT OF 1/8" IS REQUIRED.

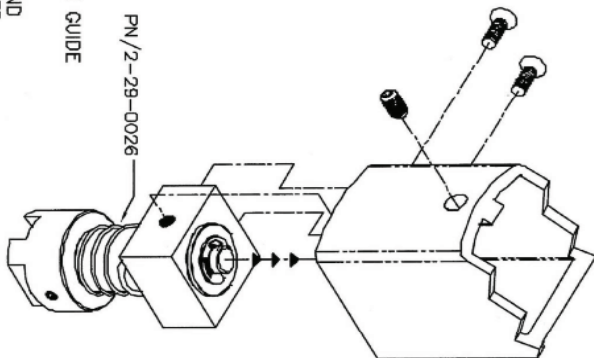

ASSEMBLY

USE THE SUPPLIED HARDWARE TO INSTALL THE DOOR GUIDE IN THE EXISTING HOLES.

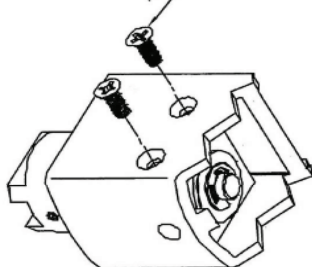

TX9300 BOTTOM DOOR GUIDE INSTALLATION

DOCUMENT # US800678-B

8. SX PANEL ALIGNMENT

The alignment of the SX-Panel is very important to the functionality of the TX9000 series sliding door(s). Adjustments to the panel must be done with the 13mm bolts slightly loose. After all adjustments are completed the 13mm bolts can be re-tightened and all the anti-risers must be adjusted to have a gap of .020" (approx. the thickness of a credit card).

NOTE: Try to mount the panel as close as possible to the final hanging position, to minimize the adjustments.




The moving panels should contact the seals and/or felts only slightly in order to minimize drag .


Use the following steps to align the moving panels:

The first adjustment should be to lift the panel to the proper operating height. There should be even contact between the door sweep and threshold or finished floor.

The second adjustment is to position the panel the proper distance away from the header. The panel should contact the felt only slightly and evenly thru its length. Adjust this by sliding the panel towards or away from the felt brush on the header. When the panel is correct the panel mounting bolts can be tightened.

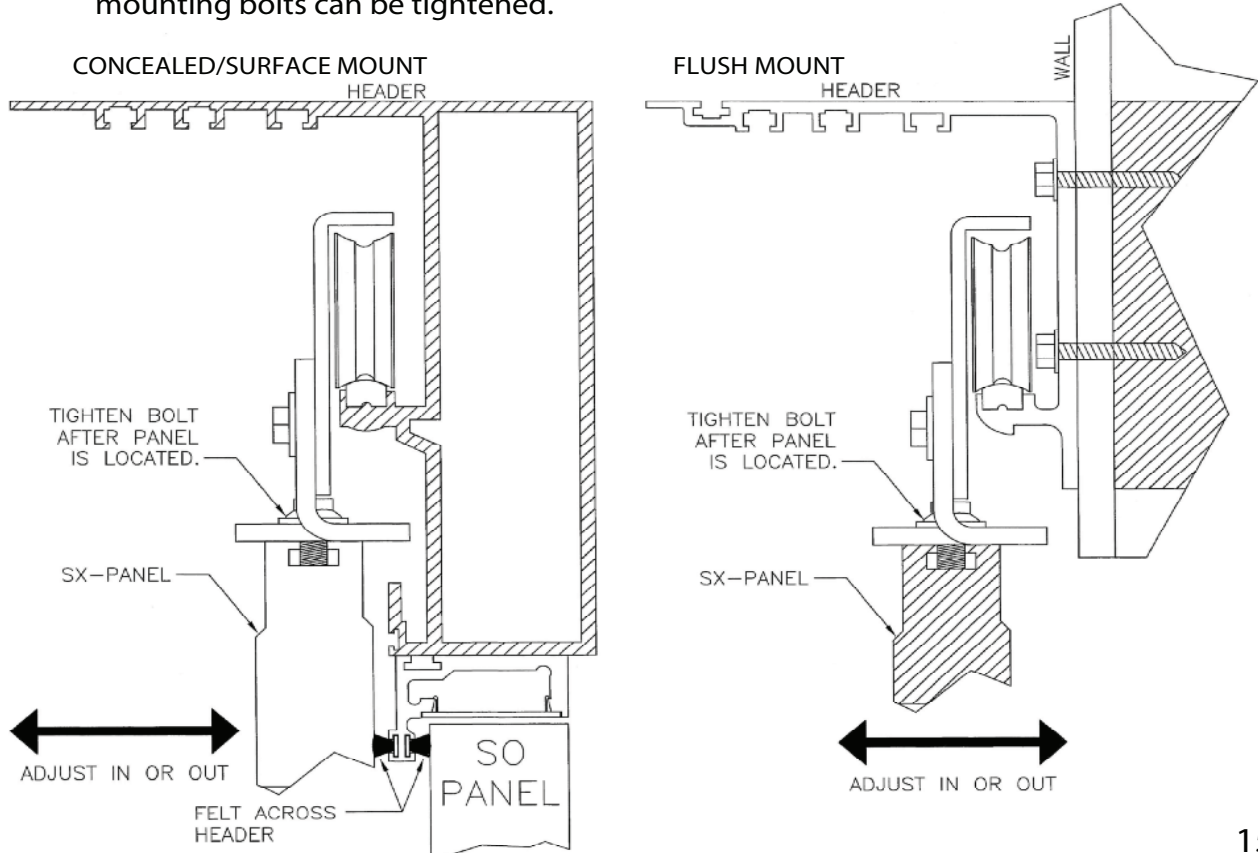


The third adjustment is to line up the sight lines on the panels and jambs. These are fine adjustments and should be done carefully.

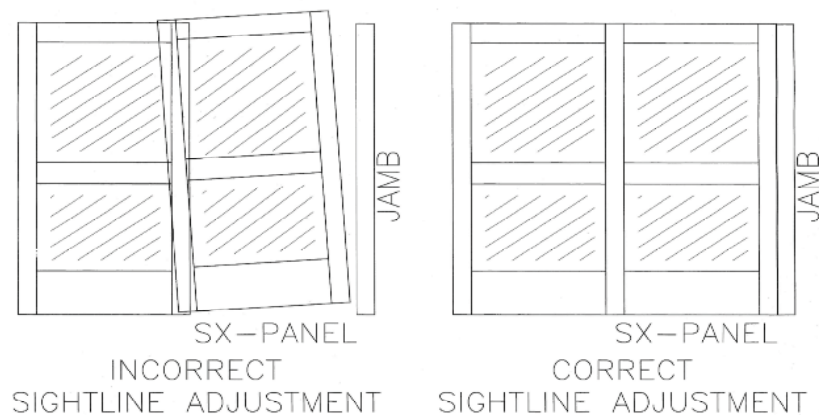


Once the panels have been properly adjusted the 13mm locking bolts can be tightened.

The final adjustment is the anti-riser. There should be a .020" gap between the roller and the track. The roller is mounted to an eccentric cam that uses a nut to secure its location.

Adjustments to the anti-riser require a 5mm hex key and a 17mm wrench. While holding the roller in position with the hex key, loosen the nut. Adjust the anti-riser with the hex key and tighten the nut using a 17mm wrench.

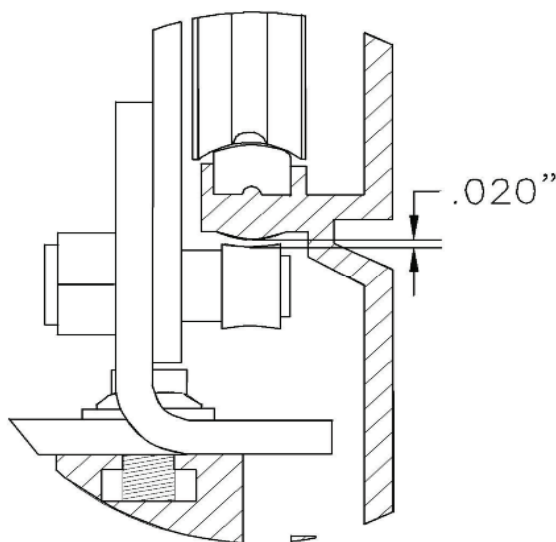

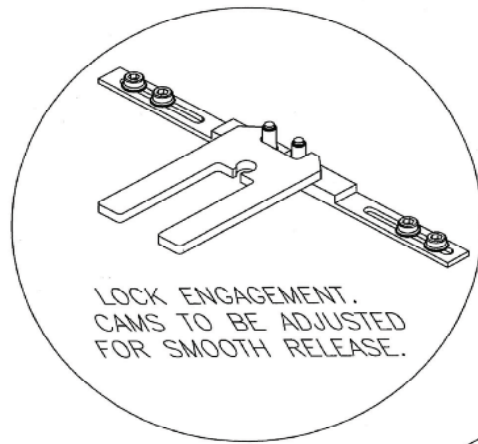


9. ACCESS CONTROL ASSEMBLY

PANIC DEVICE:

The access control feature will have the major components installed on the SX Panel from the factory.

ELECTRIC LOCK :


The locking cams will have to be adjusted once the doors are aligned. Both the trolleys and the locking cams must be adjusted as shown. NOTE: AT NO POINT SHOULD THE CAMS COME IN CONTACT WITH EACH OTHER OR THE LOCK BOLT.

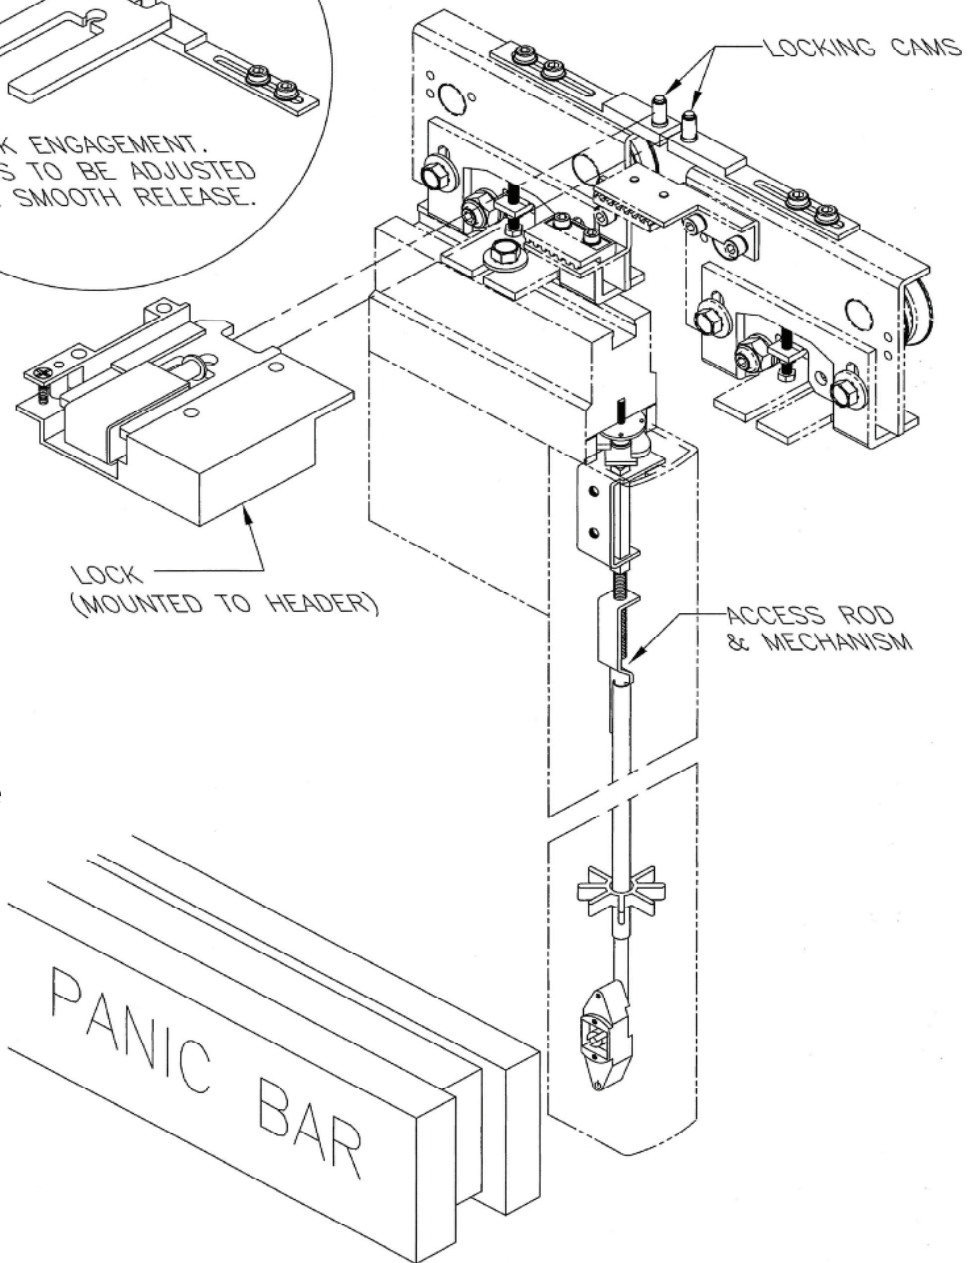

10. BUMPER ADJUSTMENT

The bumper used to stop the SX-Panel, should be adjusted to provide a 1/8" gap between the SO-Panel and the SX-Panel in the open position.

To increase the finger guard distance move the bumper towards the door opening. To decrease the distance move the bumper away from the door opening.

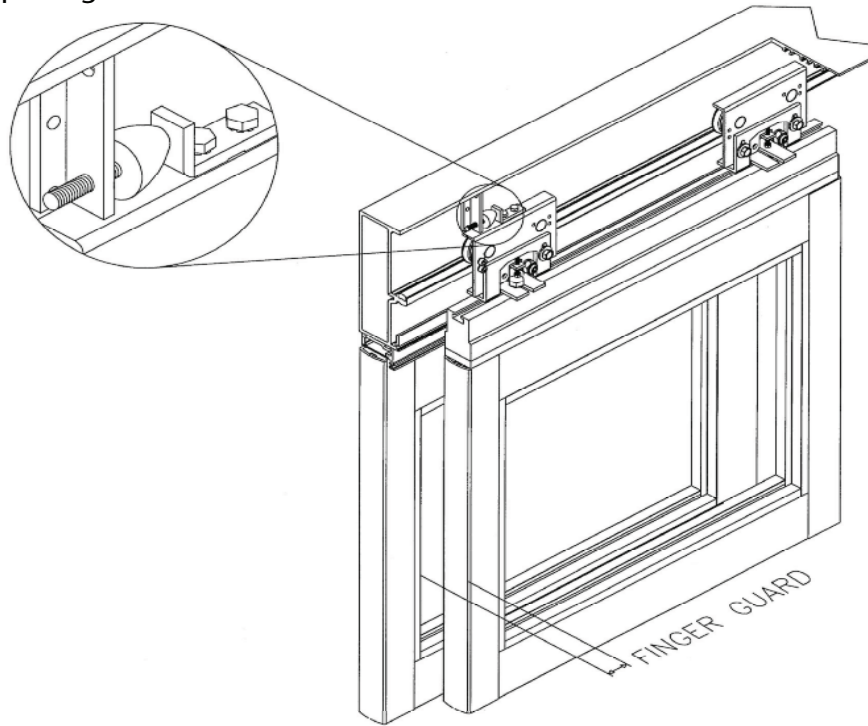

11. FUNCTION CONTROL PANEL INSTALLATION/OPERATION

The Function Control Panel (FCP) is the interface between the TX9300 and the end user/ technician. Besides selecting current door mode, the FCP is also used to determine fault codes, reset door, change door parameters and place the door into free wheel mode.

The FCP will be factory installed on the rear of the header or field installed in a remote location dependent on order configuration

The FCP will come with all electrical connections made from the factory. In the event that the connections become undone, the diagram provided can be used to determine proper wire location.



12. POWERING UP THE TX9000


ALL PRIMARY ELECTRICAL CONNECTIONS SHOULD BE COMPLETED BY A LICENSED ELECTRICIAN!

DO NOT INSERT THE POWER PLUG INTO THE UNIT, UNTIL IT IS READY TO BE COMMISSIONED. AN OVERALL CHECK SHOULD BE PERFORMED.

NOTE:

THE UNIT REQUIRES 115 VAC MAKE CONNECTIONS AS SHOWN


RUN 115 VAC TO THIS POINT.
VERIFY DIAL IS SET TO 115 VAC.

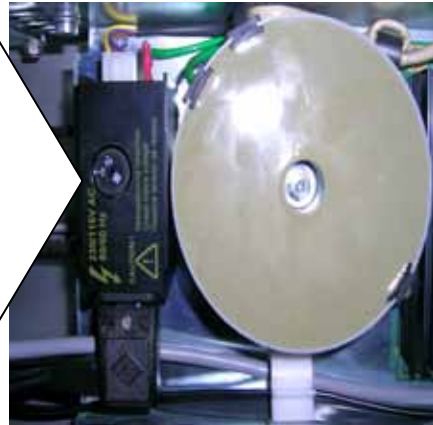

PROGRAMMING INSTRUCTIONS

13 FUNCTIONS OF OPERATING MODES ON FCP

Modes can be selected with the 6 position Function Control Panel (FCP). The technician will review the appropriate mode switch with the end-user.

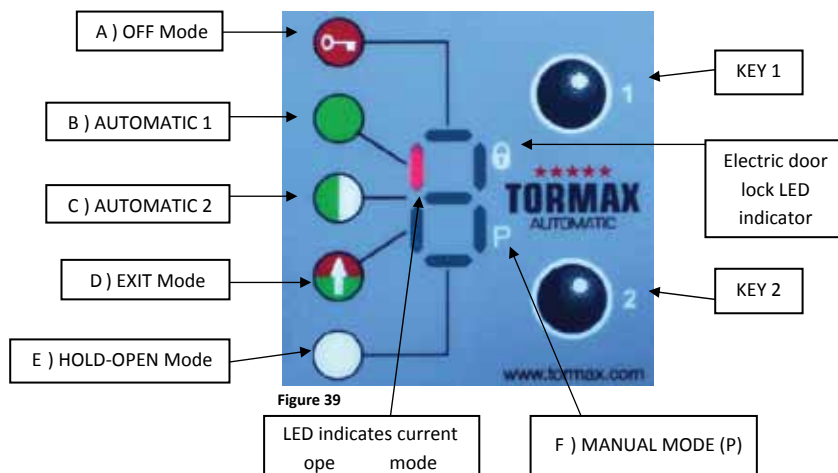

A. OFF Mode

The interior and exterior activators are inhibited after the door reached the fully closed position, if an electric lock has been installed it will be activated. The operator will cycle if a signal is sent to the key switch input.

B. Automatic 1 Mode

Typical setting for normal operation. This setting allows interior, exterior activators, key switch and safety devices to operate door.

C. Automatic 2 Mode (Reduced Opening)

Allows the door to open with a reduced opening width. If necessary, hold open time can be adjusted different from Automatic 1 mode.

D. EXIT Mode

Allows interior activator and key switch inputs to operate the door system. Exterior activator is inhibited while door is closed but becomes active when the door is operated by the interior activator or key switch inputs.

E. HOLD - OPEN Mode

Hold the door system open.

F. MANUAL OPERATION (P) Mode

Allows the door to be used manually without the use of sensors /push and pull activation.



The technician will clearly explain and demonstrate the modes of Operation to Enduser

T-1248 e	Programming with Function Control Panel (FCP)	<div>★★★★★</div> <div>TORMAX</div> <div>AUTOMATIC</div> <div>12859 Wetmore Road SanAntonio, TX 78247 1-888-685-3707 www.tormaxusa.com</div>
Area of application	iMotion 1301, 1401 Operators and 2301, 2401 Drives	
Release	July 2008	
Use	FCP operation and function	

Contents


Function of FCP	1
Programming with FCP	2
Programming Example	3

Function of (FCP) MCU32 User Interface

The FCP has 2 function levels

- Select operateing modes by end user
- Programming module for the AAADM certified technician

Programming can only be accessed by a technician who knows the access code.
Unauthorized programming is practically eliminated.

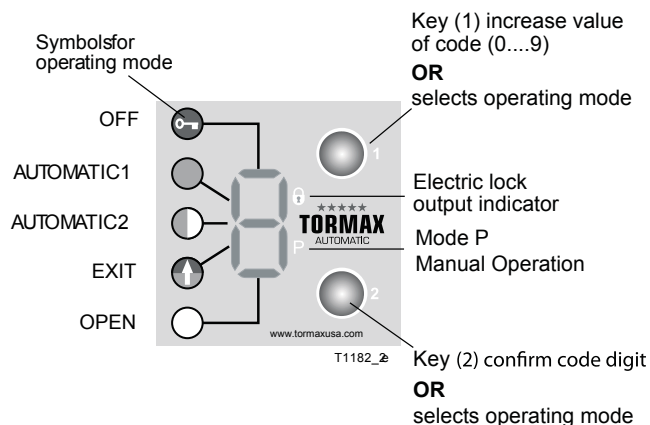

Control Level end user

Functions: Choice of the operating mode
Reset

Displays: Current operating mode
Two-digit fault numbers

Access protection: Panellock

Programming Level for the AAADM certified technician

Functions: Input of access code "C"
Programming of max. 100 parameters
in 10 steps

Displays: Currently set parameter

Access protection: Access code (111)

Time out: 10 min. after the last programming entry is made the FCP will time out and technician will be required to enter the access code (111) again to make further adjustments.


Programming with the FCP

With key 1 the value of the number is always increased (0 to 9 and back to 0)

With key 2 the displayed number is always confirmed.


1. Start Access Code

Indication of operating mode

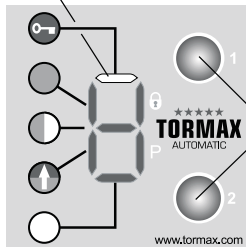

Press key1 and 2 simultaneously until „C“ appears

Letter C is shown (= Code)

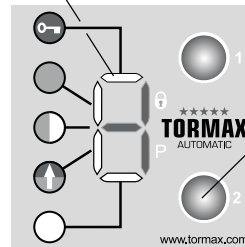


Press key 2 to confirm and 0 will display

2. Entering Access Code 111

Select the number “1” with key 1 and confirm by pressing key 2, repeat this step two more times entering the code 1-1-1

Time out: Occurs if no input is made during 10 s, then the user interface goes back to indicating the operating mode.

Zero appears, ready for code entry

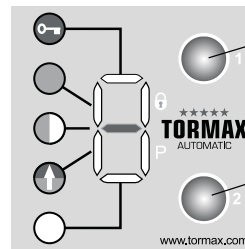


Select first code digit with key 1

Confirm first code digit with key 2

T1185_3e

3. Start Programming Level

P is shown, ready for programming

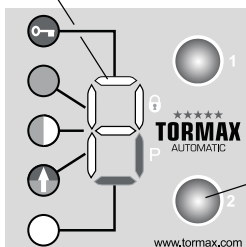


Confirm with key 2

T1185_4e

4. Entering Parameter Code

Zero appears as first digit of code

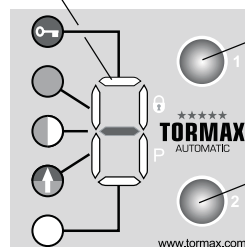

Select first code digit with key 1

Confirm with key 2

T1185_5e

- Select and confirm the 2nd and 3rd code digit using the same sequence as shown in step 2

Note:


- After the 2nd code digit has been confirmed, the flashing digit shows the set value of the parameter (=third digit of the parameter code). If the value is confirmed the FCP will rapidly flash for 1 sec then display p again.
- By quickly pressing and releasing both keys simultaneously the FCP will return to the set mode.

Time-Out


- If no entry is made during 10 s, P is shown again.
- If P is not confirmed during the next 10 s with the key 2, the FCP returns to the operating mode. During the next 10 minutes, pressing both keys simultaneously will cause a direct change to programming level P

Programming Example

Example 1: Begin by entering the access code **111**

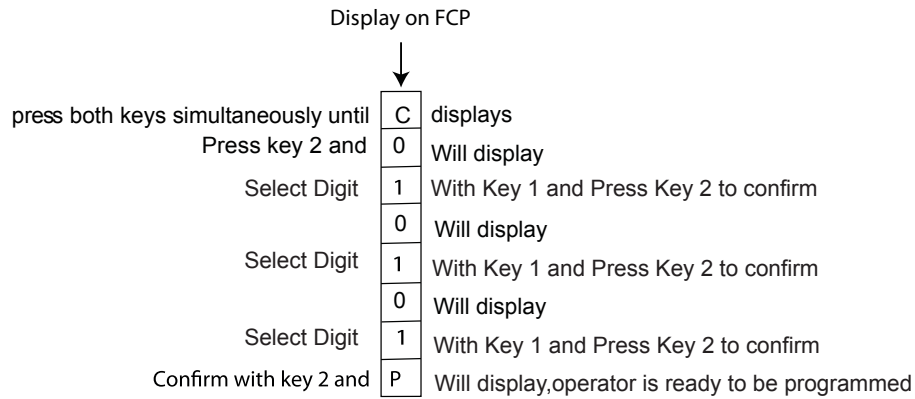

Example 2: Enter code 103 to adjust the Hold - open time for 2 sec

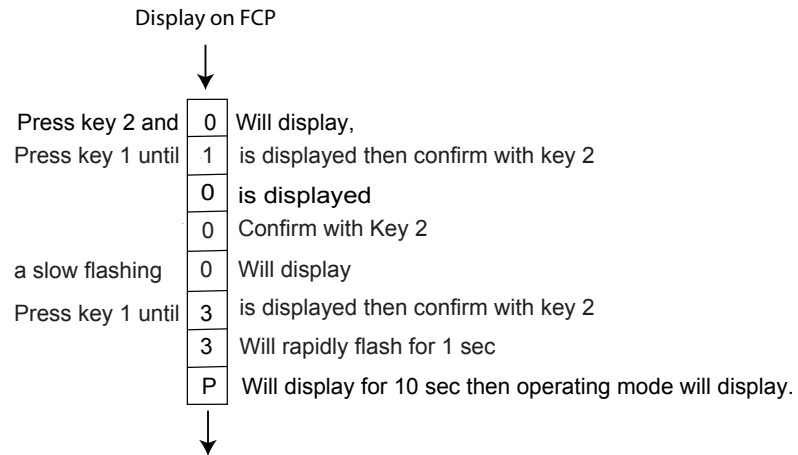

Hold Open time for Automatic 1 is now set for 2 sec

Within 10 minutes you can enter the programming mode by pressing both keys simultaneously and P will display. If no further adjustments are made after 10 minutes the FCP will be protected with the access code, Repeat Example 1.

14. QUICK START UP

At this point a complete check of all fasteners, wire connections/routing, LIN - BUS connections, mechanical operation of both SX-panels and breakout panels, signage, and overall appearance should be performed.



The control will be factory programmed to the functions you specified on your order form, follow the steps below for the door calibration run

- 1) Change the Operating mode to AUTOMATIC 1MODE (solid green circle on FCP) using Key 1 or Key 2.

(Applicable to door style 9200 RH 9430 RH, 9300 LH, 9420 LH and Bi - Part)

- 2a) Press and Hold SW2 switch(Blue button on control) until you hear 1 beep initiating Automatic Configuration, the door opens slowly up to the opening stop displaying H63 for reference run open and closes again displaying H 62 for calibration run close.

(Applicable to door style 9200 LH, 9430 LH, 9300 RH and 9420 RH)

- 2b) Press and Hold SW2 switch(Blue button on control) until you hear 2 beep initiating Automatic Configuration, the door opens slowly up to the opening stop displaying H63 for reference run open and closes again displaying H 62 for calibration run close.
- 3) Complete several opening cycles with SW2 switch until H 65 is no longer displayed on FCP. The learning process lasts for a maximum of 14 cycles .

If a battery back up is supplied , be sure to connect the eight pin connector from the batteries to the module. This connector is disconnected during shipment to prevent the damage to the unit . The batteries will require time to charge fully . The unit will automatically charge the batteries while 110 v is being supplied .

If an electro- mechanical lock is supplied make sure to adjust the locking cams located on the top of the trolley head (s). Removing power and manually engaging the lock may assist in this process.

* SW2 Switch is a small blue button on the control used to activate the door for learning procedure

T-1272 e T-1306 e	Programming the control system	★★★★★ TORMAX AUTOMATIC 12859 Wetmore Road San Antonio, TX 78247 1-888-685-3707 WWW.TORMAXUSA.COM
Area of application	iMotion 2301 & 2401 Slide Door Drive	
Release	September 2009 prov.	
Use	Programming the processor	

Programming of the Control System

Follow the programming steps in the same sequence as shown below or damage to the system may result.

1. Factory Reset

Enter **Code 041** for Factory Reset

2. Operator Type (H11 = not yet programmed)

Code 011 for iMotion 2301 Slide Door Drive

Code 012 for iMotion 2401 Slide Door Drive

3. Automatic Configuration H14 = automatic configuration not yet completed

Recognition of Safety Sensors contact type NO and NC (**MAKE SURE THE SENSORS ARE NOT IN DETECTION DURING THIS PROCESS**)

Note: Manually Open the door to the full open position and then enter the appropriate code.

Style	Code 021 or press SW2 until the first signal sounds Motor Rotation Clockwise Opening	Code 022 or press SW2 until the second signal sounds Motor Rotation Counter Clockwise Opening
9200, 9430	Right Handed Single Slide or Bi- Part	Left Handed Single Slide
9300, 9420	Left Handed Single Slide or Bi- Part	Right Handed Single Slide

Programming continued on next page 

After the code is entered

Activity	Reaction	Display
Change the operating mode to AUTOMATIC	The door looks for the stop in the closing direction (reference run "close")	H64
Activate using SW2 switch*	The door opens slowly up to the opening stop (reference run "open") and closes again (calibration run "close")	H63 H62

Learning procedure H65 = Learning procedure for recording the door dimensions and friction

- **Complete several opening cycles with SW2 in AUTOMATIC operating mode until H65 is no longer displayed on FCP. The learning process lasts for a maximum of 14 cycles.**

4. Enter **code 679** for BREAKOUT SWITCH and then enter **code 031** to configure for NORMALLY CLOSE CIRCUIT

5. Further Functions and Parameters

Tormax recommends that each individual additional programming step be checked on its function.

Checking

- Check the operation of all connected devices after automatic configuration. This applies particularly to the automatically detected safety sensors (sf1 – sf4) and the MCU modules.




Always inspect your equipment to be ANSI A 156.10 compliant. Hand Over appropriate manuals to the enduser and explain functions.

Note on the content of automatic configuration


Safety facilities 1,2,3,4	The contact type will be automatically detected(NC, NO). Make sure sensors are not in detection.
Lock unit MCU32-LOCU	It receives control commands for locking and unlocking via LIN bus from base module.
Battery unit MCU32-BATU	It provides battery back- up at the time of power failure.
MCU32-INOI I/O modules	The functioning module is recognized and saved via the LIN Bus if the module is connected and coded as module 1 or module 2.
Function Control Panel	The F.C.P is recognised and saved via the LIN Bus if the module is connected and coded as shown on page 39. The F.C.P is detected immediately when connected to the LIN BUS input of control as seen on page 39
Power supply module MCU32-PSUP-40-36-A	The functioning module is recognised and saved via the LIN Bus (plugconnection power supply)
Reference travelling path	The door looks for the end stops, starting with an automatic closing command After detection of both end stops the reference travelling path is saved. The display shows H63 for the opening motion and H64 for closing motion
Door dimensions and spring force	The door dimensions are detected in the initial opening cycles for the purpose of calculating the deceleration ramps and the controller setting. The learning process lasts for a maximum of 14 cycles and the display goes out on F.C.P.

*SW2 switch is a small blue button on the control which is used to activate the door for learning procedure.

	Programming Table	 12859 Wetmore Road San Antonio, Tx 78247 1-888-685-3707 www.tormaxusa.com
Area of application	iMotion 2301 & 2401 Slide Door Drive FW-Version V06.xx	
Download	05 March 2010	
Use	Programming and Set up	


Code	Function	Note
01 1	Door operator type iMotion 2301	
01 2	Door Operator type Imotion 2401	
02 1	Automatic configuration Bi - Part, Right Handed (See Page 44)	
02 2	Automatic configuration Left Handed (See Page 44)	
03 0	--Detect and store reference way	
03 1	--Detecting and storing of safety facilities 1-4 (SW2: till 3.sign)	Safety inactive
03 2	--Detecting and storing MCU Lock Module 1	Check coding on module and code 572
03 3	--Detecting and storing of MCU Battery Module	
03 4	--Detecting and storing of MCU I/O- Module 1+2	Check coding on module
03 5	--Detecting and storing of MCU Power supply Module	
03 6	--Detecting and storing of Door mass	Display H65
03 7	--Detecting and storing of MCU User interface 2	Check coding on module
03 8	Terminal Module: Detecting and storing of "in 1-4"	Pulse generators inactive
03 9	I/O Module 1: Detecting and storing of "in 1-4"	Pulse generators inactive
04 0	Reset	Starts program with calibration run
04 1	Factory Reset	All adjustments back to default values (see *)
04 2	Firmware version	Example: r06_00 = V06.00
04 3	Number of cycles	Example: c10_302 = 10'302 cycles (max. 99'999'999)
04 4	Number of operating hours	Example: h4_002 = 4002 hours (max.99'999'999)
07 0...9	--Door mass	Automatic detection contained in 021 / 022
10 0...9	Hold-open time of activator in mode of op. AUTO1	
	0 1 2* 3 4 5 6 7 8 9	code
	0 0.5 1 2 3 5 10 20 30 60	sec.
11 0...9	Hold-open time of activator in mode of op. AUTO2	
	0 1 2* 3 4 5 6 7 8 9	code
	0 0.5 1 2 3 5 10 20 30 60	sec.
12 0...9	Hold-open time of key switch	
	0 1 2 3 4* 5 6 7 8 9	code
	0 0.5 1 2 3 5 10 20 30 60	sec.
13 0...9	Delay time Mode of op. OFF	
	0 1 2* 3 4 5 6 7 8 9	code
	1 3 5 7.5 10 15 20 30 45 60	sec.
14 0...9	Bell duration	0 = Duration identical to trigger duration
	0 1 2* 3 4 5 6 7 8 9	code
	id 0.5 1 2 3 4 5 6 8 10	sec.
15 0...9	Bell intermission	
	0 1 2 3 4 5 6* 7 8 9	code
	0 0.5 1 2 3 4 5 6 8 10	sec.
16 0...9	Stop time after safety	
	0 1 2* 3 4 5 6 7 8 9	code
	0 0.5 1 2 3 4 5 6 8 10	sec.
17 0...9	Runtime Battery in mode of op. 2-6	Door opens after switch-off battery
	0 1 2 3* 4 5 6 7 8 9	code
	10s 1 5 10 30 60 120 240 360 480	sec / min.
18 0...9	Runtime Battery in mode of op. OFF	
	0* 1 2 3 4 5 6 7 8 9	code
	10s 1 5 10 30 60 120 240 360 480	sec / min.
20 1...9	Speed opening	
	0 1 2 3 4 5 6* 7 8 9	Code
	3.93 7.87 11.8 15.75 19.69 23.62 27.56 31.5 35.43 39.37	Inch / s

* = Default value

	Programming Table	 12859 Wetmore Road San Antonio, Tx 78247 1-888-685-3707 www.tormaxusa.com
Area of application	iMotion 2301 & 2401 Slide Door Drive	
Download	05 March 2010	
Use	Programming and Set up	

Code	Function										Note
21 0...9	Speed closing										
	0	1	2	3	4 *	5	6	7	8	9	Code
	3.15	6.3	9.45	12.6	15.75	18.9	22.05	25.2	28.35	31.5	Inch/s
22 0...9	Homing-in-speed close, minimal										
	0 *	1	2	3	4	5	6	7	8	9	Code
	15	16	18	21	25	30	36	43	51	60	mm/s
26 0...9 2*	Breaking distance opening										9 = max
28 0...9 4*	Breaking distance closing										9 = max
30 0...9	Motor force opening										Net force on door edge
	0	1	2	3	4	5 *	6	7	8	9	code
	10	20	30	40	50	60	70	80	90	100	%
31 0...9	Motor force closing										Net force on door edge
	0	1	2	3	4	5 *	6	7	8	9	code
	10	20	30	40	50	60	70	80	90	100	%
33 0...9	Force closed position										Net force on door edge > reduce if H73 after 10s!
	0	1	2	3	4	5 *	6	7	8	9	code
	10	20	30	40	50	60	70	80	90	100	N
35 0...9 5*	Reversing sensitivity opening										9 = max
36 0...9 5*	Reversing sensitivity closing										9 = max
41 0...9	Reduced opening width										
	0	1	2	3	4	5	6 *	7	8	9	code
	10	20	30	40	50	60	70	80	90	100	%
51 0 *	Operating mode return to last setting on Function Control Panel										after terminal operating mode
51 1...6	Operating mode return to mode of op. ...										after terminal operating mode
	1	2	3	4	5	6	0	0	0	0	code
	OFF	AUT1	AUT2	EXIT	OPEN	MAN.					Mode of Operation
51 7	No operating mode return										after terminal operating mode
55 0 *	Locks in operating mode OFF										
55 1	Locks in operating mode OFF, EXIT										
55 2	Locks in operating mode OFF, AUTO 1+2, EXIT										
56 0 *	Unlocks never in case of power failure										
56 1	Unlocks in AUTO1, AUTO2, EXIT in case of power failure										
56 2	Unlocks in every operating mode in case of power failure										
57 0	Electric strike: current-free locked										
57 1	Electric strike: current-free unlocked										Only for electric strikes with 100% Duty ratio
57 2 *	Without electric strike										
57 3	Electric strike switch-on range 100%										Only for electric strikes with 100% Duty ratio
58 0...9	Delay time to open										Only valid if electric strike has to unlock
	0 *	1	2	3	4	5	6	7	8	9	code
	0	0.2	0.4	0.8	1.2	1.6	2	2.5	3	4	sec.
59 1...4	Voltage Output										E 1&2 See page 47
	0	1	2	3	4 *	0	0	0	0	0	code
	6	9	12	15	24						V DC
60 0	in1: Operation mode OFF										Contact NO. NC detect with code 038.
60 1	in1: Operation mode MANUAL										Contact NO. NC detect with code 038.
60 2	in1: Operation mode OPEN										Contact NO. NC detect with code 038.
60 3 *	in1: Activator inside										Contact NO. NC detect with code 038.
60 4	in1: Activator outside										Contact NO. NC detect with code 038.
60 5	in1: Key switch										Contact NO. NC detect with code 038.
60 6	in1: Emergency open except in OFF										Contact NO. NC detect with code 038.
60 7	in1: Emergency open in all modes of op.										Contact NO. NC detect with code 038.
60 8	in1: Emergency close (with locking)										Contact NO. NC detect with code 038.
60 9	in1: Operation mode EXIT										Contact NO. NC detect with code 038.

* = Default value

	Programming Table	 12859 Wetmore Road San Antonio, Tx 78247 1-888-685-3707 www.tormaxusa.com
Area of application	iMotion 2301 & 2401 Slide Door Drive	
Download	05 March 2010	
Use	Programming and Set up	

Code	Function	Note
61 0...9 4*	in2: Same choice of functions as on "in1"	Contact NO. NC detect with code 038.
62 0...9 5*	in3: Same choice of functions as on "in1"	Contact NO. NC detect with code 038.
63 0...9 0*	in4: Same choice of functions as on "in1"	Contact NO. NC detect with code 038.
64 0	sf1: Safety opening 1 with stop function	Type of connection detect with code 031
64 1	sf1: Safety opening 1 with creeping function	Type of connection detect with code 031
64 2 *	sf1: Safety closing 1 with reversing function	Type of connection detect with code 031
64 3	sf1: Safety closing 1 with creeping function	Type of connection detect with code 031
64 4	sf1: Safety swing area	Type of connection detect with code 031
64 5	sf1: Safety stop	Type of connection detect with code 031
64 6	sf1: Emergency opening except in OFF	Type of connection detect with code 031
64 7	sf1: Emergency opening in all modes of op.	Type of connection detect with code 031
64 8	sf1: Emergency closing (with locking)	Type of connection detect with code 031
64 9	sf1: Mode of op. MANUAL / Break out	Type of connection detect with code 031
64 A	sf1: Safety opening 2 with stop function	Type of connection detect with code 031
64 b	sf1: Safety opening 2 with creeping function	Type of connection detect with code 031
64 C	sf1: Safety closing 2 with reverse function	Type of connection detect with code 031
64 d	sf1: Safety closing 2 with creeping function	Type of connection detect with code 031
65 0...d C*	sf2: Same choice of functions as on "sf1"	Type of connection detect with code 031
66 0...d 0*	sf3: Same choice of functions as on "sf1"	Type of connection detect with code 031
67 0...d A*	sf4: Same choice of functions as on "sf1"	Type of connection detect with code 031
68 0	out1: Message "door closed"	
68 1	out1: Message "door closed and locked"	
68 2	out1: Message "door open"	
68 3	out1: Message "General error"	
68 4 *	out1: Bell	
68 5	out1: Message "Mode of operation OFF"	
68 7	out1: Battery in service	
68 9	out1: Message "door opening or open"	Function visible after 1 door-opening cycle
69 0...9 0*	out2: Same choice of functions as on "out1"	
70 0 *	I/O Module 1: in1: No function	Contact NO. NC detect with code 039.
70 1	I/O Module 1: in1: Operation mode OFF	Contact NO. NC detect with code 039.
70 2	I/O Module 1: in1: Operation mode AUTOMATIC 1	Contact NO. NC detect with code 039.
70 3	I/O Module 1: in1: Operation mode AUTOMATIC 2	Contact NO. NC detect with code 039.
70 4	I/O Module 1: in1: Operation mode EXIT	Contact NO. NC detect with code 039.
70 5	I/O Module 1: in1: Operation mode OPEN	Contact NO. NC detect with code 039.
70 6	I/O Module 1: in1: Operation mode MANUAL	Contact NO. NC detect with code 039.
70 7	I/O Module 1: in1: Inhibit switch	Contact NO. NC detect with code 039.
71 0...7 0*	I/O Module 1: in2: Same choice of functions as on I/O Module 1: in1	Contact NO. NC detect with code 039.
72 0...7 0*	I/O Module 1: in3: Same choice of functions as on I/O Module 1: in1	Contact NO. NC detect with code 039.
73 0...7 0*	I/O Module 1: in4: Same choice of functions as on I/O Module 1: in1	Contact NO. NC detect with code 039.
74 0 *	I/O Module 1: out1: No function	
74 1	I/O Module 1: out1: Mode of op. OFF	
74 2	I/O Module 1: out1: Mode of op. AUTOMATIC 1	
74 3	I/O Module 1: out1: Mode of op. AUTOMATIC 2	
74 4	I/O Module 1: out1: Mode of op. EXIT	
74 5	I/O Module 1: out1: Mode of op. OPEN	
74 6	I/O Module 1: out1: Mode of op. MANUAL	
74 7	I/O Module 1: out1: "Door opens"	
74 8	I/O Module 1: out1: "door opens + door open"	
74 9	I/O Module 1: out1: "Door closes"	
75 0...9 0*	I/O Module 1: out2: Same choice of functions as on I/O Module 1: out1	
76 0...9 0*	I/O Module 1: out3: Same choice of functions as on I/O Module 1: out1	
77 0...9 0*	I/O Module 1: out4: Same choice of functions as on I/O Module 1: out1	
78 0	Function Control Panel: in1: No function	
78 1 *	Function Control Panel: in1: Panel lock	Contact NO

* = Default value

	Programming Table	<div><div>★★★★★</div><div>TORMAX</div><div>AUTOMATIC</div></div> <div>12859 Wetmore Road San Antonio, Tx 78247 1-888-685-3707 www.tormaxusa.com</div>
Area of application	iMotion 2301 & 2401 Slide Door Drive	
Download	05 March 2010	
Use	Programming and Set up	

Code	Function	Note
78 2	Funtion Control Panel : in1: Mode of op. OFF	Contact NO
78 3	Funtion Control Panel : in1: Mode of op. AUTOMATIC 2	Contact NO
78 4	Funtion Control Panel : in1: Mode of op. EXIT	Contact NO
78 5	Funtion Control Panel : in1: Mode of op. OPEN	Contact NO
78 6	Funtion Control Panel : in1: Mode of op. MANUAL	Contact NO
78 7	Funtion Control Panel : in1: Emergency closing	Contact NO
78 8	Funtion Control Panel : in1: Emergency opening in all op. modes	Contact NO
78 9	Funtion Control Panel : in1: Key switch	Contact NO
79 0...9 0*	Funtion Control Panel : in1: in 2: Same choice as on FCP : in1	
80 0 *	Bell trigger: Safety closing 1	
80 1	Bell trigger: Safety closing 2	
80 2	Bell trigger: Activator inside	
80 3	Bell trigger: Activator outside	
80 4	Bell trigger: Key switch	
82 0 *	No step by step control	
82 1	Step by step control only for key switch	
82 2	Step by step control only for activator inside and outside	
82 3	Step by step control for activator inside, outside and key switch	
85 0 *	No airlock function	

* = Default value

Trouble shooting

* E = Error | H = Hint


* No.	Fault	Reaction System	Reset
E00	Firmware incompatible to MCU version /D	Safety operating mode or only display	Reset, new version MCU32-BASE
E0x	Internal test negative	Safety operating mode or only display	Reset
E11	MCU Lock 1, wrong position	Door cannot open	Automatically if OK
E21	LIN to User Interface 1 USIN-7 interrupted	Last mode of operation remains	Automatically if OK
E22	LIN to User Interface 2 USIN-7 interrupted	Last mode of operation remains	Automatically if OK
E23	LIN to s I/O-Modul 1 INOU interrupted	Programmed function will be inactive	Automatically if OK
E24	LIN to s I/O-Modul 2 INOU interrupted	Programmed function will be inactive	Automatically if OK
E25	LIN to Lock Unit 1 LOCU-40-7 interrupted	Last status remains	Automatically if OK
E26	LIN to Lock Unit 2 LOCU-40-7 interrupted	Last status remains	Automatically if OK
E29	LIN to Power Supply PSUP-40-36 interrupted	Last status remains	Automatically if OK
E30	Safety clos. creep 2 >1min. active, test neg.	According safety function	Automatically if OK
E31	Safety open 1 >1min. active, test neg.	According safety function	Automatically if OK
E32	Safety op. creep 1 >1min. active, test neg.	According safety function	Automatically if OK
E33	Safety closing 1 >1min. active, test neg.	According safety function	Automatically if OK
E34	Safety clos. creep 1 >1min. active, test neg.	According safety function	Automatically if OK
E35	Safety swing area >1min. active, test neg.	According safety function	Automatically if OK
E36	Safety stop >1min. active, test neg.	According safety function	Automatically if OK
E37	Safety open 2 >1min. active, test neg.	According safety function	Automatically if OK
E38	Safety op. creep 2 >1min. active, test neg.	According safety function	Automatically if OK
E39	Safety closing 2 >1min. active, test neg.	According safety function	Automatically if OK
E41	Activator inside > 1min. active	Door remains open	Automatically if O.K.
E42	Activator outside > 1min. active	Door remains open	Automatically if O.K.
E43	Key switch > 1min. active	Door remains open	Automatically if O.K.
E46	Emergency open >10min. active	Door remains open	Automatically if O.K.
E47	Emergency close >10min. active	Door closes and remains closed	Automatically if O.K.
E48	Wake up or Push button SW2 > 1min. active	Door remains open	Automatically if O.K.
E49	Inhibit switch> 1min. active	Door stand still	Automatically if O.K.
E51	Encoder not working	Safety operating mode	Automatic Reset / Reset
E53	Calibration run different from reference	Safety operating mode	Reset
E54	Driveway in op. longer than reference	Safety operating mode	Reset >automatic configuration
E55	Position in closed position is drift to much		Reset
E61	Power supply 40V (Limit U,I,P)	Safety operating mode	Automatically if O.K.
E62	Power supply 24V (Limit U)	Safety op. mode	Automatic if OK.
E64	Motor temp. > 90 ° C, cable interrupted	Safety operating mode	Automatically after cooling down
E65	Control end stage > 100 ° C	Safety operating mode	Automatically after cooling down
E66	Motor current differs from given value	Safety operating mode	Reset
E67	Motor current to high in long-term	Normal operation	Automatically if o.k.
E8x	Memory or processor test negative	Safety operating mode	Reset
H11	Operator type not defined	Safety operating mode	Program operator type
H14	Automatic configuration not executed	Safety operating mode	Program 021 or 022
H61	Calibration run in opening direction	Searches open position	At the end of movement
H62	Calibration run in closing direction	Searches closed position	At the end of movement
H63	Reference run opening	Measures reference run length	At the end of movement
H64	Reference run closing	Searches closed position	At the end of movement
H65	Learn mode (Weight detection)	Normal operation	After 3-12 opening cycles
H71	Battery mode	Door moves slowly	Power supply return
H73	Motor current in closed position to high	Normal operation	Reset
H91	Obstacle detection at opening	Door reverses	Automatically, Display 20s.
H92	Obstacle detected at closing	Door reverses	Automatically, Display 20s.
H93	Obstacle at same position at opening	Reset after 5 reversings	Automatically, Display 20s.
H94	Obstacle at same position closing	Reset after 5 reversings	Automatically, Display 20s

T-1263 e	Connection Diagram Terminal Module MCU32-TERM-B	★★★★★ TORMAX AUTOMATIC 12859 Wetmore Road San Antonio, Tx 78247 1-888-685-3707 www.tormaxusa.com
Area of application	iMotion 2301& 2401 Slide Door Drives	
Release	July 2008	
Use	Input/Output Terminal Designation	

Terminal Allocation in Default Configuration

Inputs C, D and outputs E are programmable. See programming table for options

Safety Facilities

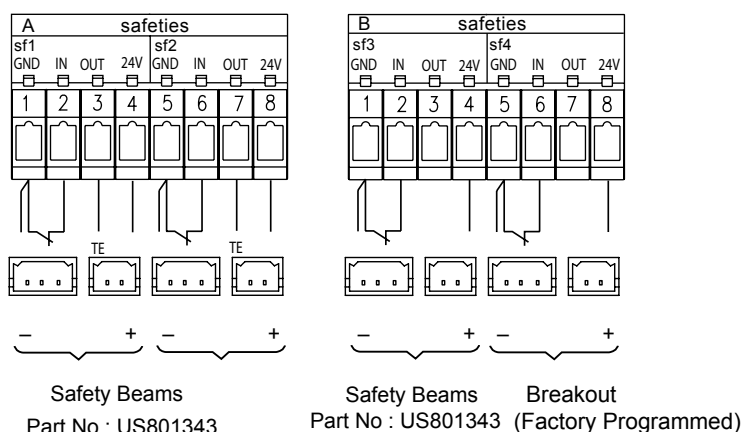

sf1 (Default setting) - Safety closing reversing function


sf2 ,sf3 & sf4 - For functions see programming table

C1 & C2 (Activator inside) - Activation signal


C4 & C5 (Activator Outside) - Activation signal inhibits when FCP is in 1 way mode or exit mode and the door is fully closed.

D1& D2(Key Switch) - Activates the door open in all modes except P (manual mode).

Inputs

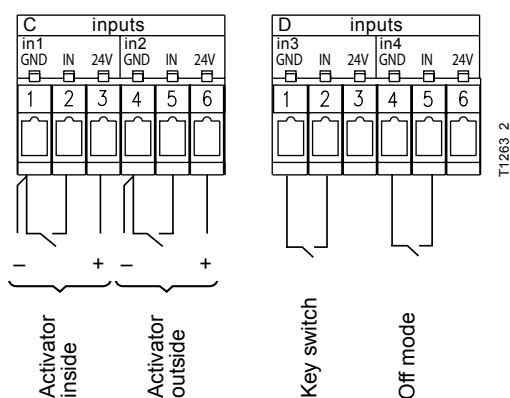

Outputs

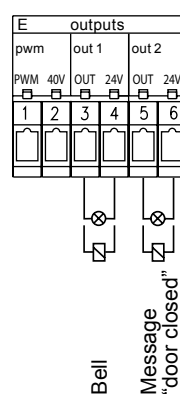


Power Output to sensors is .75 A max (For 2301 Standard Door Drive.)

Power Output to Sensors is 1.5 A max(For 2401 Heavy Duty Door Drive.)

The following sheet is a simplified quick reference guide for installing the Optex i-One Sensor on the Tormax Automatic Sliding Door Package. Please reference the installation manual supplied with each sensor for complete details.


Standard sensor mounting location for Tormax Automatic Sliding Doors

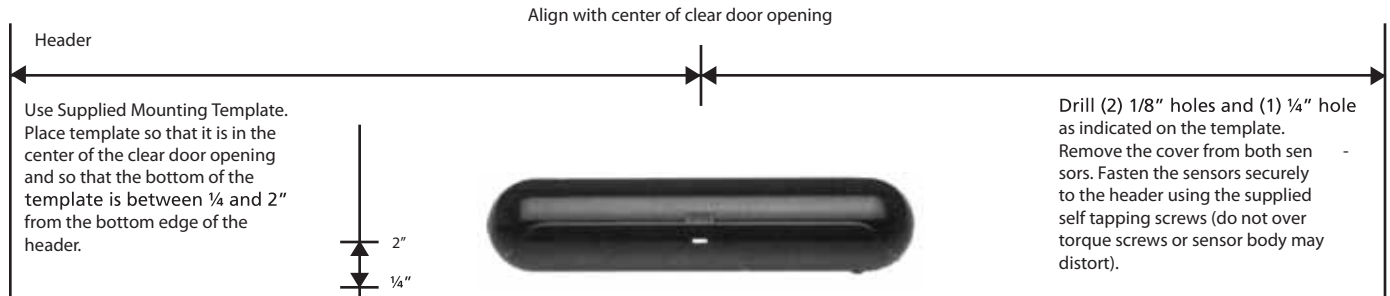

Wiring Connections

1. Feed wiring harness thru 1/4" pass thru hole. Securely fasten wiring out of the path of moving parts. Manually slide doors open and closed to verify no binding from wiring. Use 26 gauge wire strippers to strip the necessary wire ends. The green wire is not used. Connect the wires to the Tormax control unit as illustrated.

2. Do not connect sensor to wiring at this time. Connect the plug once you have selected all of your initial settings.

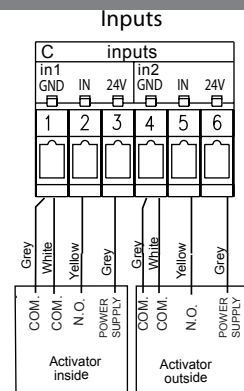


2301 & 2401 Drive
Control Unit

Initial Settings

Dip Switch and Sensitivity Settings Adjust as per diagram at right

Start with adjustment as per diagram at right. When performing walk test, adjust if necessary for deeper or shallower detection pattern.

Dipswitch Settings

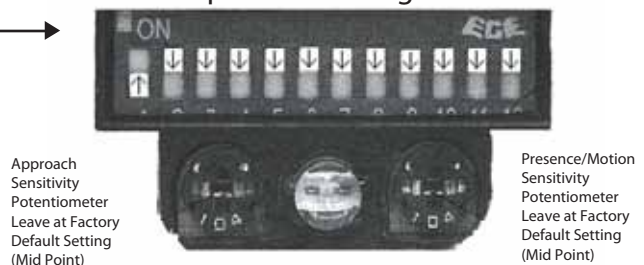


Presence/Motion Area Adjustment

Left and Right Shutters - Open All Areas

Open all areas = approximately 15.5 feet wide Presence/Motion detection area (8 feet left and right of center). This offers the greatest protection to the users. Some environments may dictate decreasing the width (example: merchandise stacked in front of side lights, single slides with perpendicular walls in close proximity to the clear door opening.

Keep Width Adjustment as below except in cases where moving objects may enter the sensors field of view.

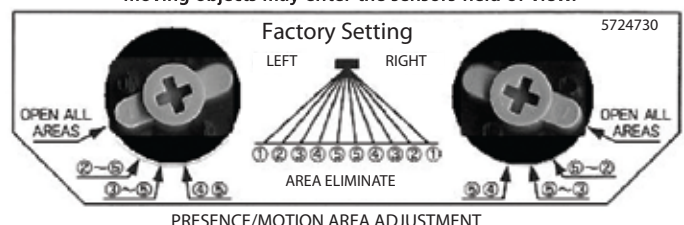


Approach Area Angle Adjustment

Start with adjustment as per diagram at right.
When performing walk test, adjust if necessary
for deeper or shallower detection pattern.

Approach Area
Angle Adjustment

Keep the default setting of "0"

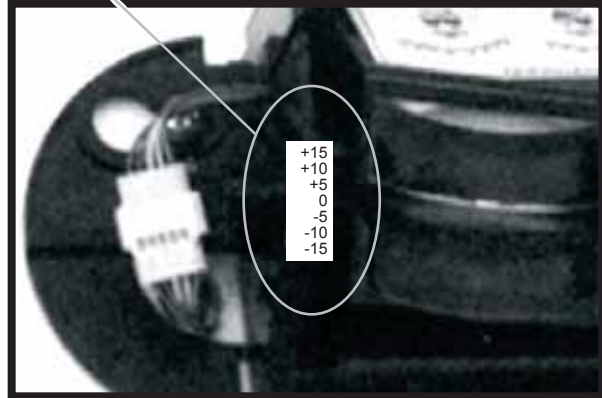

Presence Area Angle Adjustment


Note: It is imperative that you start your presence area angle adjustment with the sensor adjusted to the full -8 degree setting. In some versions, a -8 degree may not be marked on the sensor.

IMPORTANT

This -8 degree angle can be achieved by turning the Presence Area Angle Adjustment screw counter-clockwise a full four turns or until the adjuster screw makes a clicking sound. This is the -8 degree setting.

Fine
Adjustment
Screw


Fully Counter Clockwise

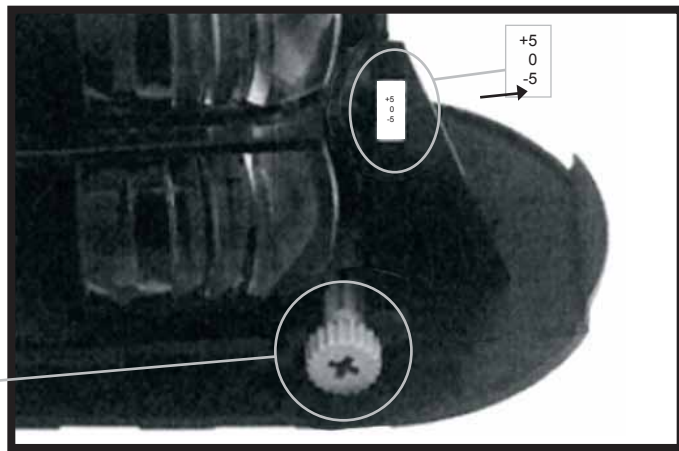

Walk Test Mode

Walk-Test Mode: For setup only: move dipswitch 1 and 2 to the off position (2 second learn).

WARNING! After setup, dipswitch 1 and 2 **MUST** be **set to 60 seconds, 180 seconds, or infinity to comply** with the ANSI Standard A156.10.

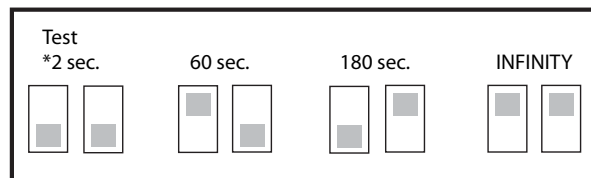

USE PAGE 3 OF THIS DOCUMENT AS YOUR GUIDE FOR PROPER ADJUSTMENT.


★★★★★ TORMAX AUTOMATIC

Important! Make sure the presence adjustment angle is at the full -8 degree setting before continuing.

I-One Sensor Presence/Motion Area Adjustment

Connect the sensor on the header cover side. Cycle the door open and closed several times. If ghosting occurs, adjust the Presence/Motion angle adjustment screw ¼ turn clockwise and cycle the door open and closed. Continue this process until ghosting stops.

Connect the sensor on the non-cover side of header and repeat the process described above. Once all adjustments are performed, disconnect 5-pin sensor connector and set dipswitches 1 and 2 for appropriate learn time (60, 180, infinite). Reconnect the 5-pin connector, immediately place the cover on the sensor and clear the area for 5 seconds.

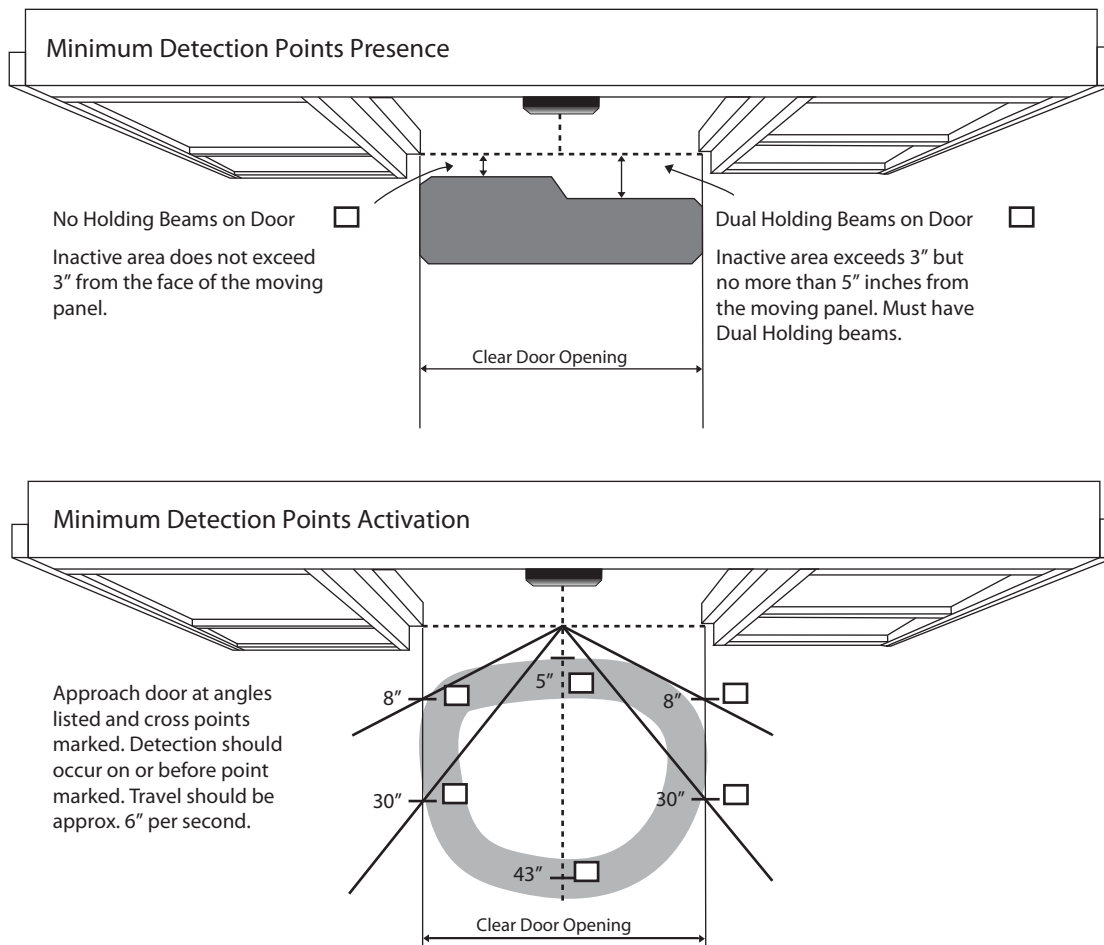

☒ Passed ☐ Failed ☐ Initially failed, then passed after adjustment

Note: Drawings not to Scale

Walk test sensor pattern to ensure conformance with the ANSI standard A156.10. It is imperative that sensors comply with the above detection zones.

For additional information, see the supplied installation manual or call Optex Technologies Inc. at 800-877-6656.

FINAL CHECKLIST

Y	N	N/A	
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Do the doors slide freely, no binding/dragging?
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Are all wires clear from moving parts?
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Are all adjustment bolts tight including anti-risers?
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Do the break out panels function properly with no obstructions?
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Is the breakout switch functioning? (TX9300 & TX9430)
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Are there any fault codes flashing on the FCP?
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Are all modes on the FCP operating correctly (Off, Auto, Red Open, Exit, Hold)?
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Are the holding beams operating correctly (if equipped)?
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Is the lock (electrical or mechanical) functioning properly?
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Has an ANSI A156.10 inspection been completed?
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Are the Door# decal, Service decal, Daily Safety Check decal all present and in proper location?
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Has the Daily Safety Check been reviewed with the Manager?
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Have all the FCP functions been reviewed with the Manager?
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Was the Owners manual given to the Manager?
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Did the Manager sign the work order/service ticket?

Installer signature/date _____

TECHNICAL SPECIFICATIONS

T-1258 e	Technical Data	★★★★★ TORMAX AUTOMATIC 12859 Wetmore Road San Antonio, TX 78247 1-888-685-3707 WWW.TORMAXUSA.COM
Area of application	iMotion 2301 & 2401 Slide Door Drive	
Release	November 2009	
Use	Technical Specification	


Door Operator Type	iMotion 2301 & 2401 Slide Door Drive
Drive System	Electromechanical slide door operator with direct drive through AC permanent magnet synchronous motor with external rotor
Control System	iMotion MCU32
Mains Connection	1 x 230 / 1 x 115 V AC, 50 – 60 Hz, 10 A
Power Consumption	Max. 190 W (For 2301 Slide Door Drive) Max. 310 W (For 2401 Slide Door Drive)
Sensor Power Supply	24 V DC (+0.5– 1.5V) 0.75 A (For 2301 Slide Door Drive) 24 V DC (+0.5– 1.5V) 1.5 A (For 2401 Slide Door Drive) in battery operation min. 16.5V
Protective Class of Drive	IP 22
Ambient Temperature	–4 °F to +122 °F
Outputs	24 V DC short circuit proof (within power supply 0.75 A in total) For 2301 Slide Door Drive 24 V DC short circuit proof (within power supply 1.5 A in total) For 2401 Slide Door Drive
CE Approval	CE inkl. RoHS, TÜV, ETL
Standards	DIN 18650, EN 60335-1, EN 61000-6-2, EN 61000-6-3, UL 325 Note : iMotion 2401 is a category A drive. It may cause radio interferences in living areas. In this case the user can ask for suitable measures
Durability	Class 3 according to DIN 18650-1 Dec. 2005 1,000,000 test cycles with 4,000 cycles per day

For 2301 & 2401 Slide Door Drives

	PACKAGE WIDTH (foot)	MAXIMUM DOOR WEIGHT (LBS) 2301	MAXIMUM DOOR WEIGHT (LBS) 2401
SINGLE SLIDE	7' - 9'	265 lbs	530 lbs
BI - PART	10' - 14'	220 lbs	440 lbs
TELESCOPIC SINGLE SLIDE	7' - 9'	176 lbs	265 lbs
TELESCOPIC BI - PART	10' - 14'	132 lbs	220 lbs
For larger package width Contact Tormax			

Opening speed	3.9 in/s – 39.4 in/s
Closing speed	3.9 in/s – 39.4 in/s
Force at the tooth belt	18.4 – 250 Foot Pounds (For 2301 Slide Door Drive) 29.5 - 295 Foot pounds (For 2401 Slide Door Drive)

T-1277 e	Cable Plan	★★★★★ TORMAX AUTOMATIC 12859 Wetmore Road San Antonio, Tx 78247 1-888-685-3707 www.tormaxusa.com
Area of application	iMotion 2301 & 2401 Slide Door Drive	
Release	Jan. 2009	
Use	Wiring Specifications	

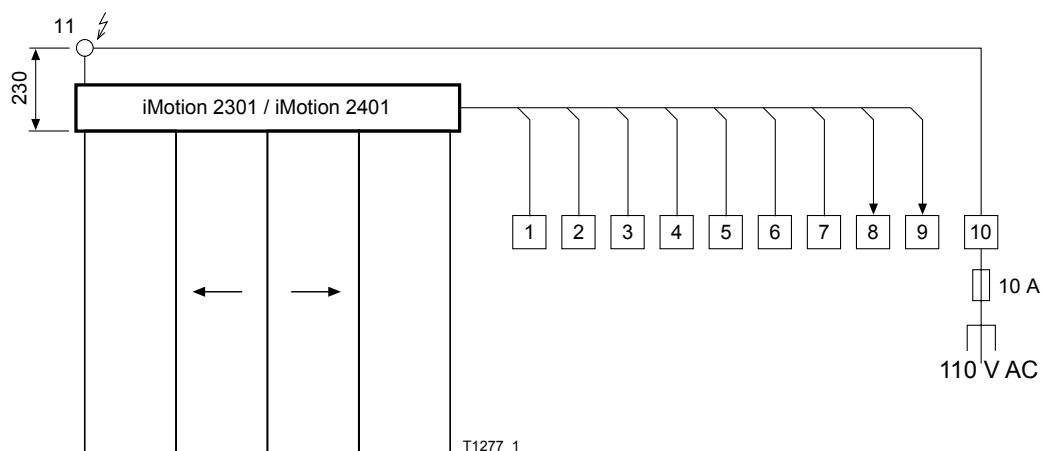

No.	☑	Control Components	Notes	Cable	Length (m) without screen	Length (m) with screen
1		Activator/Push-button inside	Stranded wire recommended	4 × 20 AWG	< 30	< 100
2		Activator/Push-button outside	Stranded wire recommended	4 × 20 AWG	< 30	< 100
3		Key-switch	Stranded wire recommended	2 × 20 AWG	< 30	< 100
4		User interface iMotion connected with FCC-connector		Phone ribbon cable 6 × 26 AWG RJ12, 6P6C	< 30	
		User interface iMotion connected with LIN-Adapter		3 × 23 AWG	< 30	< 100
5		Input	Stranded wire recommended	... × 20 AWG	< 30	< 100
6	 × 20 AWG	< 30	< 100
7	 × 20 AWG	< 30	< 100
8		Message 1 ...	Stranded wire recommended	2 × 20 AWG	< 30	< 100
9		Message 2 ...	Stranded wire recommended	2 × 20 AWG	< 30	< 100
10		Mains main switch	Stranded wire recommended	3 × 20 AWG		
11		Mains socket	Stranded wire recommended			


T-1259 e	Module Documentation Control Unit MCU32-CONU-85-18-A	★★★★★ TORMAX AUTOMATIC 12859 Wetmore Road San Antonio, TX 78247 1-888-685-3707 WWW.TORMAXUSA.COM
Area of application	iMotion 2301 and 2401 Slide Door Drives	
Release	November 2009	
Use	Installation and Maintenance	

Purpose

To manage the functions of control system for iMotion 2301 standard and 2401 Heavy duty door drives

Function

The control unit contains all the necessary control system components for the operation of a sliding door system. It provides the connections and the power supply for the control panel, lock unit, motor unit, battery unit and input / output module. The system configuration is performed through either the control panel MCU32-USIN or through the service software iMotion.

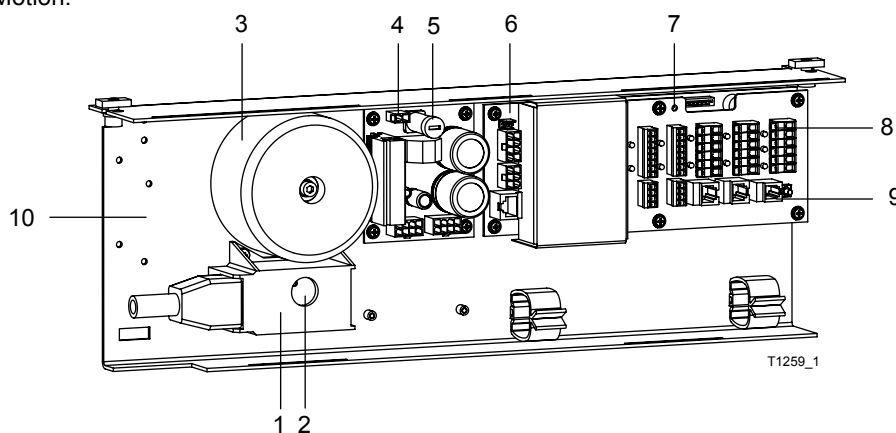


- | | |
|--|--|
| 1 Power supply MCU32-FLTR-B | 7 Display power supply 24 V / 5 V |
| 2 Voltage selector 230 / 115 VAC | 8 Terminal module MCU32-TERM-B |
| 3 Transformer MCU32-TRAF-29-85-A | 9 Push-button for opening impulse |
| 4 Power supply module MCU32-PSUP-40-18-C | 10 Space for installation of 1 input/output module or 1 relay module |
| 5 Fuse 5AT | |
| 6 Base module MCU32-BASE-40-200-A | |

Module Connections



Connectors and terminals may only be connected in the current-free state.

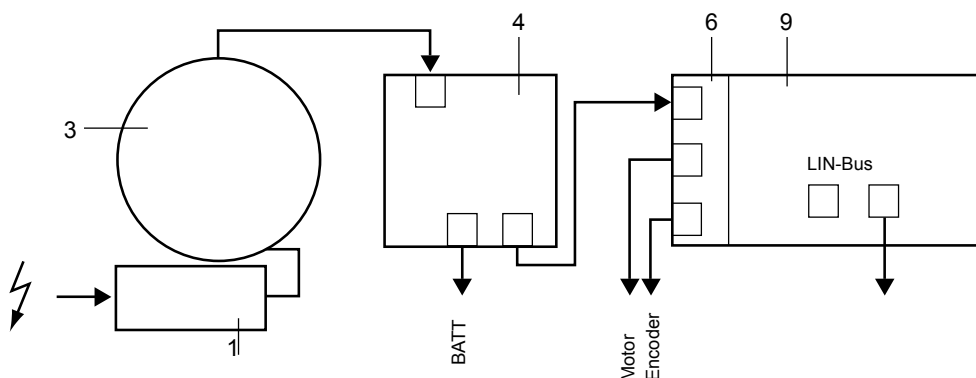


Commissioning


See T-1272.

Component Dimensions

2301 Standard Door Drive

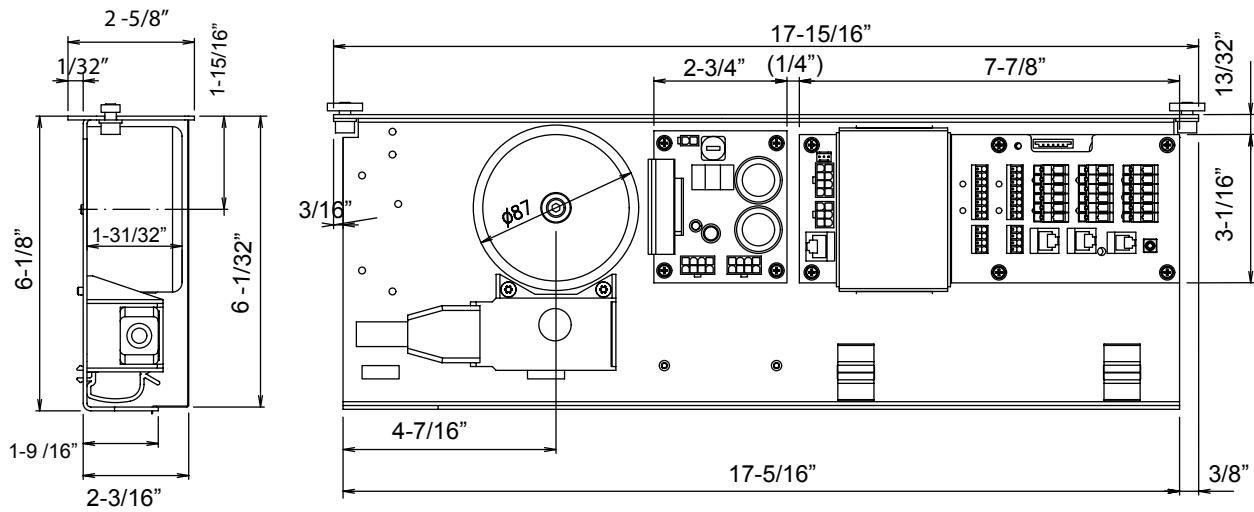

2401 Standard Door Drive

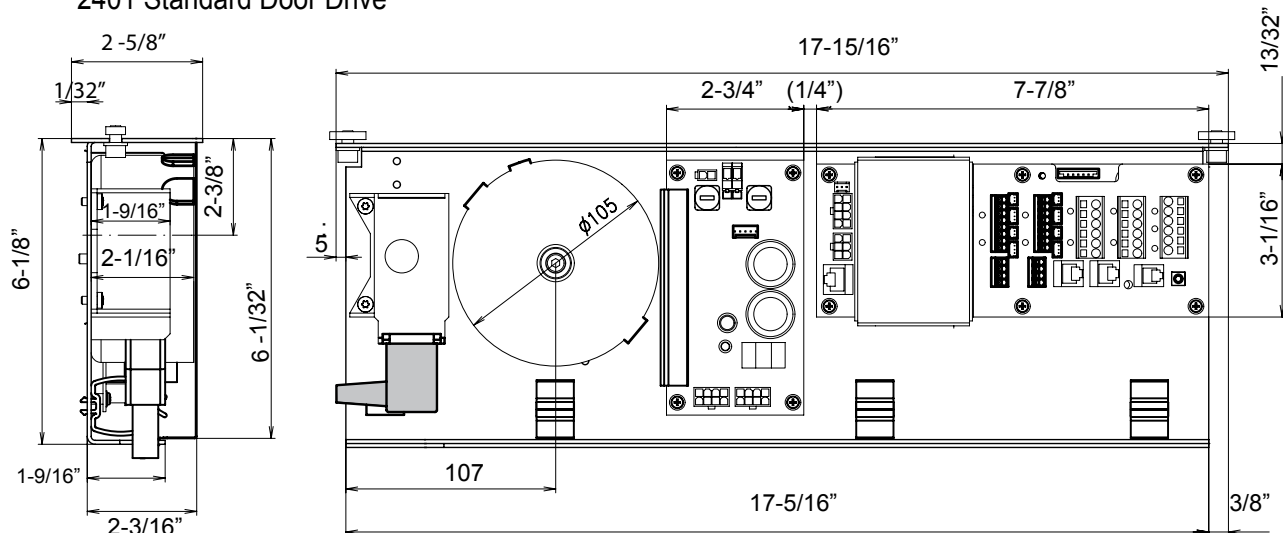

Technical Data

	2301	2401
Mains connection:	115 / 230 V AC, 50-60 Hz	115/230 V AC, 50–60 Hz
Power consumption:	8 ... 190 W	8 – 310 W
Power supply sensors	24 V DC / 0.75 A	24 VDC / 1.5 A
Ambient temperature:	–4°F to +122°F	–4°F to +122°F
Module interfaces:	Motor unit MCU32-MOTU-40-6-A Battery unit MCU32-BATU-24-1-B LIN bus for lock unit MCU32-LOCU-40-7-B LIN bus for input/output module MCU32-INO-U-A LIN bus for operating unit MCU32-USIN-7-A RS232 for service software iMotion Config Card MCU32-CONF- ...	Motor unit MCU32-MOTU-40-10-A Battery unit MCU32-BATU-24-1-B LIN Bus for lock unit MCU32-LOCU-40-7-B LIN Bus for input/output module MCU32-INO-U-A LIN Bus for user interface MCU32-USIN-7-A RS232 Service Software TCP Config Card MCU32-CONF-...

T-1274 e	Module Documentation Motor Unit MCU32-MOTU-40-6-A	★★★★★ TORMAX AUTOMATIC 12859 Wetmore Road San Antonio, TX 78247 1-888-685-3707 WWW.TORMAXUSA.COM
Area of application	iMotion 2301 & 2401 Slide Door Drive	
Release	March 2008	
Use	Installation and Maintenance	


Purpose

This motor unit is design for 2301 standard and 2401 Heavy duty door drives.

Functional Principle

The motor unit includes MCU32-MOTR-40-6-A (1) (for standard door drive), MCU32-MOTR-40-10-A (1) (for heavy duty drive) with encoder module MCU32-ENCO-24-16-A (5) and brake module MCU32-BRAK-40-3-A (3).


The synchronous motor is attached with permanent magnet and external rotor, which drives the toothbelt directly
The encoder module rotates the motor and determines the door position. The brake module limits the door speed on power interruption or when the motor unit is disconnected from the control module.

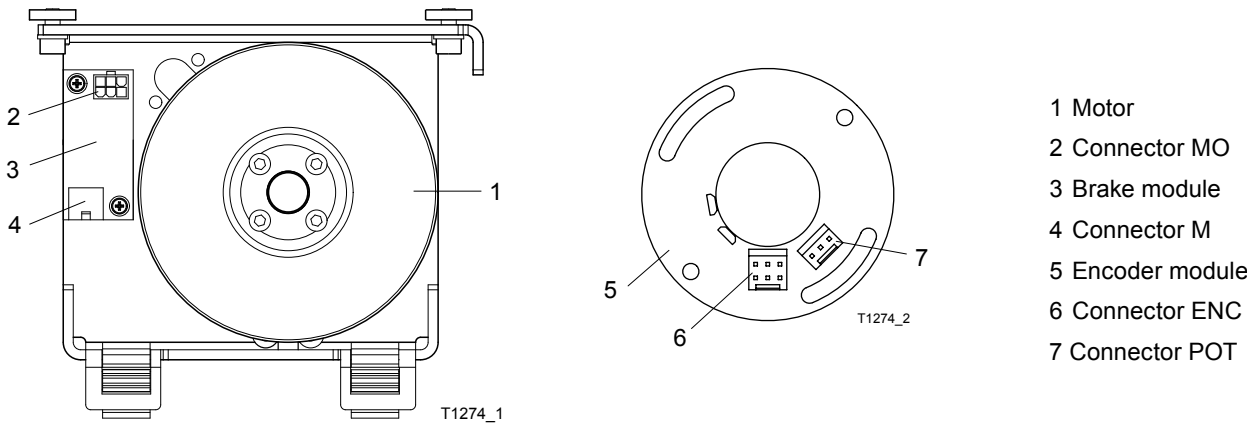

Installation

- Connect the motor unit with the base module using the prefabricated motor and encoder cables as shown

Connection Diagram


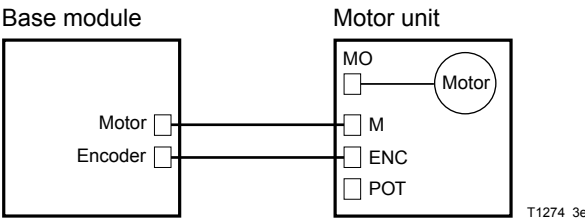


Commissioning



Programming using FCP use T-1272 e

Component Dimensions

2301 Standard Door Drive

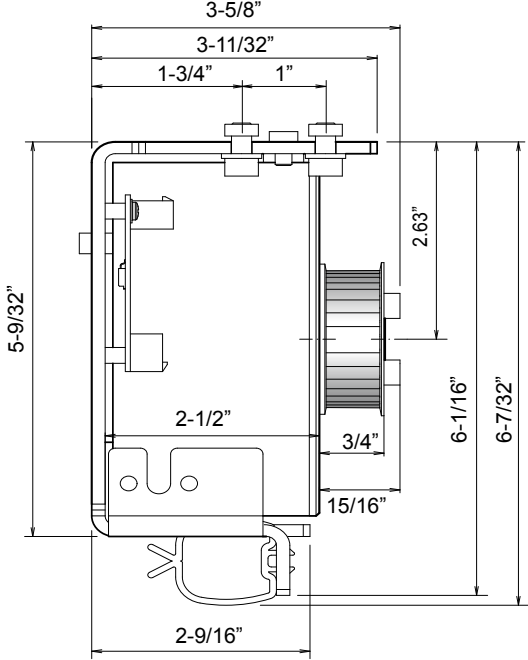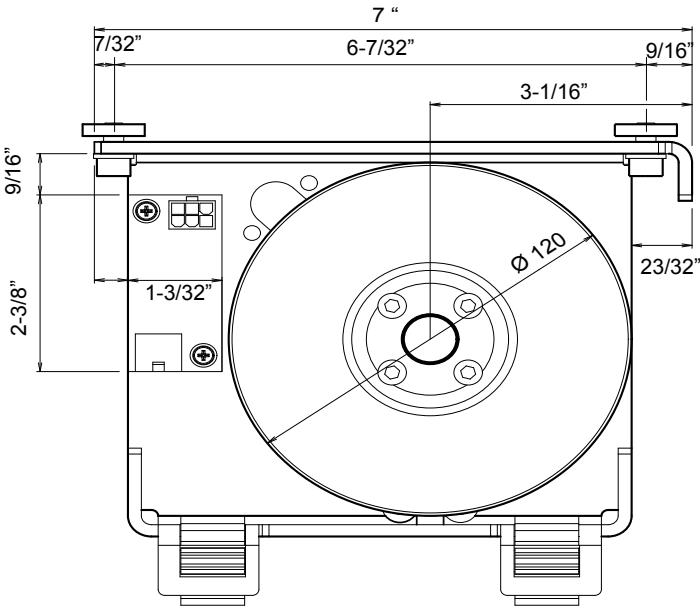

2401 Heavy Duty Door Drive

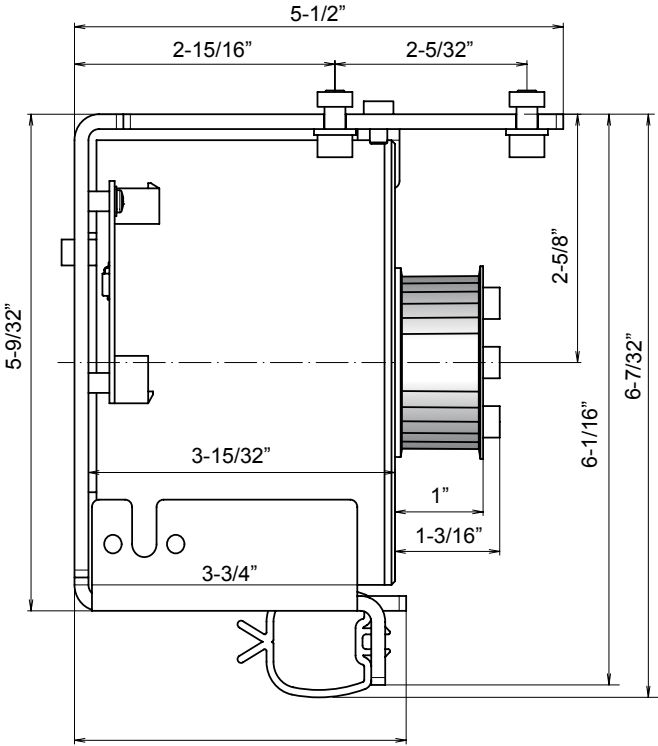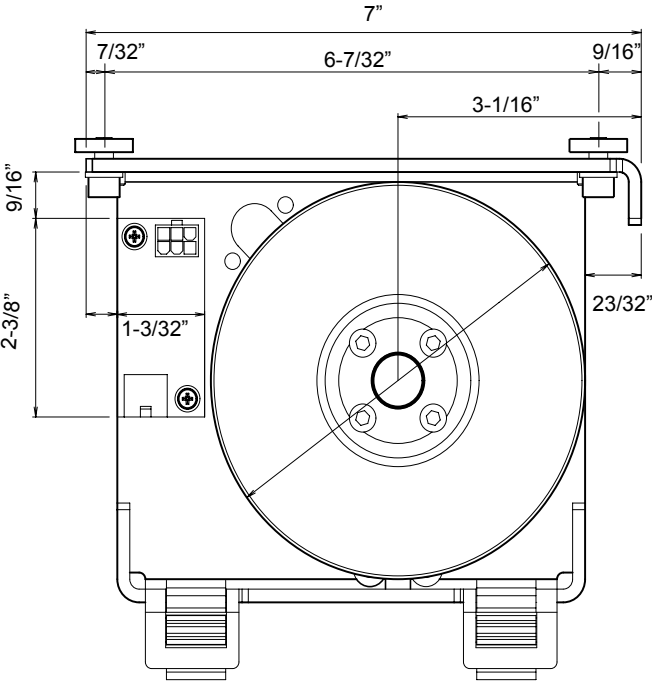

Technical Data

	2301	2401
Rated voltage	17 V Y	22 V Y
Maximum current	10 A (S3)	10 A (S3)
Torque	4.4 Foot Pounds (S3)	7.3 Foot Pounds (S3)
Ambient temperature	−4° F ... +122° F	−4° F ... +122° F
Overtemperature protection	194° F	248° F
Interfaces	MCU32-BASE-40-200-A	MCU32-BASE-40-200-A
Toothbelt	9/16"	25/32"
Toothbelt module	3/16"	3/16"

T-1265 e	Module Documentation Lock Unit MCU32-LOCU-40-7-B	★★★★★ TORMAX AUTOMATIC 12859 Wetmore Road San Antonio, Tx 78247 1-888-685-3707 www.tormaxusa.com
Area of application	iMotion 2301, 2401 Slide Door Drive	
Release	September 2009	
Use	Installation and Maintenance	

Purpose


This lock unit is design for 2301 and 2401 slide door drives.It positively locks each SX or X panel.

Functional Principle


The lock unit includes lock module MCU32-LOCK-40-7-B(1)
The lock unit recieves control commands for locking and unlocking via LIN bus (2) from the base module .

The operating function depends on the programming of the basic control system. For individual functions see programming table

- 1) Lock module MCU32-LOCK-40-7-B
- 2) LIN-Bus
- 3) Code switch

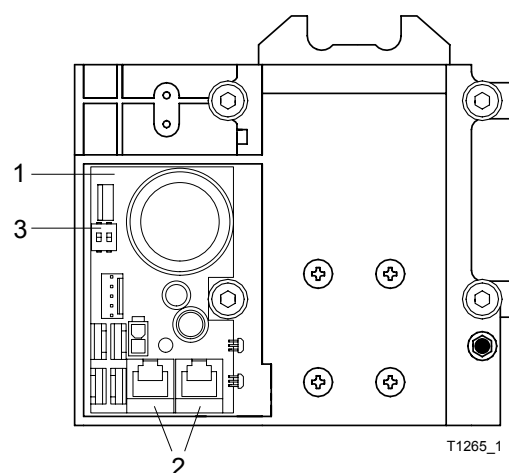

Connection Diagram

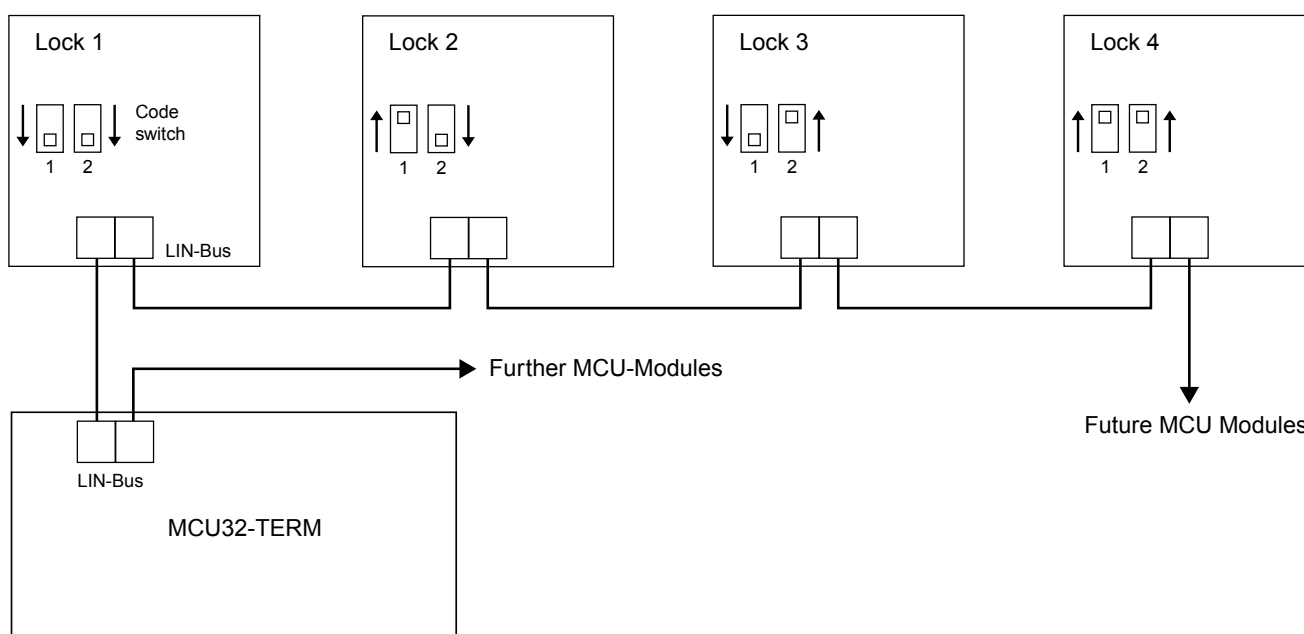


Installation

Mount the lock unit at a suitable position with the 4 screws and groove blocks in the supporting profile. On single leaf units the counter bolts are attached to the supporting profile.

LIN Connection

- Cut to length and assemble the LIN connection cable on both ends with a FCC 6-pole plug .

FCC-plug is polarity sensitive.

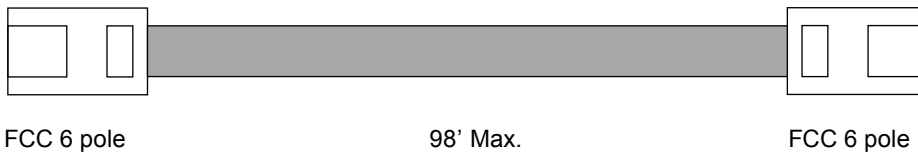


First connect the LIN cable and FCP to the slide door drive then switch the 110 vAC on.

Commissioning

Programming Through FCP See T-1272 e

See programming table for specific lock functions

Component Dimensions

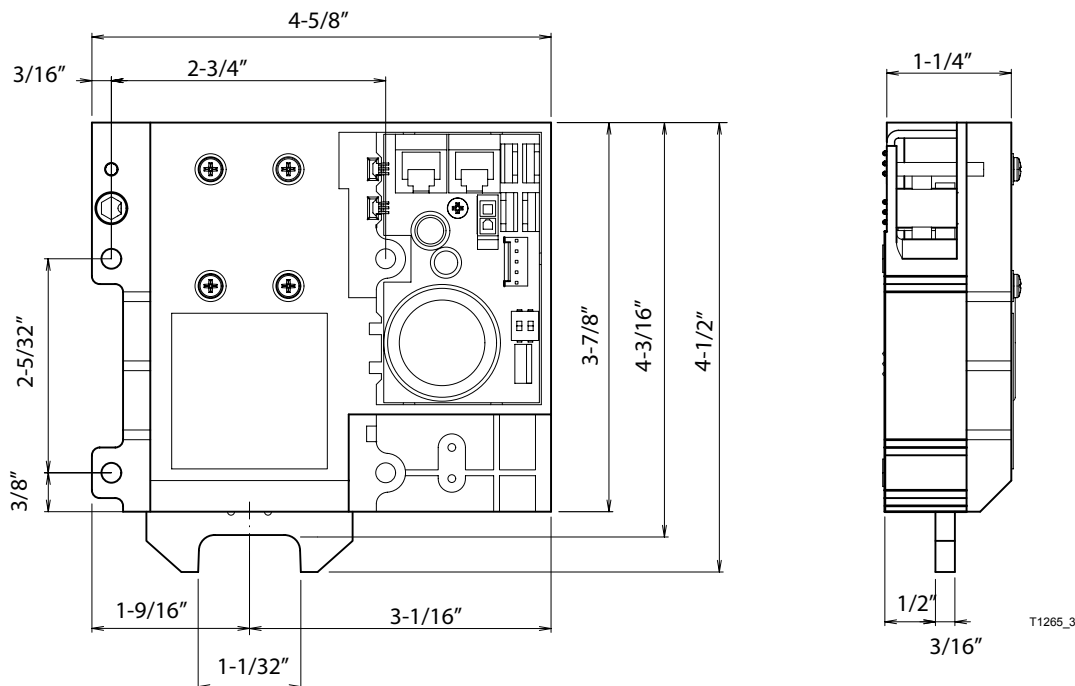

Technical Data

Rated voltage of solenoid	12 V DC
Maximum power of solenoid	40 W
Loading of 24 V sensor power supply	100 mA
LIN Interface	FCC 6-Pol
Length of all LIN cables:	< 98' (Foot)
LIN cable length between modules:	< 30 m with phone ribbon cable 6 x 0,14 mm ² < 100 m with LIN-Bus-Adapter MCU32-LADP-A
Ambient temperature	-4 °F ... +122 ° F
Interface	MCU32-TERM
	Monitoring for lock 01
	Manual disengagement

T-1268 e	Module Documentation Battery Unit MCU32-BATU-24-1-B	★★★★★ TORMAX AUTOMATIC 12859 Wetmore Road San Antonio, Tx 78247 1-888-685-3707 www.tormaxusa.com
Area of application	iMotion 2301 & 2401 Slide Door Drive	
Release	Feb. 2008	
Use	Installation	

Purpose

This battery unit is design to be used on iMotion 2301 or 2401 Slide Door Drives.

The module is used for limited - time operation of the system and/or for accomplishment of a final motion into a determined position.


Functional Principle

The battery unit includes the batteries MCU32-ACCU-24-1-A and the battery module MCU32-BATT-24-1-B (1).

The batteries store the energy required to continue system operation on power failure. The battery module contains a charging circuit that charges the batteries in the presence of mains power and/or holds them in the charged state. In order to avoid total discharge, the battery can be switched off with a switch.


The operational function depends on the programming of the basic control system. See programming table for programming options.

The wake-up function allows renewed switching on with subsequent door opening after the battery has been disconnected. The function depends on the current charge of the accumulators and necessitates a connected key switch (4).

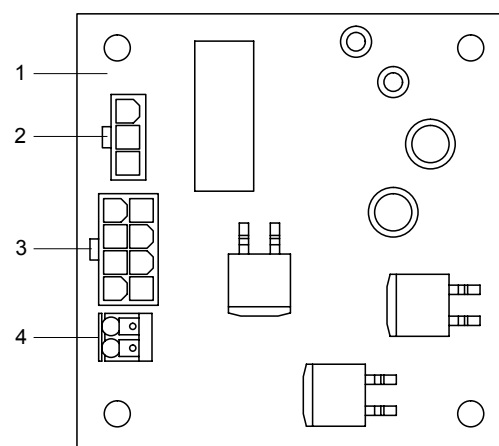

- 1 Battery module
- 2 Connector BAT
- 3 Connector A
- 4 Terminal key switch

Connection Diagram

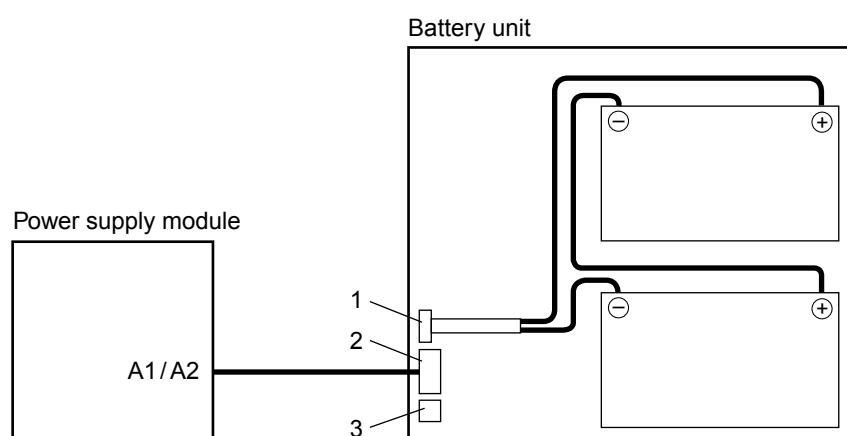

Installation

- Mount the battery unit at the suitable position with screws and groove blocks
- Connect the battery unit with the power supply module as shown in the connection diagram




When connecting the batteries make sure that the polarities are not interchanged and the contacts are not short circuited. A sudden discharge may cause an explosion of the batteries. The constituents are highly poisonous.

Commissioning

The battery module is detected automatically during auto configuration.

See Commissioning of the Entire System T-1272 e

Component Dimensions

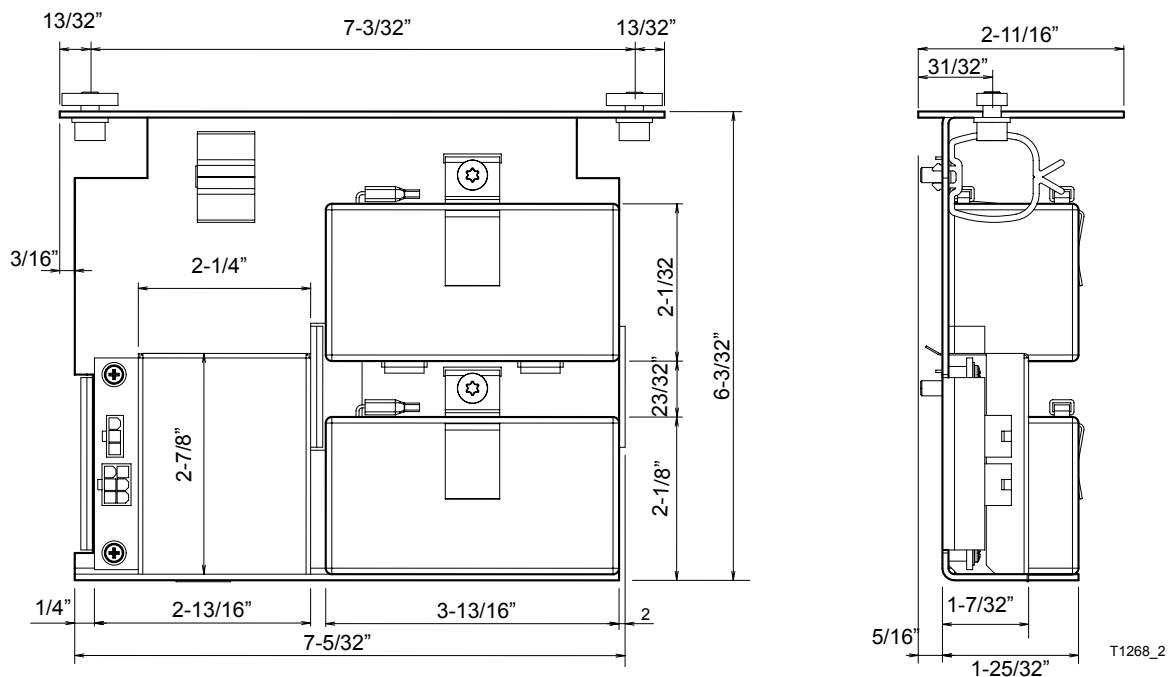


Technical Data

Rated voltage	24 VDC
Maximum power	120 W
Batteries	2 × 12 V / 1.2 Ah (52 × 97 × 43 mm)
Ambient temperature	32° F... +104° F
Interfaces	MCU32-PSUP-40-18-C MCU32-PSUP-40-36-A

T-1269 e	Module Documentation Power Supply Module	★★★★★ TORMAX AUTOMATIC 12859 Wetmore Road San Antonio, Tx 78247 1-888-685-3707 www.tormaxusa.com
Area of application	iMotion 2301 & 2401 Door Drives	
Release	April 2008	
Use	Installation and Maintenance	


Purpose

To provide intermediate circuit voltage and the 24 V sensor voltage from the transformer or the battery unit

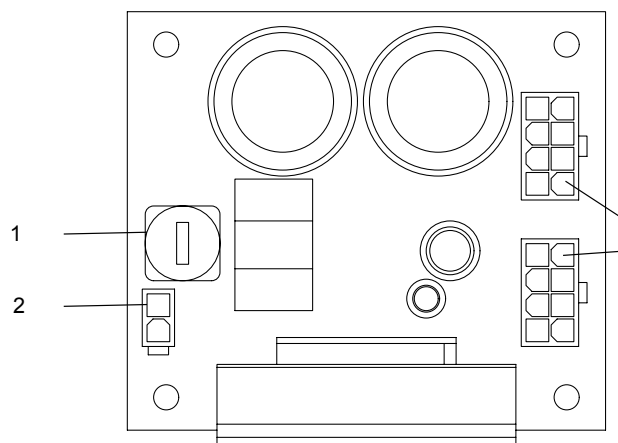

2301 Door Drive
Power Supply Module : MCU32-PSUP-40-18-C

- 1 Fuse 5A T (25 VAC)
- 2 Connector AC for connection to transformer
- 3 Connector A1 for connection to base module
MCU32-BASE-40-200-A or battery module
MCU32-BATT-24-1-B

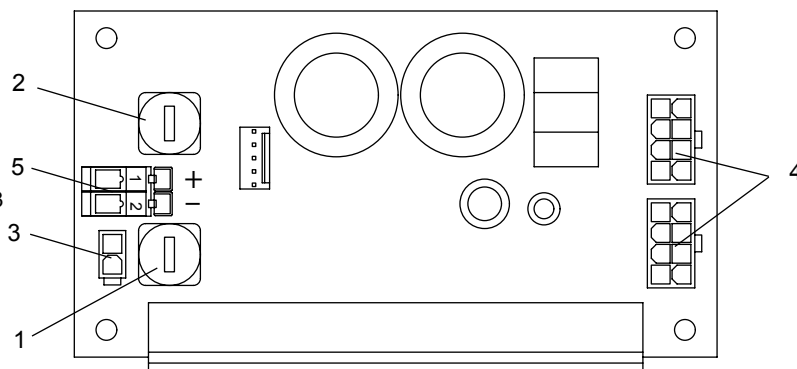

2401 Door Drive
Power Supply Module : MCU32-PSUP-40-36-A

- 1 Fuse 8-A slow blow (25 VAC transformer)
- 2 Fuse 5-A slow blow (24 ... 42 V ext. DC source)
- 3 Connector AC for connection to transformer
- 4 Connector A1 for connection to base module
MCU32-BASE-40-200-A or battery module
MCU32-BATT-24-1-B
- 5 DC terminal for connection of external DC source


Installation



The module must be protected against electrostatic discharge (ESD) when touching it.


- Fasten the printed circuit board in the power-free state at the designated points.
- Switch on the power supply only after all surrounding MCU32 modules are connected.

Module Connections

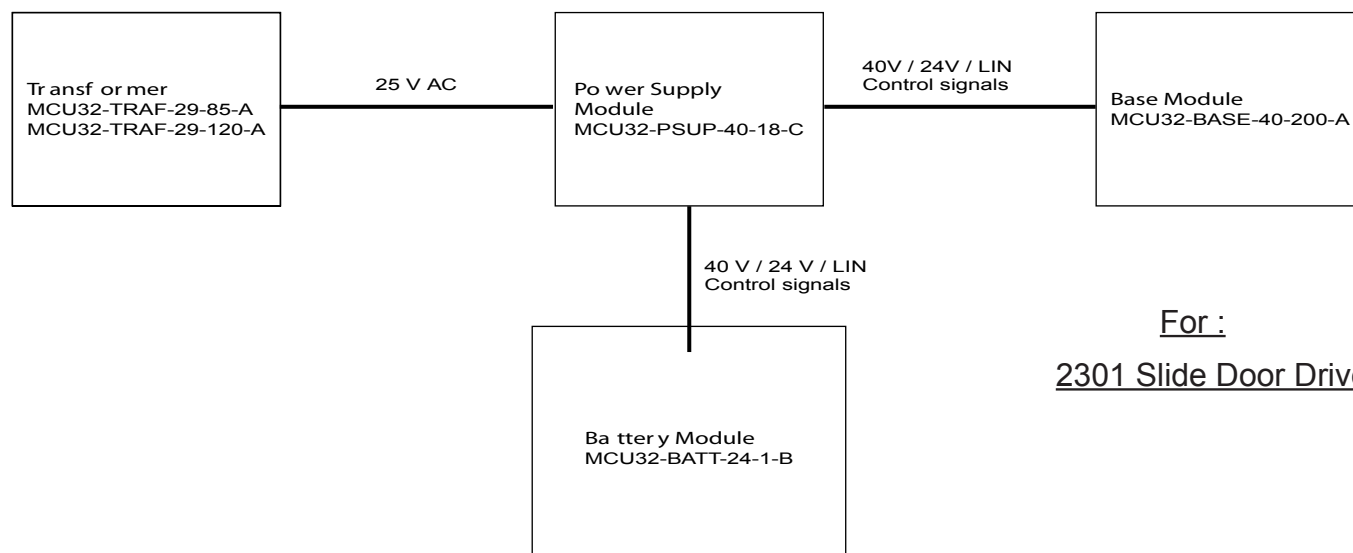

For :
2301 Slide Door Drive

Module Connections

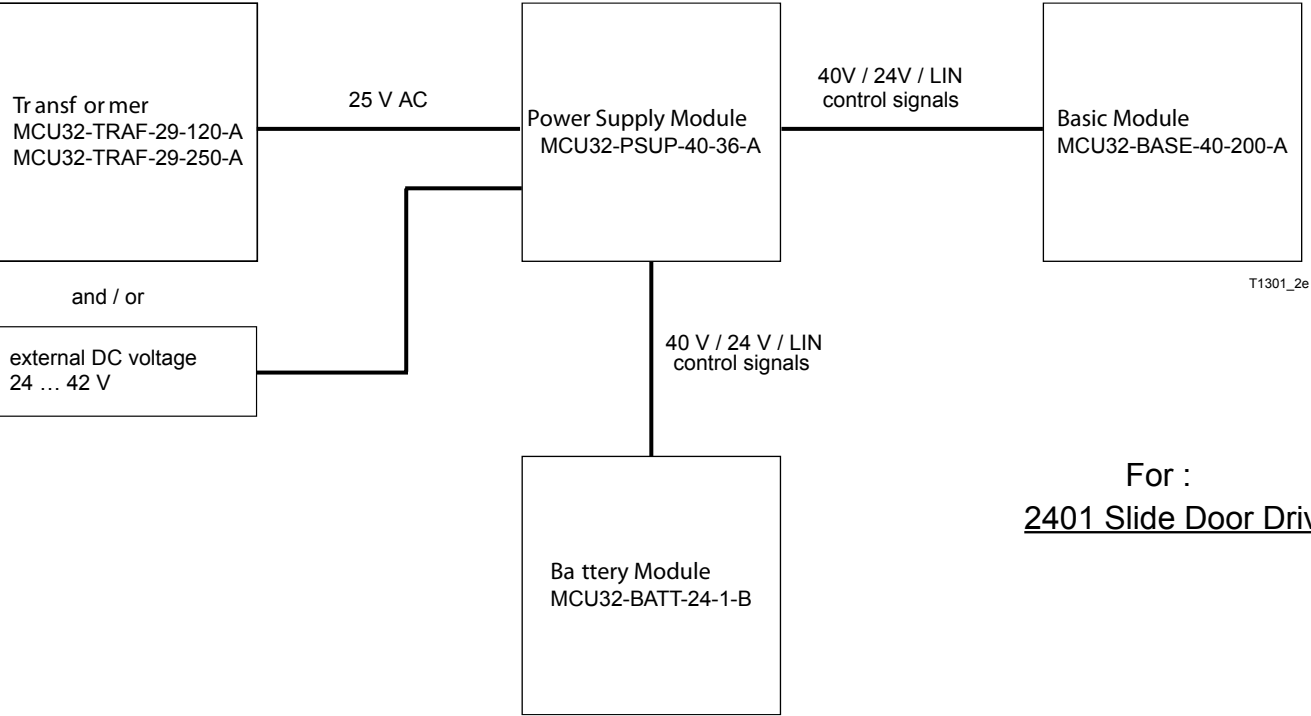

Technical Data

	2301	2401
Rated voltage (input, from transformer)	25 V AC	25 V AC
Nominal power (input, from transformer)	85 VA	250 VA
Rated Voltage (input, from ext.DC voltage)	24 V DC42 V DC	24 V DC42 V DC
Nominal Power (input, from ext.DC coltage)	-	5 A
Rated voltage (input, from battery module)	-	24 V DC
Maximum power (input, from battery module)	120 W	120 W
Maximum current 24 V sensor power supply (output)	0.75 A	1.5 A
Ambient temperature	-4°F to +122°F	-4°F to +122°F
Dimensions length x width x height (mm)	3-1/8"x 2-3/4"x 1-11/16"	5-1/8"x2-3/4"x1-11/16"
Interfaces	Transformer MCU32-TRAF-29-85- A Battery module MCU32-BATT-24-1-B Base module MCU32-BASE-40-200-A	Transformer MCU32-TRAF-29-250-A Battery module MCU32-BATT-24-1-B Base module MCU32-BASE-40-200-A

T-1261 e	Module Documentation Base Module MCU32-BASE-40-200-A	★★★★★ TORMAX AUTOMATIC 12859 Wetmore Road San Antonio, Tx 78247 1-888-685-3707 www.tormaxusa.com
Area of application	2301 & 2401 Slide Door Drive	
Release	August 2008	
Use	Installation and maintenance	

Purpose


To manage the function of all iMotion 2301,2401 sliding door drives.

Function

The base module is the central functional control system of the MCU32 module family. The module contains the processor system including a non-volatile (i.e. voltage failure safe) memory for the adjusted values, a 3-phase converter for the motor and the drivers for the interfaces OUT1-2, PWM, as well as LIN and CAN.

The control system is programmed with the FCP.

Base module MCU32-BASE-40-200-A

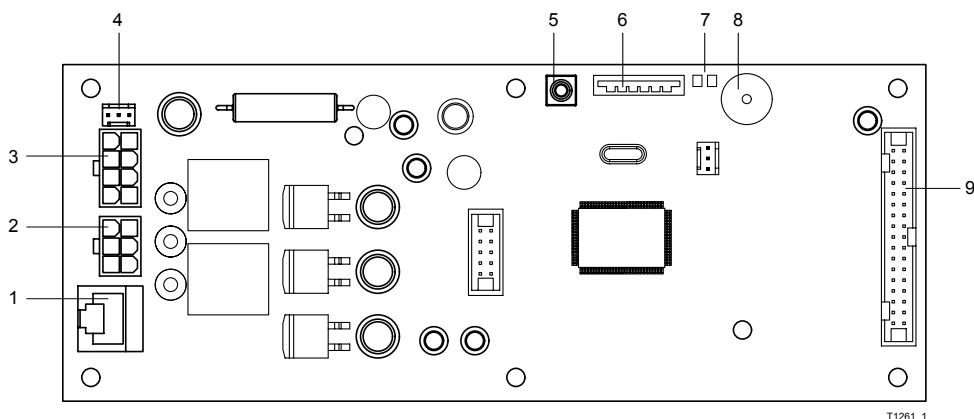

- | | |
|---|---|
| 1 Connection for encoder MCU32-ENCO-24-16-A | 6 Slot for configuration card MCU32-CONF-... (*) |
| 2 Connection for motor MCU32-MOTR-40-... (*) | 7 Display for power supply 24 V and 5 V |
| 3 Connection for power supply module MCU32-PSUP-40-... (*) | 8 Beeper |
| 4 Connection for potentiometer, closed position indicator | 9 Connection for terminal module MCU32-TERM-... (*) |
| 5 Push-button for starting a download or newer SW, Sersoft required | |

(*) Different versions


Installation



The module must be protected against electrostatic discharge (ESD) when touching it.

- Fasten the printed circuit board at the predetermined points in the power-free condition.
- Switch on the power supply only after all surrounding MCU32 modules are connected.

Module Connections

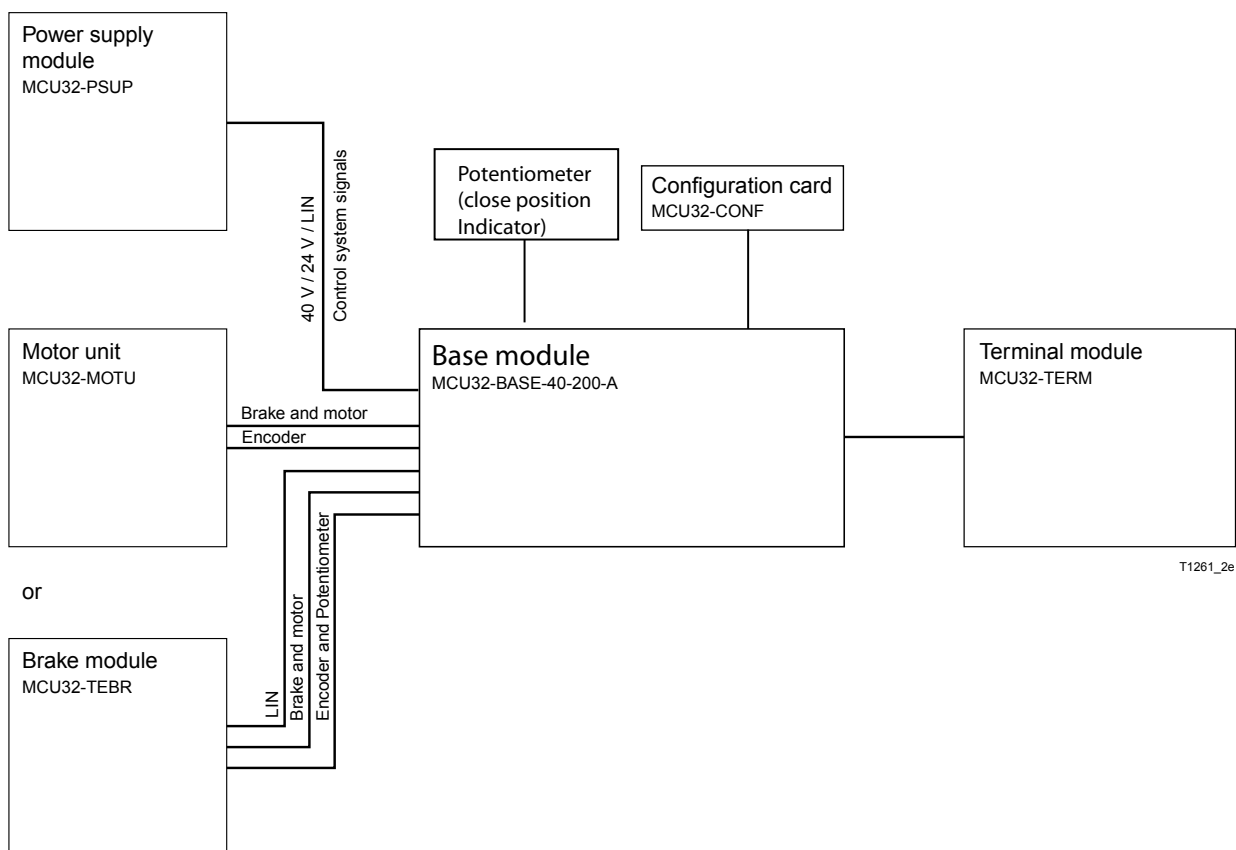

Commissioning

Program using FCP see T-1248

Technical Data



Processor	32 bits, 30 MHz
System monitoring	Complies with DIN 18650 requirements
Ambient temperature	−4°F...+167°F
Overheating protection	for power supply 40 V
Dimensions	7.873 x 3.031 inch
Module interfaces:	MCU32-PSUP MCU32-MOTU MCU32-TERM MCU32-CONF MCU32-TEBR

T-1264 e	Module Documentation Function Control Panel (FCP) MCU32-USIN-7-A	★★★★★ TORMAX AUTOMATIC 12859 Wetmore Road San Antonio, TX 78247 1-888-685-3707 www.tormaxusa.com
Area of application	iMotion 1301, 1401 Operators and 2301, 2401 Drives	
Release	October 2008	
Use	Programming and mode selection	


Purpose

Programming and operating the TORMAX iMotion universal processor.


Functional control panel (FCP) MCU32-USIN-7-A

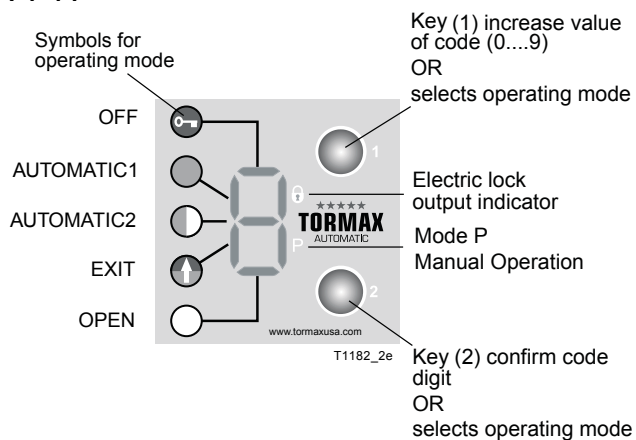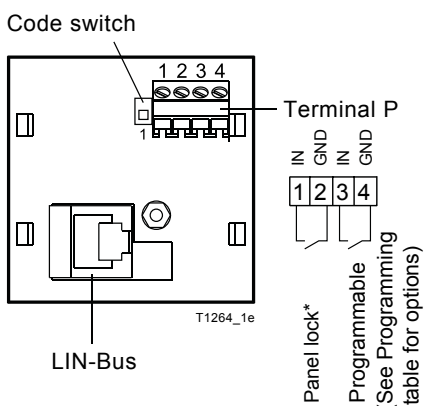


Connection Diagram

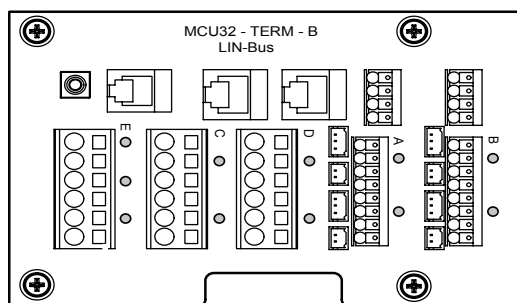


Connection Option 1

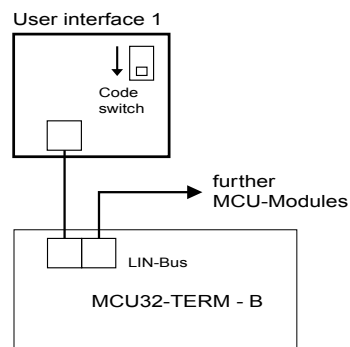

Connection Option 2

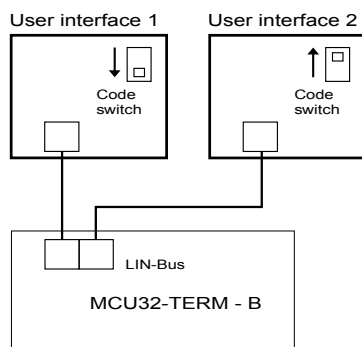


Connection Option 3

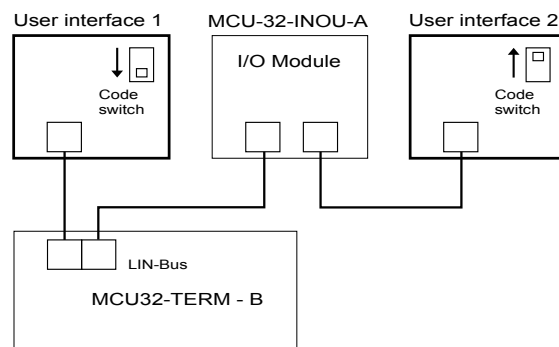

- Switch mains 115 V AC ON after the functional control panel(FCP) is connected.

LIN Connection

- Cut to length and assemble the LIN connection cable on both ends with a FCC 6-pole plug
- FCC plug is polarity sensitive

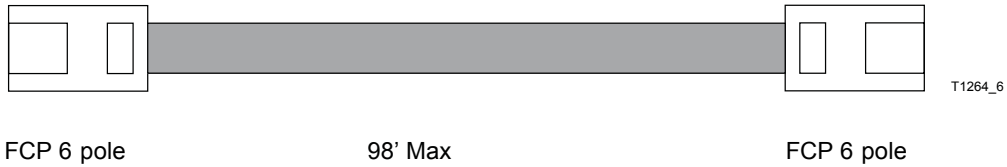

- First connect the LIN cable and FCP to the 2301 or 2401 Door Drive then switch the 115 VAC on.

Technical Data


Inputs:	2 × Pull up in: 24 VDC / 3 mA, function programmable
Terminal cross section:	0.5 mm ² (strand or wire)
Interface	LIN, FCC 6-Pol
Ambient Temperature:	−4°F...+122°F
Dimensions:	1.7716 inch x1.7716 inch
LIN cable length:	98' Max

T-1360 e	Module Documentation Input /Output Module MCU32-INOU-A	<div>★★★★★</div> <div>TORMAX</div> <div>AUTOMATIC</div> <div>12859 Wetmore Road</div> <div>San Antonio, Tx78247</div> <div>1-888-685-3707</div> <div>www.tormaxusa.com</div>
Area of application	iMotion 1301, 1401, 2301, 2401	
Release	January 2010	
Use	Input/Output terminal board	

Purpose

Additional inputs and outputs for automatic door drives with iMotion. Not suitable for time-critical applications such as security or safety functions.



Function

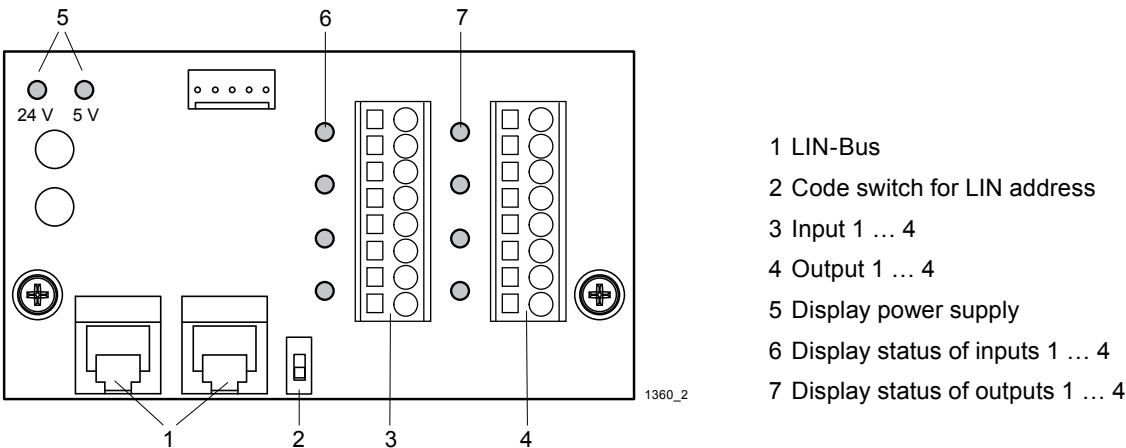

The IO module receives its control commands from the base module via the LIN-Bus (1). The two LIN plugs are identical. Each module must have a unique LIN address which can be set with the code switch (2). The function of the inputs and outputs depends on the programming of the basic control system. See the MCU programming table in the Extranet for the functions.

A self-resetting thermal cut-out protects the control system's 24 V power supply against continuous overload. The thermal cut-out resets itself immediately after the overload is removed.

Connection Diagram

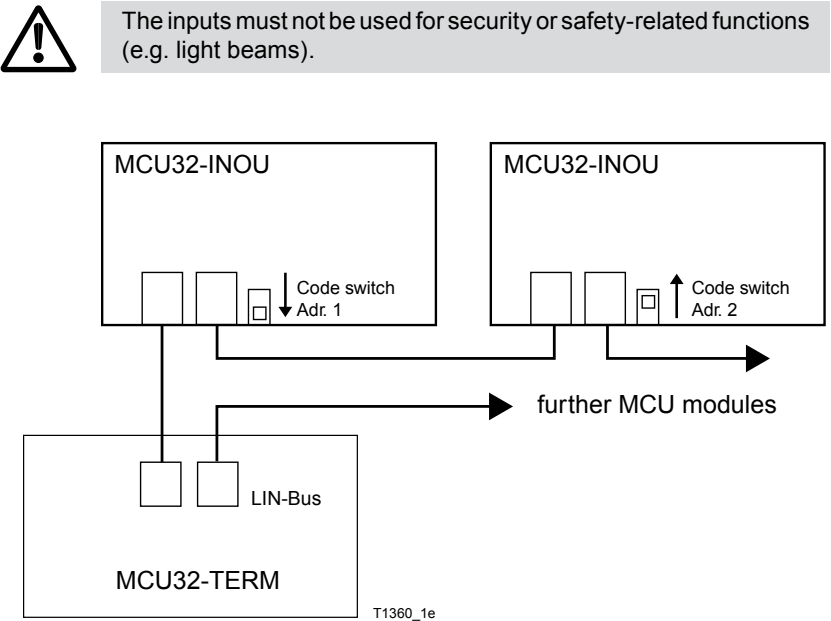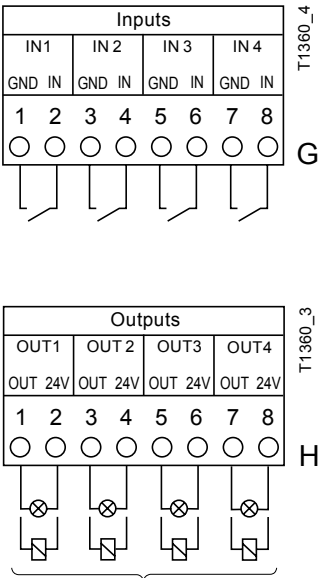

The 24 VDC power supply on this module must not be used as the power supply to sensors.


Installation

The module is installed on the module carrier.

LIN Connection

- Cut to length and assemble the LIN connection cable on both ends with a FCC 6-pole plug (article see TORMAX price list).

The polarity of the FCC-plug is not of importance.

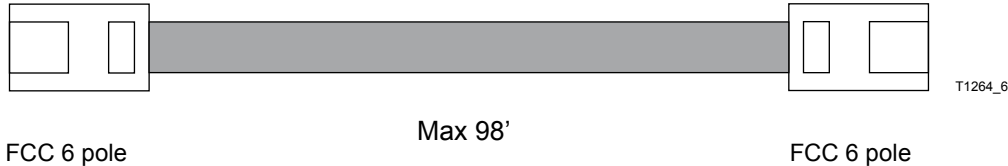

For alternative cable connections via adapter with terminal connection see module documentation LIN-Bus adapter T-1322.

Commissioning

The modules must be coded according to the connection diagram.

The modules are detected automatically when initiating the auto configuration.

See programming table on TORMAX Extranet for input and output functions (021). No functions are programmed as standard.

Technical Data

Inputs:	4 x Pull up in: 24 VDC / 5 mA, function programmable
Outputs:	Transistor out: 24 VDC / Continuous current max. 25 mA, function programmable
Input/output reaction time:	with 1 module MCU-INOUE-A < 50 ms with 2 modules MCU-INOUE-A < 100 ms
Power supply 24 V:	Total continuous load < 100 mA
Terminal cross section:	0.14 ... 1.5 mm ² (recommended conductor cross section: 0.5 mm ²)
LIN Interface	FCC 6-Pol
Length of all LIN cables:	< 100 m
LIN cable length between modules:	98' Max
Ambient temperature:	−4° F ... +122° F
Dimensions:	2 5/32" - 3 11/16"
Module interface:	MCU32-TERM



Your First Choice for Automatic Doors.

TORMAX Sliding Doors

TORMAX Swing Doors

Sales, Installation and Service.
Automatic and Manual Doors.

TormaxAutomatic
12859 Wetmore Road
SanAntonio, TX 78247
888-685-3707
www.tormaxusa.com

TORMAX is a division and a registered trademark of Landet Motoren AG